


Base and Motor Assembly – Model WB-37 ONLY

Parts list on page 27.

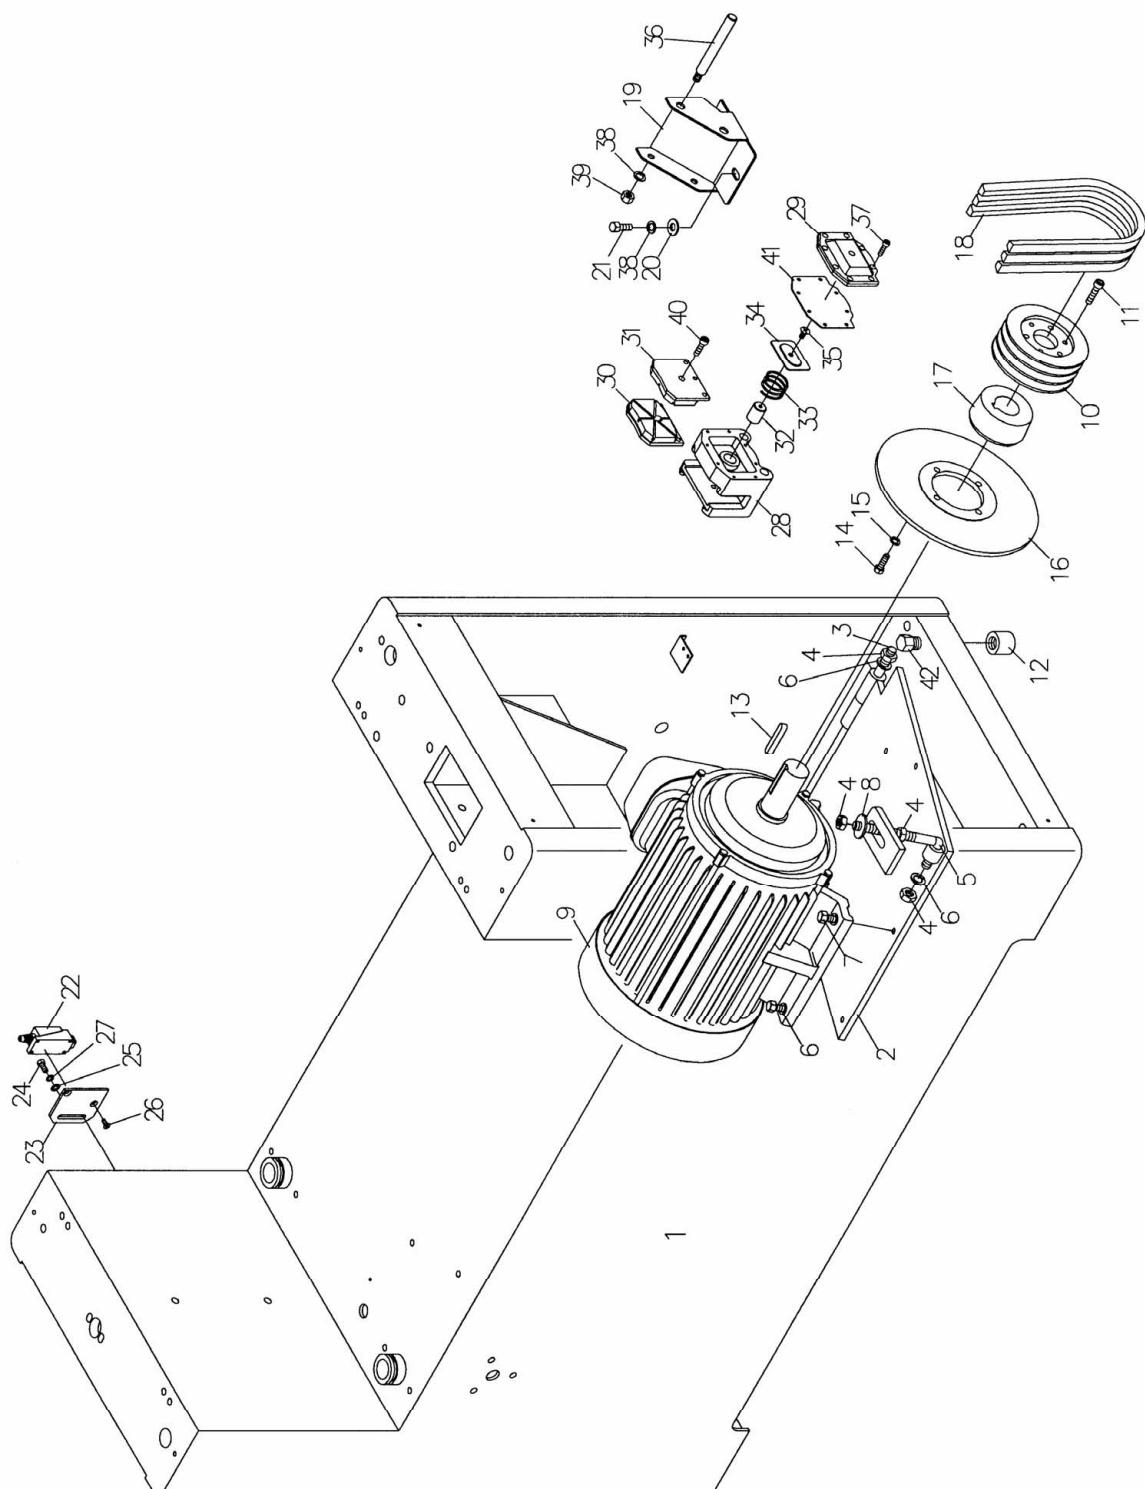


Parts List: Base and Motor Assembly – Model WB-37

Exploded view on page 26.

Index No.	Part No.	Description	Size	Qty
1.....	WB37-201.....	Machine Base.....		1
2.....	WB37-202.....	Motor Plate.....		1
3.....	WB37-203.....	Rod		1
4.....	WB25-149.....	Hex Nut.....	1/2-12.....	4
5.....	WB37-205.....	Motor Adjusting Screw.....		1
6.....	TS-0720111.....	Lock Washer	1/2.....	6
7.....	WB25-701.....	Hex Cap Screw	1/2-12x1-1/2	4
8.....	TS-0680061.....	Flat Washer.....	1/2.....	2
9.....	WB37-209.....	Motor.....	20HP, 230/460V, 3Ph.	1
10.....	WB37-210.....	Motor Pulley		1
11.....	TS-0208071.....	Socket Head Cap Screw.....	5/16-18x1-1/4	3
12.....	WB25-212.....	Leveling Nut		4
13.....	WB37-213.....	Key.....	8x12x105	1
14.....	TS-0051051.....	Hex Cap Screw	5/16-18x1	4
15.....	TS-0720081.....	Lock Washer	5/16.....	4
16.....	WB25-216.....	Disc Brake.....		1
17.....	WB37-217.....	Pulley Bushing.....		1
18.....	VB-B72.....	V-Belt	B-72	3
19.....	WB37-219.....	Brake Base.....		1
20.....	TS-0680041.....	Flat Washer.....	3/8.....	2
21.....	TS-0060031.....	Hex Cap Screw	3/8-16x3/4	2
22.....	6294280.....	Limit Switch		2
23.....	6294281.....	Limit Switch Plate		2
24.....	TS-0050021.....	Hex Cap Screw	1/4-20x5/8	2
25.....	TS-0680021.....	Flat Washer.....	1/4.....	2
26.....	WB25-131.....	Flat Head Screw.....	M5x8	4
27.....	TS-0720071.....	Lock Washer	1/4.....	2
28.....	6294284.....	Brake Housing		1
29.....	6294285.....	Front Cover		1
30.....	6294286.....	Brake Lining		1
31.....	6294661.....	Brake Lining		1
32.....	6294287.....	Bushing		1
33.....	6294288.....	Spring		1
34.....	6294289.....	Inner Plate		1
35.....	TS-081F031.....	Flat Head Screw	1/4-20x1/2	1
36.....	6294291.....	Pin		2
37.....	TS-0206041.....	Socket Head Cap Screw.....	10-24x3/4	8
38.....	TS-0720091.....	Lock Washer	3/8.....	3
39.....	TS-0561031.....	Hex Nut	3/8-16	2
40.....	TS-0207031.....	Socket Head Cap Screw	1/4-20x5/8	2
41.....	6294296.....	Gasket		1
42.....	WB25-244.....	Leveling Screw		4

Upper Cabinet Assembly – Models WB-37, WB-43

Parts list on page 33.

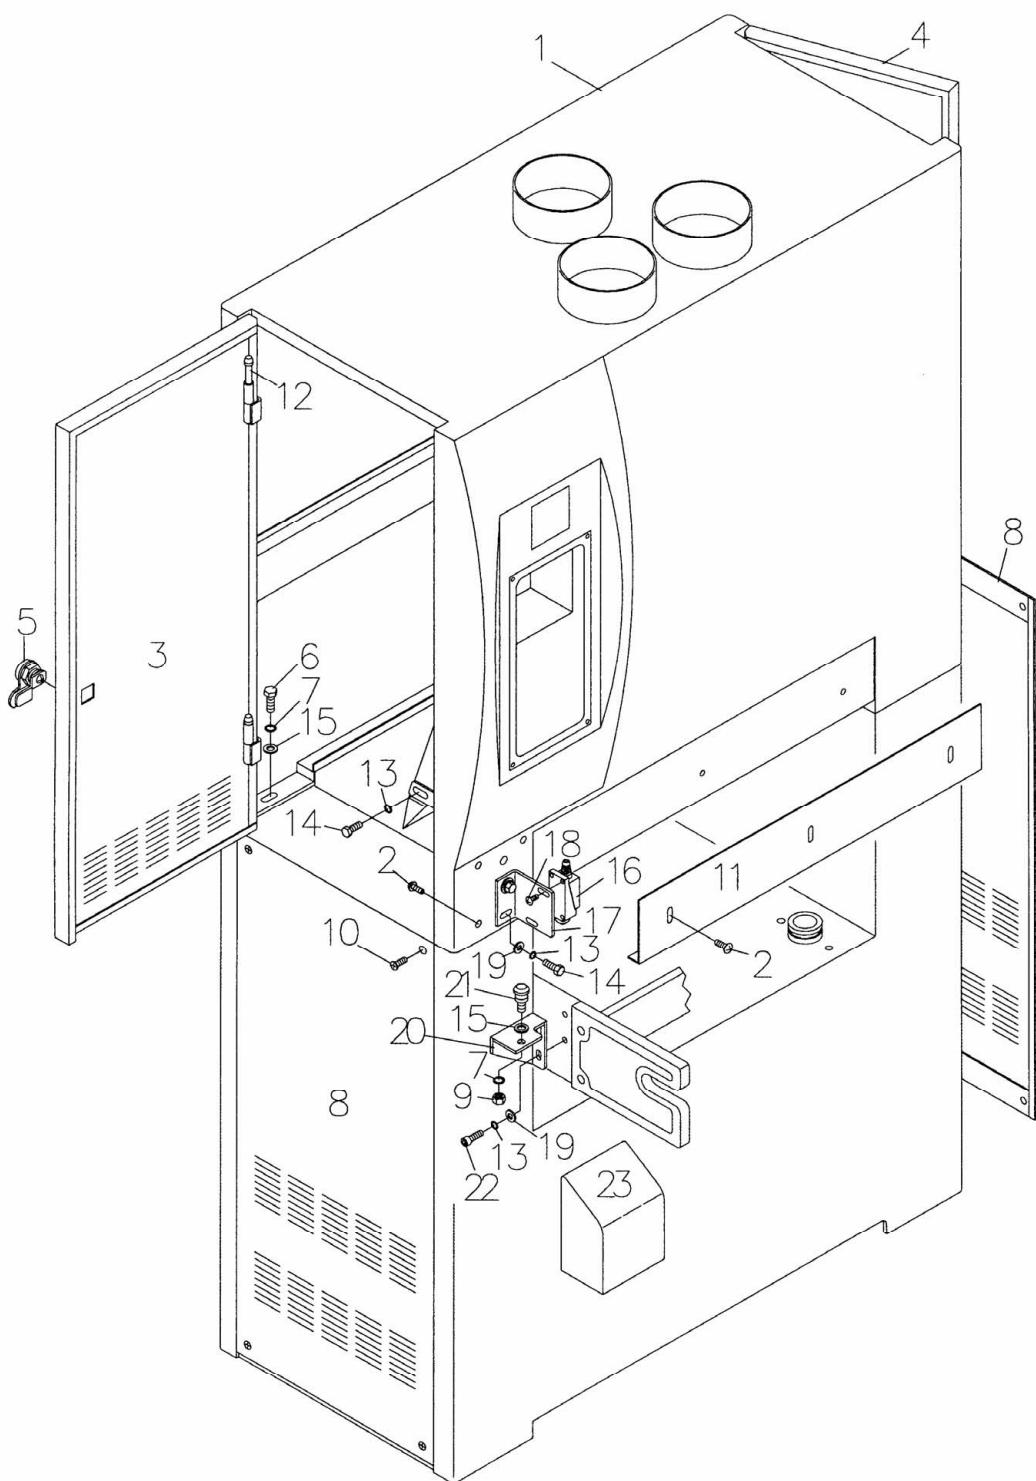

Parts List: Upper Cabinet Assembly – Model WB-37

Exploded view on page 32.

Index No.	Part No.	Description	Size	Qty
1.....	WB37-301.....	Upper Cabinet		1
2.....	TS-1534032.....	Pan Head Screw	M6x10	8
3.....	WB25-303.....	Upper Left Door		1
4.....	WB25-304.....	Upper Right Door		1
5.....	6294509.....	Door Lock		2
6.....	TS-0208041.....	Socket Head Cap Screw	5/16-18x3/4	4
7.....	TS-0720081.....	Lock Washer	5/16	5
8.....	WB25-308.....	Lower Door		2
9.....	TS-0561021.....	Hex Nut	5/16-18	1
10.....	TS-081F031.....	Flat Head Screw	1/4-20x1/2	8
11.....	WB37-311.....	Emergency Plate		1
12.....	WB25-312.....	Door Hinge Pin		4
13.....	TS-2361061.....	Lock Washer	M6	6
14.....	TS-1482021.....	Hex Cap Screw	M6x12	4
15.....	TS-0680031.....	Flat Washer	5/16	5
16.....	6294280.....	Limit Switch		1
17.....	WB25-317.....	Limit Switch Holder		1
18.....	TS-1533032.....	Pan Head Screw	M5x10	1
19.....	TS-0680021.....	Flat Washer	1/4	2
20.....	WB25-320.....	Fixed Bracket		1
21.....	WB25-321.....	Thicknesser Post		1
22.....	TS-0207031.....	Socket Head Cap Screw	1/4-20x5/8	2
23.....	WB25-323.....	Cover		1


Parts List: Upper Cabinet Assembly – Model WB-43

Exploded view on page 32.

Index No.	Part No.	Description	Size	Qty
1.....	WB43-301.....	Upper Cabinet		1
2.....	TS-1534032.....	Pan Head Screw	M6x10	8
3.....	WB43-303.....	Upper Left Door		1
4.....	WB43-304.....	Upper Right Door		1
5.....	6294509.....	Door Lock		2
6.....	TS-0208041.....	Socket Head Cap Screw	5/16-18x3/4	4
7.....	TS-0720081.....	Lock Washer	5/16	5
8.....	WB43-308.....	Lower Door		2
9.....	TS-0561021.....	Hex Nut	5/16-18	1
10.....	TS-081F031.....	Flat Head Screw	1/4-20x1/2	8
11.....	WB43-311.....	Emergency Plate		1
12.....	WB25-312.....	Door Hinge Pin		4
13.....	TS-2361061.....	Lock Washer	M6	6
14.....	TS-1482021.....	Hex Cap Screw	M6x12	4
15.....	TS-0680031.....	Flat Washer	5/16	5
16.....	6294280.....	Limit Switch		1
17.....	WB25-317.....	Limit Switch Holder		1
18.....	TS-1533032.....	Pan Head Screw	M5x10	1
19.....	TS-0680021.....	Flat Washer	1/4	2
20.....	WB25-320.....	Fixed Bracket		1
21.....	WB25-321.....	Thicknesser Post		1
22.....	TS-0207031.....	Hex Socket Cap Screw	1/4-20x5/8	2
23.....	WB25-323.....	Cover		1

Table Raising Assembly – Models WB-25, WB-37, WB-43

Parts list on page 35 (WB-25), page 36 (WB-37) and page 37 (WB-43).

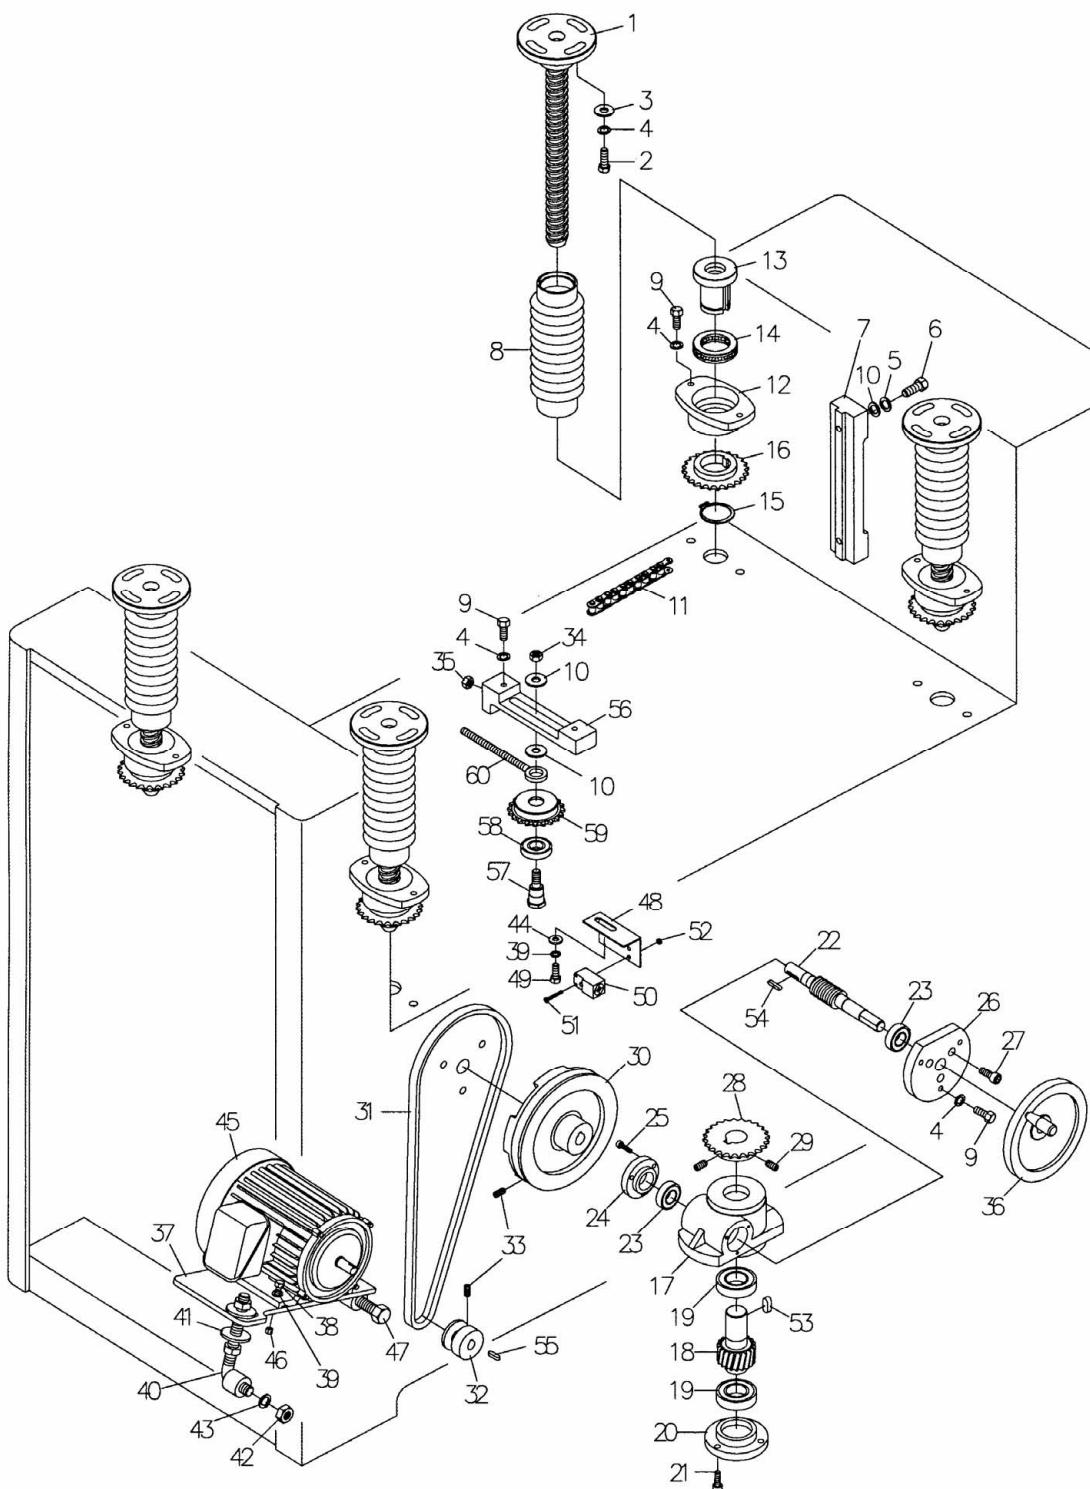

56	6294340	Sprocket Wheel Adjustment Piece	1
57	6294341	Sprocket Wheel Shaft	1
58	BB-6003ZZ	Bearing	6003ZZ
59	6294343	Adjustment Sprocket Wheel	1
60	6294344	Sprocket Wheel Adjustment Rod	1

Parts List: Table Raising Assembly – Model WB-37

Exploded view on page 34.

Index No.	Part No.	Description	Size	Qty
1	6294297	Elevation Screw		4
2	TS-0051051	Hex Cap Screw	5/16-18x1	8
3	TS-0680031	Flat Washer	5/16	8
4	TS-0720081	Lock Washer	5/16	20
5	TS-0720091	Lock Washer	3/8	4
6	TS-0060051	Hex Cap Screw	3/8-16x1	4
7	6294302	Elevation Slide		2
8	6294303	Dust Guard Bellow		4
9	TS-0081031	Hex Cap Screw	5/16-18×3/4	12
10	TS-0680041	Flat Washer	3/8	6
11	6294305	Chain		1
12	6294306	Nut Housing		4
13	6294307	Nut		4
14	6294308	Thrust Bearing		4
15	6294309	C-Circlip		4
16	6294310	Sprocket Wheel		4
17	6294311	Elevation Gearbox		1
18	6294312	Worm Gear		1
19	BB-6005Z	Ball Bearing	6005Z	2
20	6294314	Bearing Cap		1
21	TS-0207041	Socket Head Cap Screw	1/4-20x3/4	3
22	6294316	Worm Gear		1
23	BB-6002Z	Ball Bearing	6002Z	2
24	6294318	Bearing Cap		1
25	TS-0206031	Socket Head Cap Screw	10-24x5/8	3
26	6294320	Bearing Cap		1
27	TS-0207031	Socket Head Cap Screw	1/4-20x5/8	3
28	6294322	Sprocket Wheel		1
29	TS-0270051	Set Screw	5/16-18x1/2	2
30	6294324	Pulley		1
31	VB-A37	V-Belt	A-37	1
32	6294326	Motor Pulley		1
33	TS-0267051	Set Screw	1/4-20x1/2	3
34	TS-0561031	Hex Nut	3/8-16	1
35	TS-0561021	Hex Nut	5/16-18	1
36	6294330	Hand Wheel		1
37	6294331	Motor Base		1
38	TS-0050051	Hex Cap Screw	1/4-20x1	4
39	TS-0720071	Lock Washer	1/4	5
40	6294333	Motor Base Adjustment Rod		1
41	TS-0680061	Flat Washer	1/2	2
42	WB25-149	Hex Nut	1/2-12	3
43	TS-0720111	Lock Washer	1/2	2
44	TS-0680021	Flat Washer	1/4	1
45	6294334	Motor	1/4HP, 230/460V, 3Ph	1
46	TS-0561011	Hex Nut	1/4-20	4
47	WB25-447	Hex Head Screw	1/2-12x4	1

48	WB25-448	Switch Plate		1
49	TS-0050011	Hex Cap Screw	1/4-20x1/2	1
50	WB25-450	Switch		1
51	TS-2283302	Screw	M3x30	2
52	TS-1540011	Hex Nut	M3	2
53	6294337	Key	5/16x5/16x3/4	1
54	6294338	Key	4x4x20	1
55	6294339	Key	4x4x16	1
56	6294340	Sprocket Wheel Adjustment Piece		1
57	6294341	Sprocket Wheel Shaft		1
58	BB-6003ZZ	Bearing	6003ZZ	1
59	6294343	Adjustment Sprocket Wheel		1
60	6294344	Sprocket Wheel Adjustment Rod		1


Parts List: Table Raising Assembly – Model WB-43

Exploded view on page 34.

Index No.	Part No.	Description	Size	Qty
1	6294297	Elevation Screw		4
2	TS-0051051	Hex Cap Screw	5/16-18x1	8
3	TS-0680031	Flat Washer	5/16	8
4	TS-0720081	Lock Washer	5/16	20
5	TS-0720091	Lock Washer	3/8	4
6	TS-0060051	Hex Cap Screw	3/8-16x1	4
7	6294302	Elevation Slide		2
8	6294303	Dust Guard Bellow		4
9	TS-0081031	Hex Cap Screw	5/16-18x3/4	12
10	TS-0680041	Flat Washer	3/8	6
11	6294305	Chain		1
12	6294306	Nut Housing		4
13	6294307	Nut		4
14	6294308	Thrust Bearing		4
15	6294309	C-Circlip		4
16	6294310	Sprocket Wheel		4
17	6294311	Elevation Gearbox		1
18	6294312	Worm Gear		1
19	BB-6005Z	Ball Bearing	6005Z	2
20	6294314	Bearing Cap		1
21	TS-0207041	Socket Head Cap Screw	1/4-20x3/4	3
22	6294316	Worm Gear		1
23	BB-6002Z	Ball Bearing	6002Z	2
24	6294318	Bearing Cap		1
25	TS-0206031	Socket Head Cap Screw	10-24x5/8	3
26	6294320	Bearing Cap		1
27	TS-0207031	Socket Head Cap Screw	1/4-20x5/8	3
28	6294322	Sprocket Wheel		1
29	TS-0270051	Set Screw	5/16-18x1/2	2
30	6294324	Pulley		1
31	VB-A36	V-Belt	A-36	1
32	6294326	Motor Pulley		1
33	TS-0267051	Set Screw	1/4-20x1/2	3
34	TS-0561031	Hex Nut	3/8-16	1
35	TS-0561021	Hex Nut	5/16-18	1
36	6294330	Hand Wheel		1
37	6294331	Motor Base		1
38	TS-0050051	Hex Cap Screw	1/4-20x1	4
39	TS-0720071	Lock Washer	1/4	5

Table and Conveyor Belt Assembly – Models WB-25, WB-37, WB-43

Parts list on page 40 (WB-25), page 41 (WB-37) and page 42 (WB-43).

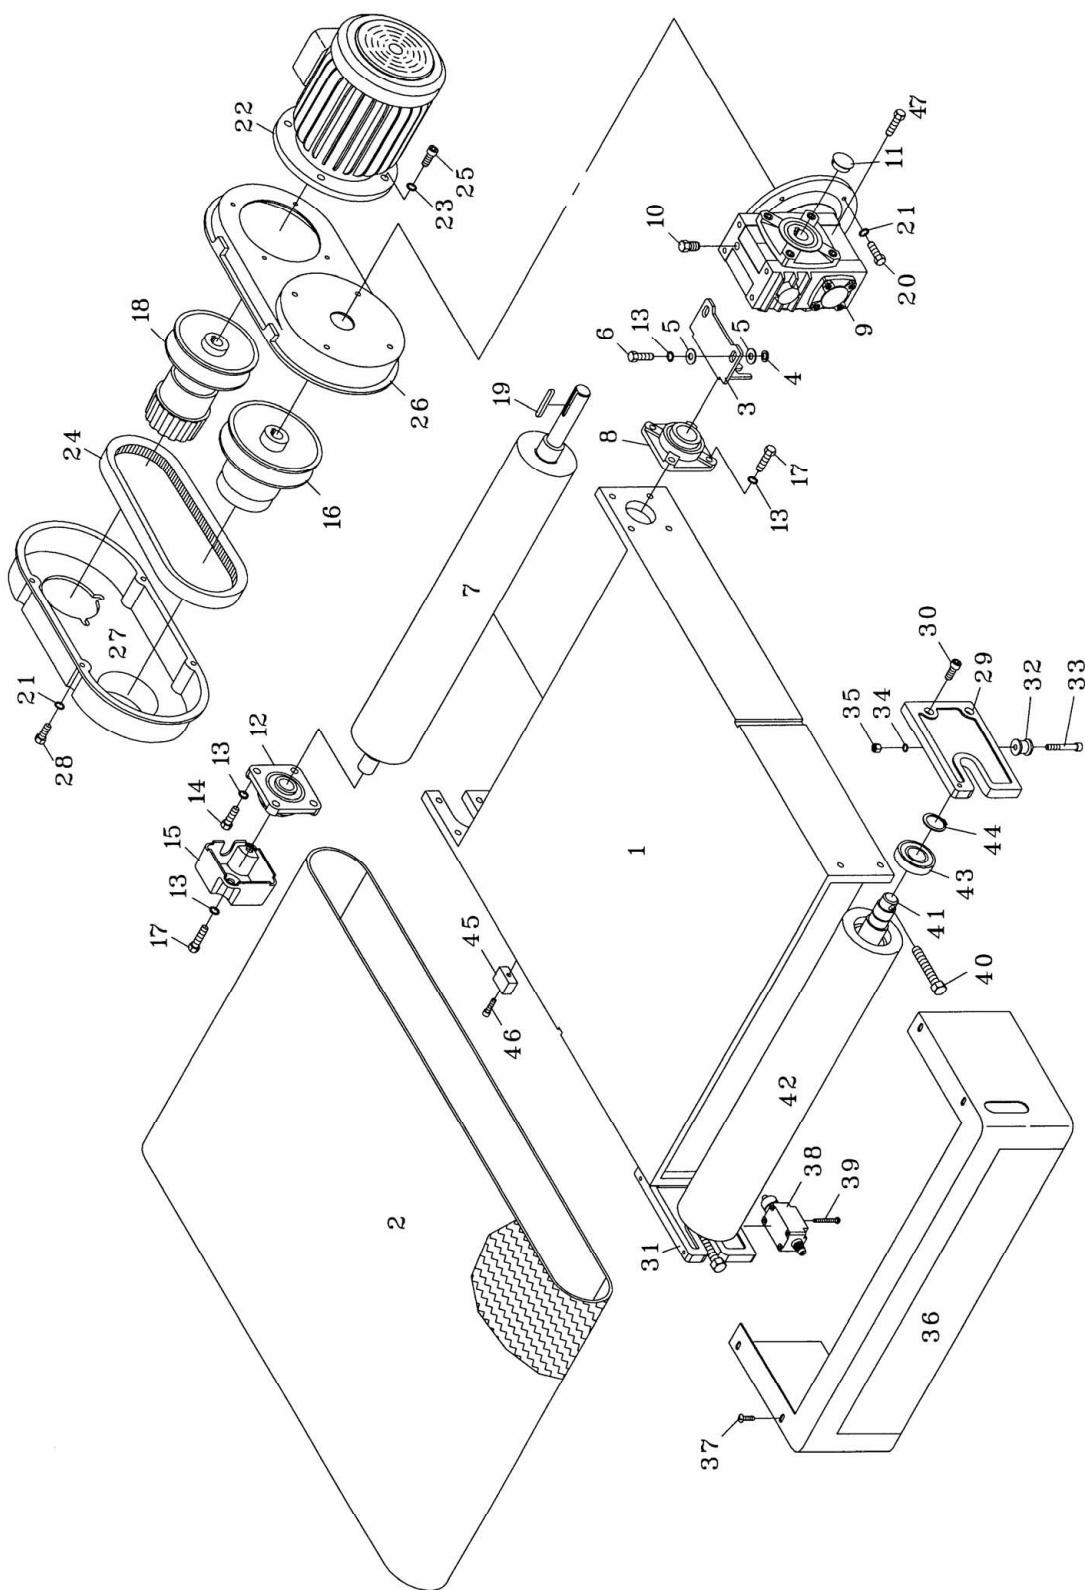


Parts List: Table and Conveyor Belt Assembly – Model WB-37

Exploded view on page 39.

Index No.	Part No.	Description	Size	Qty
1.....	WB37-501.....	Conveyor Table		1
2.....	WB37-502.....	Conveyor Belt.....		1
3.....	WB25-503.....	Mounting Bracket.....		1
4.....	WB25-504.....	Washer.....		2
5.....	TS-1550071.....	Flat Washer.....	M10.....	4
6.....	TS-1491031.....	Hex Cap Screw	M10x25.....	2
7.....	WB37-507.....	Outfeed Roller		1
8.....	6294352.....	Bearing, Flange Mount		1
9.....	WB25-509.....	Reducer		1
10.....	WB25-510.....	Plug.....		3
11.....	WB25-511.....	Cover		1
12.....	6290231.....	Bearing, Flange Mount		1
13.....	TS-2361101.....	Lock Washer	M10.....	10
14.....	TS-0060061.....	Hex Cap Screw	3/8-16x1-1/4	2
15.....	6294356.....	Bearing Cap		1
16.....	WB25-516.....	Driven Pulley		1
17.....	TS-0060071.....	Hex Cap Screw	3/8-16x1-1/2	6
18.....	6294385.....	Driving Pulley		1
19.....	WB25-519.....	Key.....	8x8x55.....	1
20.....	TS-1490041.....	Hex Cap Screw	M8x25.....	4
21.....	TS-2361081.....	Lock Washer	M8.....	8
22.....	WB25-522.....	Motor.....	1HP, 230/460V, 3Ph.....	1
23.....	TS-1551071.....	Lock Washer	M10.....	4
24.....	WB25-524.....	Timing Belt		1
25.....	TS-1505031.....	Socket Head Cap Screw.....	M10x25.....	4
26.....	6294383.....	Variable Speed Unit Base Plate.....		1
27.....	6294387.....	Variable Speed Unit Cover		1
28.....	TS-1490031.....	Hex Cap Screw	M8x20.....	1
29.....	WB25-529.....	Infeed Roller Bracket, Right		1
30.....	TS-0209031.....	Socket Head Cap Screw.....	3/8-16x3/4	4
31.....	WB25-531.....	Infeed Roller Bracket, Left		1
32.....	6294372.....	Conveyor Belt Position Wheel.....		2
33.....	TS-0208101.....	Socket Head Cap Screw.....	5/16-18x2	2
34.....	TS-0720081.....	Lock Washer	5/16.....	2
35.....	TS-0561021.....	Hex Nut	5/16-18.....	2
36.....	WB37-536.....	Emergency Stop Cover.....		1
37.....	TS-081F032.....	Screw.....	1/4-20x1/2	4
38.....	6294376.....	Limit Switch		1
39.....	TS-0810102.....	Round Head Screw	10-24x1-3/4	2
	WB37-IRA.....	Infeed Roller Assembly (Includes Index #40 thru #44).....		1
40.....	WB25-540.....	Adjustment Screw.....	1/2-12x3	2
41.....	WB37-541.....	Infeed Roller Shaft		1
42.....	WB37-542.....	Infeed Roller		1
43.....	BB-6206VV.....	Bearing.....	6206-2RS	2
44.....	6294573.....	C-Circlip		2
45.....	6294576.....	Elevation Aluminum Limiter		1
46.....	TS-0207081.....	Socket Head Cap Screw.....	1/4-20x1-1/2	1
47.....	WB25-547.....	Plug.....		2

Pressure Bar Assembly – Models WB-25, WB-37, WB-43

Parts list on page 43 (WB-25) and page 44 (WB-37, WB-43).

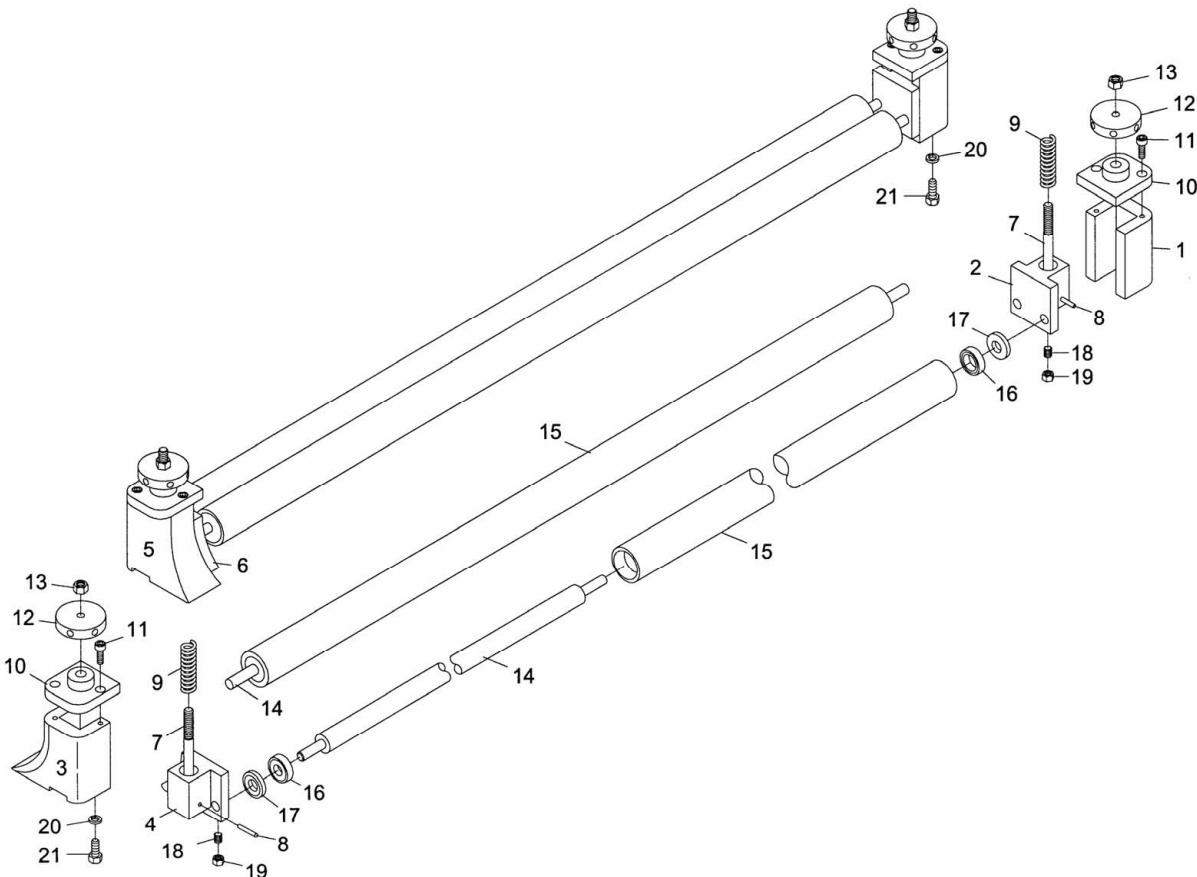

Parts List: Pressure Bar Assembly – Model WB-25

Index No.	Part No.	Description	Size	Qty
1.....	WB25-601.....	Roller Slider, Female		2
2.....	6294391.....	Roller Slider, Male		2
3.....	6294392.....	Front Roller Slider, Female		1
4.....	6294393.....	Front Roller Slider, Male		1
5.....	6294394.....	Back Roller Slider, Female		1
6.....	6294395.....	Back Roller Slider, Male		1
7.....	6294396.....	Roller Adjusting Screw.....		4
8.....	6294397.....	Spring Pin.....		4
9.....	6294398.....	Spring.....		4
10.....	6294399.....	Roller Slider Cover		4
11.....	TS-0207031.....	Socket Head Cap Screw.....	1/4-20x5/8	8
12.....	6294401.....	Roller Adjusting Knob		4
13.....	TS-0561031.....	Hex Nut.....	3/8-16.....	4
.....	WB25-PBA	Pressure Bar Assembly (Includes Index #14 thru #17)		1
14.....	6288605.....	Pressure Bar Shaft		4
15.....	6290278.....	Pressure Bar Cover		4
16.....	BB-6001ZZ	Ball Bearing.....	6001ZZ	8
17.....	6294405.....	Bearing Cover		8
18.....	TS-0267071.....	Set Screw.....	1/4-20x3/4	8
19.....	TS-0561011.....	Hex Nut.....	1/4-20	8
20.....	TS-0720081.....	Lock Washer	5/16	8
21.....	TS-0051061.....	Hex Cap Screw	5/16-18x1-1/4	8

Parts List: Pressure Bar Assembly – Model WB-37

Exploded view on page 43.

Index No.	Part No.	Description	Size	Qty
1.....	WB25-601.....	Roller Slider, Female		2
2.....	6294391.....	Roller Slider, Male		2
3.....	6294392.....	Front Roller Slider, Female		1
4.....	6294393.....	Front Roller Slider, Male		1
5.....	6294394.....	Back Roller Slider, Female		1
6.....	6294395.....	Back Roller Slider, Male		1
7.....	6294396.....	Roller Adjusting Screw.....		4
8.....	6294397.....	Spring Pin.....		4
9.....	6294398.....	Spring.....		4
10.....	6294399.....	Roller Slider Cover		4
11.....	TS-0207031.....	Socket Head Cap Screw.....	1/4-20x5/8	8
12.....	6294401.....	Roller Adjusting Knob		4
13.....	TS-0561031.....	Hex Nut	3/8-16	4
	WB37-PBA	Pressure Bar Assembly (Includes Index #14 thru #17)		1
14.....	6288705.....	Pressure Bar Shaft		4
15.....	6288723.....	Pressure Bar Cover		4
16.....	BB-6001ZZ	Ball Bearing.....	6001ZZ	8
17.....	6294405.....	Bearing Cover		8
18.....	TS-0267071.....	Set Screw.....	1/4-20x3/4	8
19.....	TS-0561011.....	Hex Nut	1/4-20	8
20.....	TS-0720081.....	Lock Washer	5/16	8
21.....	TS-0051061.....	Hex Head Screw	5/16-18x1-1/4	8


Parts List: Pressure Bar Assembly – Model WB-43

Exploded view on page 43.

Index No.	Part No.	Description	Size	Qty
1.....	WB25-601.....	Roller Slider, Female		2
2.....	6294391.....	Roller Slider, Male		2
3.....	6294392.....	Front Roller Slider, Female		1
4.....	6294393.....	Front Roller Slider, Male		1
5.....	6294394.....	Back Roller Slider, Female		1
6.....	6294395.....	Back Roller Slider, Male		1
7.....	6294396.....	Roller Adjusting Screw.....		4
8.....	6294397.....	Spring Pin.....		4
9.....	6294398.....	Spring.....		4
10.....	6294399.....	Roller Slider Cover		4
11.....	TS-0207031.....	Socket Head Cap Screw.....	1/4-20x5/8	8
12.....	6294401.....	Roller Adjusting Knob		4
13.....	TS-0561031.....	Hex Nut	3/8-16	4
	WB43-PBA	Pressure Bar Assembly (Includes Index #14 thru #17)		1
14.....	6294402.....	Pressure Bar Shaft		4
15.....	6294403.....	Pressure Bar Cover		4
16.....	BB-6001ZZ	Ball Bearing.....	6001ZZ	8
17.....	6294405.....	Bearing Cover		8
18.....	TS-0267071.....	Set Screw.....	1/4-20x3/4	8
19.....	TS-0561011.....	Hex Nut	1/4-20	8
20.....	TS-0720081.....	Lock Washer	5/16	8
21.....	TS-0051061.....	Hex Head Screw	5/16-18x1-1/4	8

Platen Assembly – Models WB-37, WB-43

Parts list on page 47 (WB-37) and page 48 (WB-43).

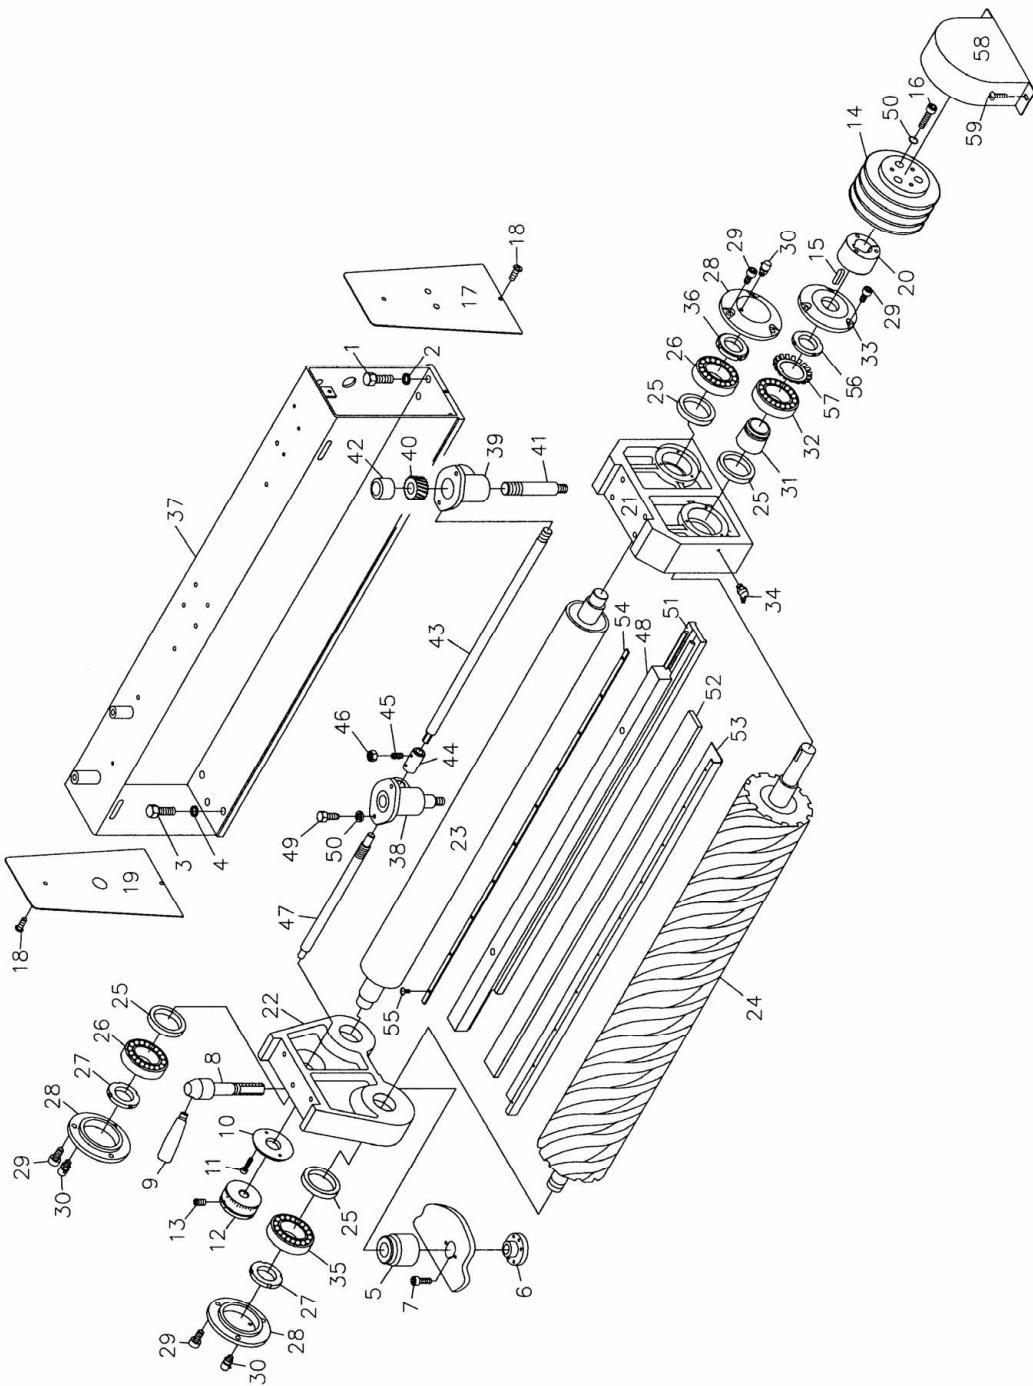

Parts List: Platen Assembly – Model WB-37

Index No.	Part No.	Description	Size	Qty
1.....	WB25-701.....	Hex Cap Screw	1/2-12x1-1/2	4
2.....	TS-0720111	Lock Washer	1/2	4
3.....	TS-0060061	Hex Cap Screw	3/8-16x1-1/4	3
4.....	TS-0720091	Lock Washer	3/8	3
5.....	6290291.....	Diaphragm.....		1
6.....	6290292.....	Flat Head Nut		1
7.....	TS-0207041	Socket Head Cap Screw.....	1/4-20x3/4	2

8.....	6290294.....	Screw Rod.....	1
9.....	6290295.....	Platen Lock Lever.....	1
10.....	6290296.....	Scale Ring Base.....	1
11.....	6290297.....	Scale Ring Base Screw	5/32x3/8
12.....	6290298.....	Scale Ring.....	1
13.....	TS-0267051.....	Set Screw.....	1/4-20x1/2
14.....	6288737.....	Roller Pulley.....	1
15.....	6290301.....	Key.....	5/16x5/16x1-3/16.....
16.....	TS-0208071.....	Socket Head Cap Screw.....	5/16-18x1-1/4
17.....	WB37-717.....	Seal Plate, Right.....	1
18.....	TS-081F032.....	Pan Head Screw	1/4-20x1/2
19.....	WB37-719.....	Seal Plate, Left.....	1
20.....	WB25-720.....	Bushing.....	1
21.....	6290310.....	Bearing Base.....	1
22.....	6290311.....	Bearing Frame.....	1
23.....	WB37-723.....	Free Roller	1
24.....	6288704.....	Contact Roller.....	1
25.....	6290312.....	Oil Seal	4
26.....	BB-6206.....	Bearing.....	6206
27.....	6290314.....	Lock Nut.....	2
28.....	6290315.....	Bearing Cover	3
29.....	TS-0207021.....	Socket Head Cap Screw.....	1/4-20x1/2
30.....	6290317.....	Grease Fitting.....	3
31.....	6290318.....	Fastening Ring	1
32.....	6290321.....	Bearing.....	22207
33.....	6290322.....	Bearing Cover	1
34.....	6290323.....	Grease Fitting.....	1
35.....	6062032.....	Bearing	22206
36.....	6209465.....	Lock Nut.....	30mm (LH)
37.....	WB37-737.....	Mounting Frame	1
38.....	6290325.....	Graphite Base Gearbox, Left	1
39.....	6290326.....	Graphite Base Gearbox, Right	1
40.....	6290327.....	Gear Nut	2
41.....	6290328.....	Platen Bar Adjusting Rod.....	2
42.....	6290329.....	Bushing	2
43.....	6288727.....	Worm Gear Rod, Right	1
44.....	6290331.....	Worm Gear Rod Connector	1
45.....	TS-0267051.....	Set Screw.....	1/4-20x1/2
46.....	TS-0561011.....	Hex Nut.....	1/4-20
47.....	6290334.....	Worm Gear Rod, Left	1
48.....	6288728.....	Sliding Platen, Male	1
49.....	TS-0060051.....	Hex Cap Screw	3/8-16x1
50.....	TS-0720091.....	Lock Washer	3/8
51.....	6288701.....	Sliding Platen, Female	1
52.....	6288702.....	Felt	1
53.....	6288703.....	Graphite	1
54.....	6288730.....	Bar	1
55.....	6294433.....	Bar Screw	7
56.....	6290319.....	Lock Washer	1
57.....	6290320.....	Lock Nut	1
58.....	WB37-758.....	Pulley Guard	1
59.....	TS-081F032.....	Pan Head Screw	1/4-20x1/2


Parts List: Platen Assembly – Model WB-43

Exploded view on page 47.

Index No.	Part No.	Description	Size	Qty
1.....	WB25-701.....	Hex Cap Screw	1/2-12x1-1/2	4
2.....	TS-0720111.....	Lock Washer	1/2	4
3.....	TS-0060061.....	Hex Cap Screw	3/8-16x1-1/4	3

Air Regulator Assembly – Models WB-25, WB-37, WB-43

Parts list on page 50 (WB-25), page 51 (WB-37) and page 52 (WB-43).

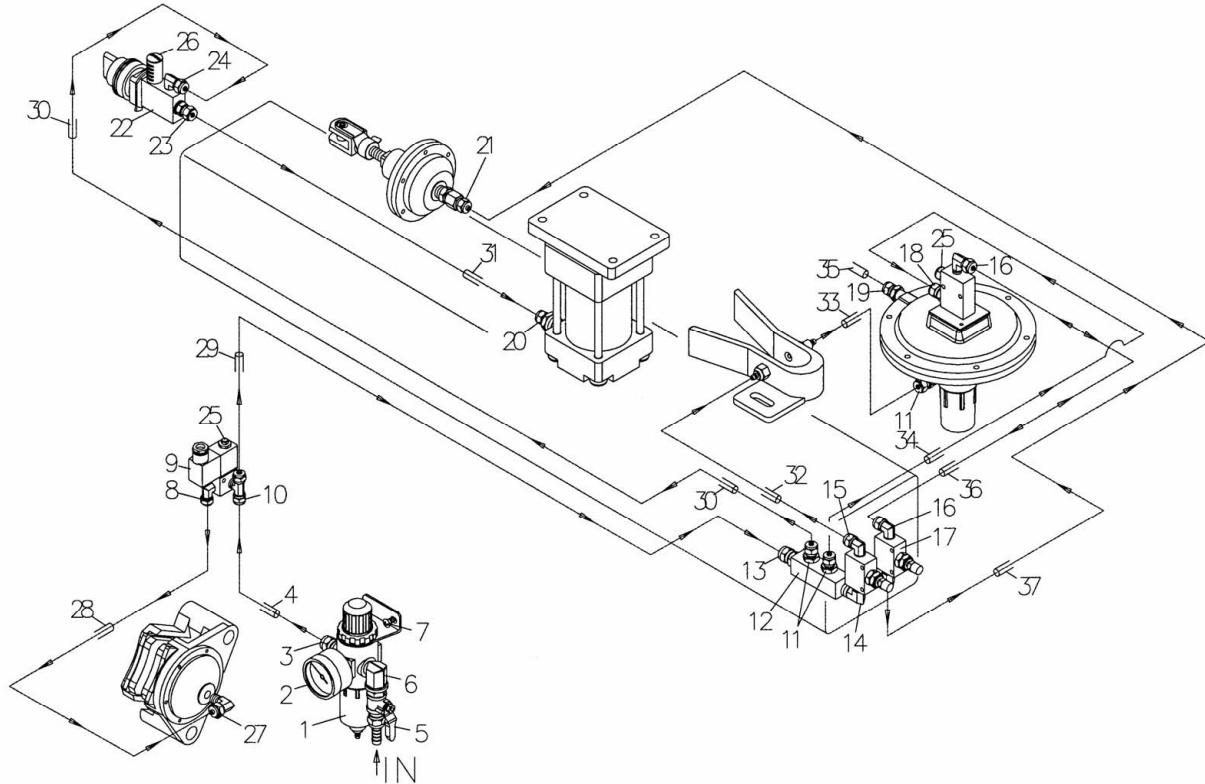

Parts List: Air Regulator Assembly – Model WB-25

Index No.	Part No.	Description	Size	Qty
1.....	6294544.....	Filter Cup		1
2.....	6294545.....	Pressure Regulator.....		1
3.....	6294546.....	Bronze Connector.....		1
4.....	6294547.....	Flexible Hose.....		1
5.....	6294548.....	Air Switch.....		1
6.....	6294549.....	Elbow		1
7.....	TS-081C042	Screw	10-24x5/8	2
8.....	6294551.....	Elbow		1
9.....	6294552.....	Solenoid Valve		1
10.....	6294553.....	T-Joint		1
11.....	6294554.....	Plastic Connector		3
12.....	6294555.....	Multiple Hole Connector		1
13.....	6294556.....	Plastic Connector		1
14.....	6294557.....	Bronze Elbow		1
15.....	6294558.....	Plastic Connector		1
16.....	6294559.....	Plastic Connector		2
17.....	6294560.....	Throttle Valve		2
18.....	6294561.....	Plastic Connector		1
19.....	6294562.....	Bronze Connector		1
20.....	6294563.....	Plastic Connector		1
21.....	6294564.....	Plastic Connector		1
22.....	6294565.....	Air Switch		1
23.....	6294566.....	Plastic Connector		1
24.....	6294567.....	Plastic Connector		1

25	6294568	Buffer	2
26	WB25-926	Buffer	1
27	6294570	Plastic Connector	1
28	WB25-928	Flexible Hose	$\psi 8 \times 700\text{mm}$
29	6294571	Flexible Hose	$\psi 8 \times 1400\text{mm}$
30	WB25-930	Flexible Hose	$\psi 6 \times 1100\text{mm}$
31	WB25-931	Flexible Hose	$\psi 6 \times 500\text{mm}$
32	WB25-932	Flexible Hose	$\psi 6 \times 560\text{mm}$
33	6294664	Flexible Hose	$\psi 6 \times 250\text{mm}$
34	6294665	Flexible Hose	$\psi 6 \times 650\text{mm}$
35	6294666	Flexible Hose	$\psi 6 \times 300\text{mm}$
36	6294667	Flexible Hose	$\psi 6 \times 650\text{mm}$
37	WB25-937	Flexible Hose	$\psi 6 \times 860\text{mm}$


Parts List: Air Regulator Assembly – Model WB-37

Exploded view on page 50.

Index No.	Part No.	Description	Size	Qty
1	6294544	Filter Cup		1
2	6294545	Pressure Regulator		1
3	6294546	Bronze Connector		1
4	6294547	Flexible House		1
5	6294548	Air Switch		1
6	6294549	Elbow		1
7	TS-081C042	Pan Head Screw	10-24x5/8	2
8	6294551	Elbow		1
9	6294552	Solenoid Valve		1
10	6294553	T-Joint		1
11	6294554	Plastic Connector		3
12	6294555	Multiple Hole Connector		1
13	6294556	Plastic Connector		1
14	6294557	Bronze Elbow		1
15	6294558	Plastic Connector		1
16	6294559	Plastic Connector		2
17	6294560	Throttle Valve		2
18	6294561	Plastic Connector		1
19	6294562	Bronze Connector		1
20	6294563	Plastic Connector		1
21	6294564	Plastic Connector		1
22	6294565	Air Switch		1
23	6294566	Plastic Connector		1
24	6294567	Plastic Connector		1
25	6294568	Buffer		2
26	WB25-926	Buffer		1
27	6294570	Plastic Connector		1
28	WB25-928	Flexible Hose	$\psi 8 \times 700\text{mm}$	1
29	6294571	Flexible Hose	$\psi 8 \times 1400\text{mm}$	1
30	WB37-930	Flexible Hose	$\psi 6 \times 1420\text{mm}$	1
31	WB37-931	Flexible Hose	$\psi 6 \times 620\text{mm}$	1
32	WB25-932	Flexible Hose	$\psi 6 \times 560\text{mm}$	1
33	6294664	Flexible Hose	$\psi 6 \times 250\text{mm}$	1
34	6294665	Flexible Hose	$\psi 6 \times 650\text{mm}$	1
35	6294666	Flexible Hose	$\psi 6 \times 300\text{mm}$	1
36	6294667	Flexible Hose	$\psi 6 \times 650\text{mm}$	1
37	WB37-937	Flexible Hose	$\psi 6 \times 1350\text{mm}$	1

Sanding Belt and Accessories – Models WB-25, WB-37, WB-43

Parts list on page 54.

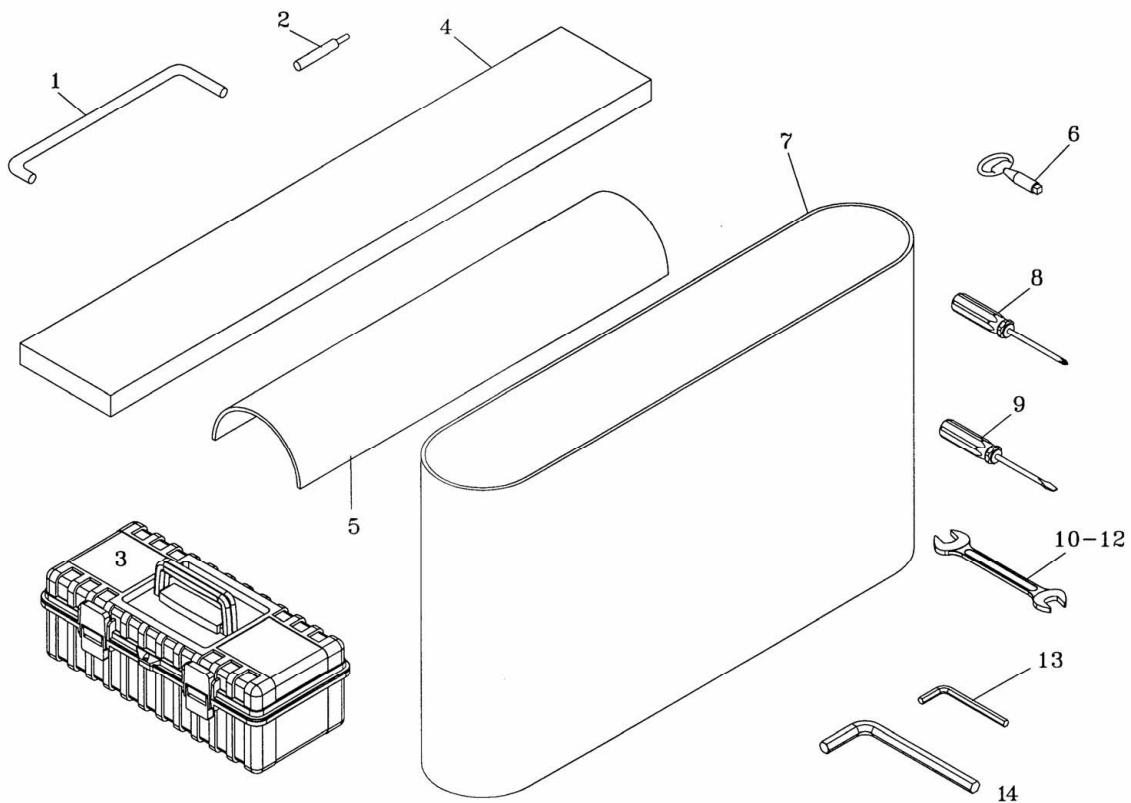

Parts List: Sanding Belt and Accessories – Model WB-25

Exploded view on page 53.

Index No.	Part No.	Description	Size	Qty
1.....	6290281.....	Platen Pull Hook.....		1
2.....	6294461.....	Limit Switch Tube		2
3.....	WB25-1003.....	Tool Box		1
4.....	6288602.....	Felt.....		1
5.....	6288603.....	Graphite		2
6.....	6294256.....	Door Lock Key.....		2
7.....	Sanding Belt (local purchase)	25"×75" (100 Grit)	1
.....	25"×75" (180 Grit)	1
8.....	WB25-1008.....	Cross Point Screwdriver		1
9.....	WB25-1009.....	Flat Blade Screwdriver.....		1
10.....	WB25-1010.....	Open End Wrench.....	8/10 mm	1
11.....	WB25-1011.....	Open End Wrench.....	12/14 mm	1
12.....	WB25-1012.....	Open End Wrench.....	17/19 mm	1
13.....	WB25-1013.....	Hex Wrench Set		1
14.....	WB25-1014.....	Adjusting Rod.....		1

Parts List: Sanding Belt and Accessories – Model WB-37


Index No.	Part No.	Description	Size	Qty
1.....	6290281.....	Platen Pull Hook.....		1
2.....	6294461.....	Limit Switch Tube		2
3.....	WB25-1003.....	Tool Box		1
4.....	6288702.....	Felt.....		1
5.....	6288703.....	Graphite		2
6.....	6294256.....	Door Lock Key.....		2
7.....	Sanding Belt (local purchase)	37"×75" (100Grit)	1
.....	37"×75" (180Grit)	1
8.....	WB25-1008.....	Cross Point Screwdriver		1
9.....	WB25-1009.....	Flat Blade Screwdriver.....		1
10.....	WB25-1010.....	Open End Wrench.....	8/10 mm	1
11.....	WB25-1011.....	Open End Wrench.....	12/14 mm	1
12.....	WB25-1012.....	Open End Wrench.....	17/19 mm	1
13.....	WB25-1013.....	Hex Wrench Set		1
14.....	WB25-1014.....	Adjusting Rod.....		1

Parts List: Sanding Belt and Accessories – Model WB-43

Index No.	Part No.	Description	Size	Qty
1.....	6290281.....	Platen Pull Hook.....		1
2.....	6294461.....	Limit Switch Tube		2
3.....	WB25-1003.....	Tool Box		1
4.....	6294431.....	Felt.....		1
5.....	6294432.....	Graphite		2
6.....	6294256.....	Door Lock Key.....		2
7.....	Sanding Belt (local purchase)	43"×75" (100Grit)	1
.....	43"×75" (180Grit)	1
8.....	WB25-1008.....	Cross Point Screwdriver		1
9.....	WB25-1009.....	Flat Blade Screwdriver.....		1
10.....	WB25-1010.....	Open End Wrench.....	8/10 mm	1
11.....	WB25-1011.....	Open End Wrench.....	12/14 mm	1
12.....	WB25-1012.....	Open End Wrench.....	17/19 mm	1
13.....	WB25-1013.....	Hex Wrench Set		1
14.....	WB25-1014.....	Adjusting Rod.....		1

Tension Roller Assembly – Models WB-25 and WB-37 ONLY

Parts list on page 56 (WB-25) and page 57 (WB-37).

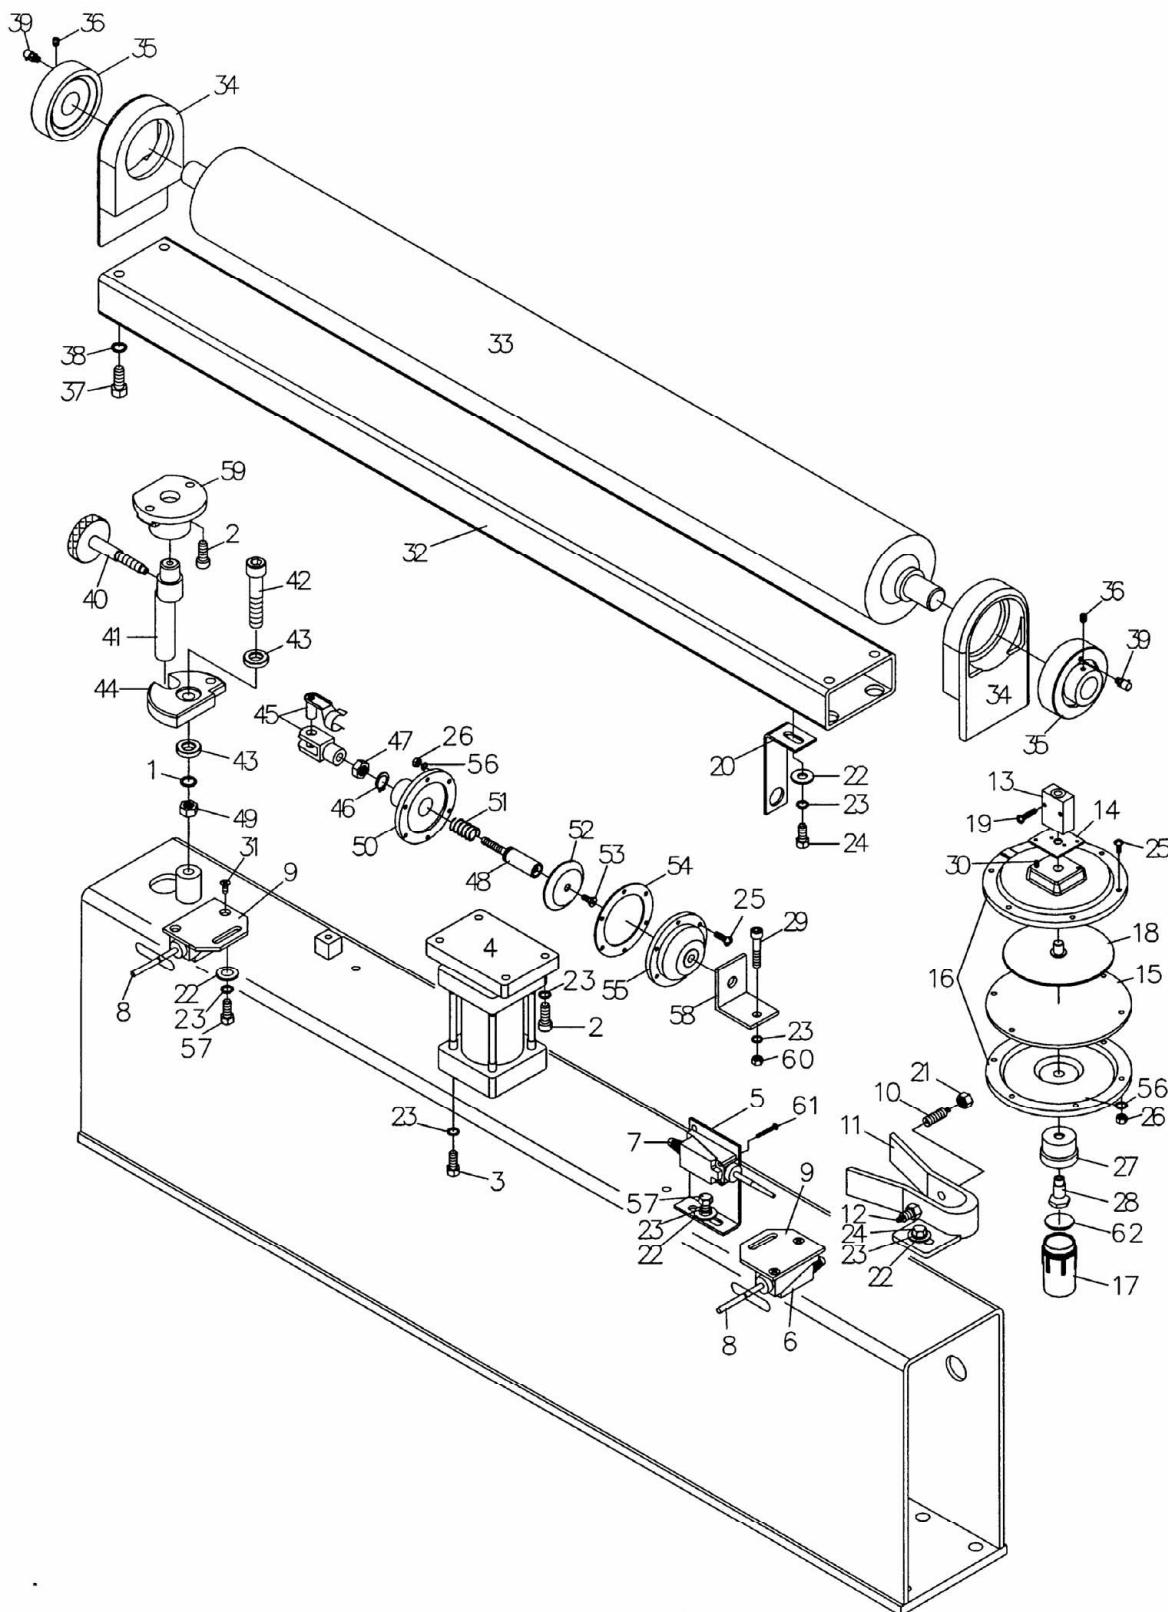

56	TS-0720051	Lock Washer	#10	12
57	TS-0051011	Hex Cap Screw	5/16-18x1/2	3
58	6294503	Base, Air Cylinder Firing		1
59	WB25-159	Eccentric Shaft Housing		1
60	TS-0561021	Hex Nut	5/16-18	1
61	TS-1533032	Pan Head Screw	M5x10	6
62	WB25-162	Seal		1

Parts List: Tension Roller Assembly – Model WB-37


Exploded view on page 55.

Index No.	Part No.	Description	Size	Qty
1	TS-0720111	Lock Washer	1/2	1
2	TS-0208041	Socket Head Cap Screw	5/16-18x3/4	6
3	TS-1490031	Hex Cap Screw	M8x20	4
4	WB25-104	Air Cylinder 63-30		1
5	6294459	Limit Switch Holder (L Type)		1
6	6294460	Limit Switch		2
7	6294653	Limit Switch		1
8	6294461	Limit Switch Tube		2
9	6294462	Limit Switch Holder		2
10	6294463	Air Sensor Nozzle (Female)		1
11	6294464	Air Cylinder Bracket		1
12	6294465	Air Sensor Nozzle (Male)		1
13	6294466	Throttle Valve		1
14	6294467	Throttle Valve Base		1
15	6294468	Plate		1
16	6294469	Aluminum Disc		1
17	6294470	Oil Cup		1
18	6294471	Aluminum Plate		1
19	TS-2284202	Pan Head Screw	M4x20	2
20	WB25-120	Sanding Belt Power Off Plate		1
21	TS-0561032	Hex Nut	3/8-24	2
22	TS-0680031	Flat Washer	5/16	5
23	TS-0720081	Lock Washer	5/16	14
24	TS-0081031	Hex Cap Screw	5/16-18x3/4	5
25	TS-0206041	Socket Head Cap Screw	10-24x3/4	12
26	TS-0560071	Hex Nut	10-24	12
27	6294478	Connector, Oil Cap		1
28	6294479	Shaft, Oil Cup		1
29	TS-0208111	Socket Head Cap Screw	5/16-18x2-1/4	1
30	TS-1532032	Pan Head Screw	M4x10	2
31	WB25-131	Flat Head Screw	M5x8	4
32	WB37-132	Upper Roller Frame		1
33	WB37-133	Upper Roller		1
34	WB25-134	Bearing Housing		2
35	WB25-135	Bearing	C205	2
36	TS-1523011	Set Screw	M6x6	4
37	TS-0209031	Socket Head Cap Screw	3/8-16x3/4	4
38	TS-0720091	Lock Washer	3/8	2
39	WB25-139	Grease Fitting with Cover		2
40	6294490	Trimming Screw		1
41	6294491	Eccentric Rod		1
42	WB25-142	Socket Head Cap Screw	1/2-12x3-1/2	1
43	6294265	Copper Plate		2
44	6294493	Eccentric Piece		1
45	6294494	Universal Joint Fork		1
46	JWP15H-224	Retaining Ring	STW-15	1

47	TS-1540071	Hex Nut	M10	1
48	6294496	Shaft, Air Cylinder		1
49	WB25-149	Hex Nut	1/2-12	1
	WB25-AVA	Air Valve Assembly (Includes Index #25,26,46,48,50 thru 56)		1
50	6294497	Bottom Cover		1
51	6294498	Spring		1
52	6294499	Aluminum Plate		1
53	TS-2286121	Flat Head Screw	M6x12	1
54	6294501	Plate		1
55	6294502	Top Cover		1
56	TS-0720051	Lock Washer	#10	12
57	TS-0051011	Hex Cap Screw	5/16-18x1/2	3
58	6294503	Base, Air Cylinder Firing		1
59	WB25-159	Eccentric Shaft Housing		1
60	TS-0561021	Hex Nut	5/16-18	1
61	TS-1533032	Pan Head Screw	M5x10	6
62	WB25-162	Seal		1

Electrical Box Assembly – Models WB-25 and WB-37

Parts list on page 63 (WB-25) and 64 (WB-37).

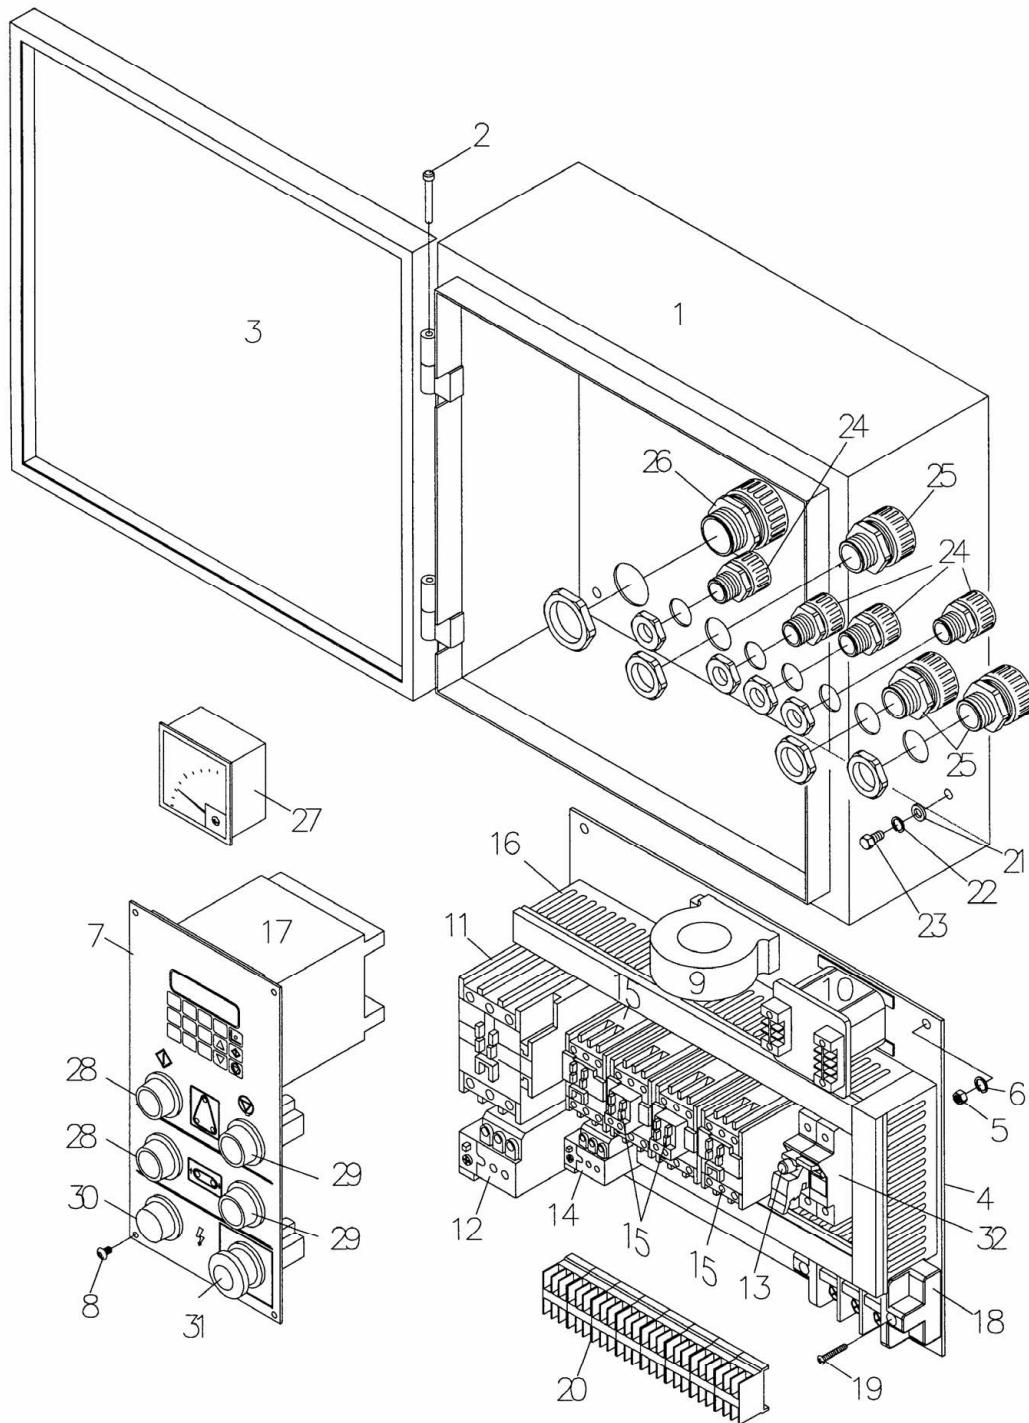


Parts List: Electrical Box Assembly – Model WB-37

Exploded view on page 62.

Index No.	Part No.	Description	Size	Qty
1.....	WB25-801.....	Electrical Control Box		1
2.....	6294516.....	Hinge Pin		2
3.....	WB25-803.....	Electrical Control Box Door		1
4.....	WB25-804.....	Base Plate		1
5.....	TS-0561011.....	Hex Nut	1/4-20.....	4
6.....	TS-0720071.....	Lock Washer	1/4.....	4
7.....	WB25-807.....	Control Panel		1
8.....	WB25-808.....	Button Head Socket Screw	M4x8.....	4
9.....	WB25-809.....	Proportional Current Device		1
10.....	WB25-810.....	Transformer		1
11.....	WB25-811.....	Contactor		1
12.....	WB37-812.....	Overload Relay (for 230V)		1
	WB37-812A.....	Overload Relay (for 460V)		1
13.....	WB25-813.....	Fuse	4A.....	2
14.....	WB25-814.....	Overload Relay (for 230V)		1
	WB25-814A.....	Overload Relay (for 460V)		1
15.....	6294647.....	Contactor	CN-11.....	4
16.....	WB25-816.....	Wire Column		1
17.....	WB25-817.....	Controller		1
18.....	WB25-818.....	Power Wire Terminal		1
19.....	WB25-819.....	Tap Screw	M4x10.....	2
20.....	WB25-820.....	Terminal Board		8
21.....	TS-0680021.....	Flat Washer	1/4.....	4
22.....	TS-0720071.....	Lock Washer	1/4.....	4
23.....	TS-081F032.....	Pan Head Screw	1/4-20x1/2.....	4
24.....	6294532.....	PU Connector 1/2"		4
25.....	6294533.....	PU Connector 3/4"		3
26.....	6294534.....	Cable Connector 1"		1
27.....	WB25-827.....	Amp Meter		1
28.....	6294537.....	Start Switch		2
29.....	6294538.....	Stop Switch		2
30.....	6294539.....	Power Indication Light		1
31.....	6294540.....	Emergency Stop Switch		1
32.....	WB25-832.....	Fuse Support Base		2

Electrical Connections – Models WB-25 and WB-37 ONLY

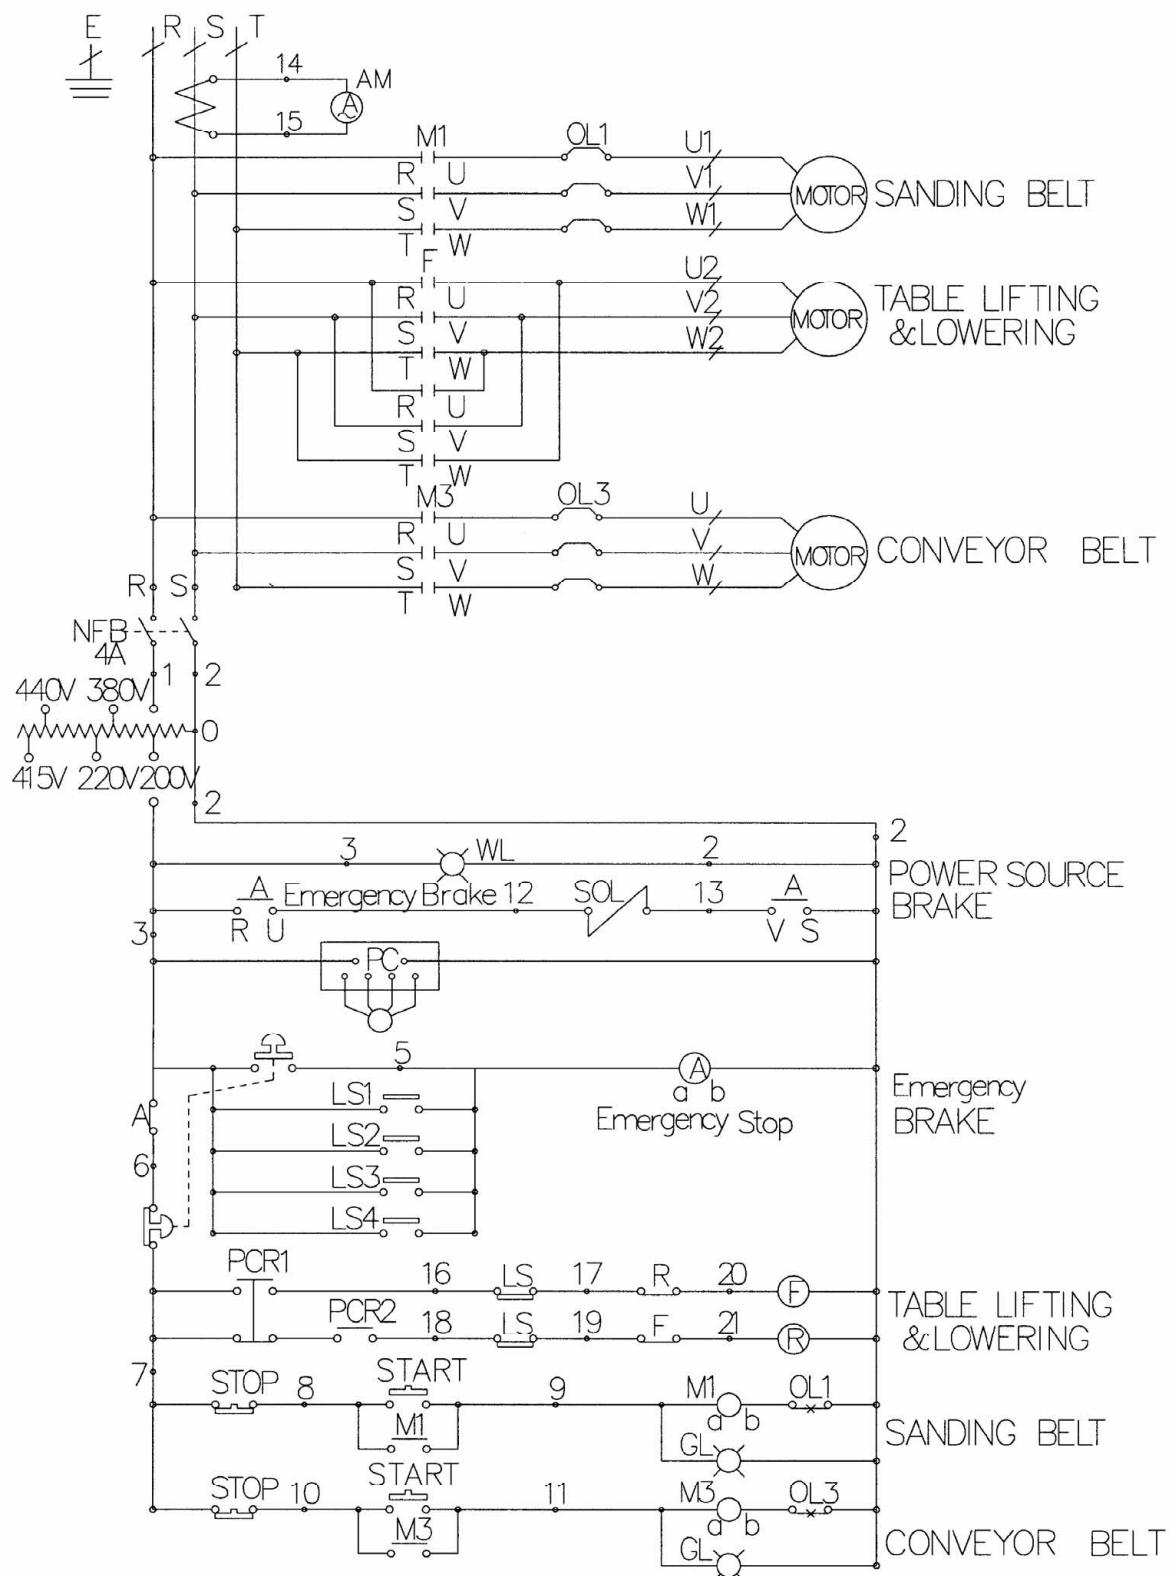

Electrical Connections – Model WB-43 ONLY

