

PARTS LEGEND 3250-F16, 403700


1	091362	4	Socket Head Capscrew, 1/4-20 x 1-1/2"	45	091622	1	Reducing Pipe Bushing
2	002187	4	Lock Washer, 1/4"	46	004502	2	Socket Head Capscrew, #10-32 x 5/8"
3	091447	4	Flat Washer	47	403746	1	Rail Bracket Assembly
4	404242	1	Cap, Diffuser	48	402731	1	Logo-Rail
5	006310	1	Socket Head Capscrew, #6-32 x 1/2"	49	092037	2	Lock Nut, #10 - 32
6	402704	1	Cap	50	091966	1	O-Ring, Sleeve
7	402717	1	Conical Spring	→ 51	500766	1	Guide Block
8	404230	1	Retaining Ring	→*52	500772	1	Spring, Work Contacting Element
*9	091537	1	"O" Ring, Main Valve Assembly	→ 53	500768	1	Intermediate Work Contacting Element
10	404122	1	Upper Valve Piston	→ 54	004224	2	Socket Head Capscrew, #10 - 32 x 3/8"
11	404055	1	Post, Main Valve	55	004238	2	Lock Washer #10
*12	404256	1	"O" Ring, Main Valve Post	56	402629	1	Hardened Washer
*13	402723	1	"O" Ring, Piston	57	405076	1	Spring
14	403563	1	Piston	58	403712	1	Front Guide Latch Assembly
15	403582	1	Jam Nut	59	403724	1	Rail Cover Assembly
*16	403594	1	Driver Blade	60	403708	1	Negator Assembly
17	402725	1	Seal, Sleeve	61	403710	1	Roller, Negator
18	405245	1	Sleeve	62	403702	2	Wear Strip
*19	402728	1	"O" Ring, Flange	63	403745	1	Rail Assembly
*20	402729	1	"O" Ring, Sleeve	→ 64	500840	1	Work Contacting Element Assembly
21	403854	1	Retaining Bumper	65	404180	1	Tip, Deep Drive (Black)
*22	403853	1	Bumper	66	403715	1	Follower Assembly
23	403705	1	Seal, Driver Blade	67	403711	1	Latch Pin, Follower
*24	402707	1	Gasket, Cap	68	091536	1	Spring, Follower Latch Pin
25	402701	1	Housing	69	403713	1	Retaining Ring
26	404939	2	Logo, Housing	70	404243	4	Spacer
→ 27	500883	1	Nameplate	71	500488	1	Grip, Handle
28	402708	1	Gasket, Flange	72	404274	1	Washer
29	402706	1	Flange	73	403812	2	Flat Washer
30	091545	4	Socket Head Capscrew, 1/4-20 x 7/8"	74	009397	2	Capscrew #10-24 x 1/2"
31	405144	1	Trigger	**75	500458	1	Warning Label
32	402079	1	Pin, Trigger	77	401988	1	Spring, Front Guide Latch
33	404325	1	Stop Nut	78	094295	1	"O" Ring
34	026133	2	Roll Pin, 1/8" Dia. x 1" Lg.	79	404054	1	Seal, Main Valve
35	402730	1	Pivot Pin, Front Guide	*80	090927	1	"O" Ring, Main Valve
36	404698	2	Roll Pin, Assembly	*81	092775	1	"O" Ring, Main Valve
37	403592	1	Front Guide	*82	092773	1	"O" Ring, Main Valve
38	403591	1	Back Plate	83	404056	1	Lower Valve Piston
39	401958	1	Valve Body	84	403599	1	Spacer
*40	092174	1	"O" Ring, Valve Body	85	403731	1	Rivet
41	097746	1	Valve Pin	86	405147	1	Lever, Trigger
42	097748	1	Spring, Valve Pin	87	005849	1	Roll Pin
*43	091591	1	"O" Ring, End Plug	88	405243	1	Flange, Sleeve
44	401940	1	End Plug	89	403716	3	Socket Head Capscrew 10-32 x 5/16"

* Denotes normal wear items





** Make sure Warning Label (500458) is properly affixed.
Replace if necessary. Label available at no charge through Service Department.

▲ Apply Loctite 242 (Blue)

→ Denotes New Change

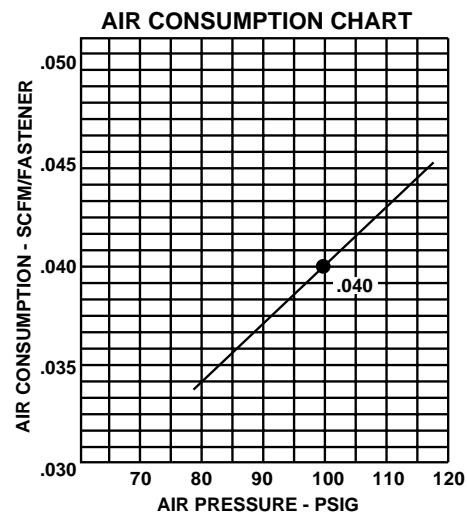

3250-F16
403700

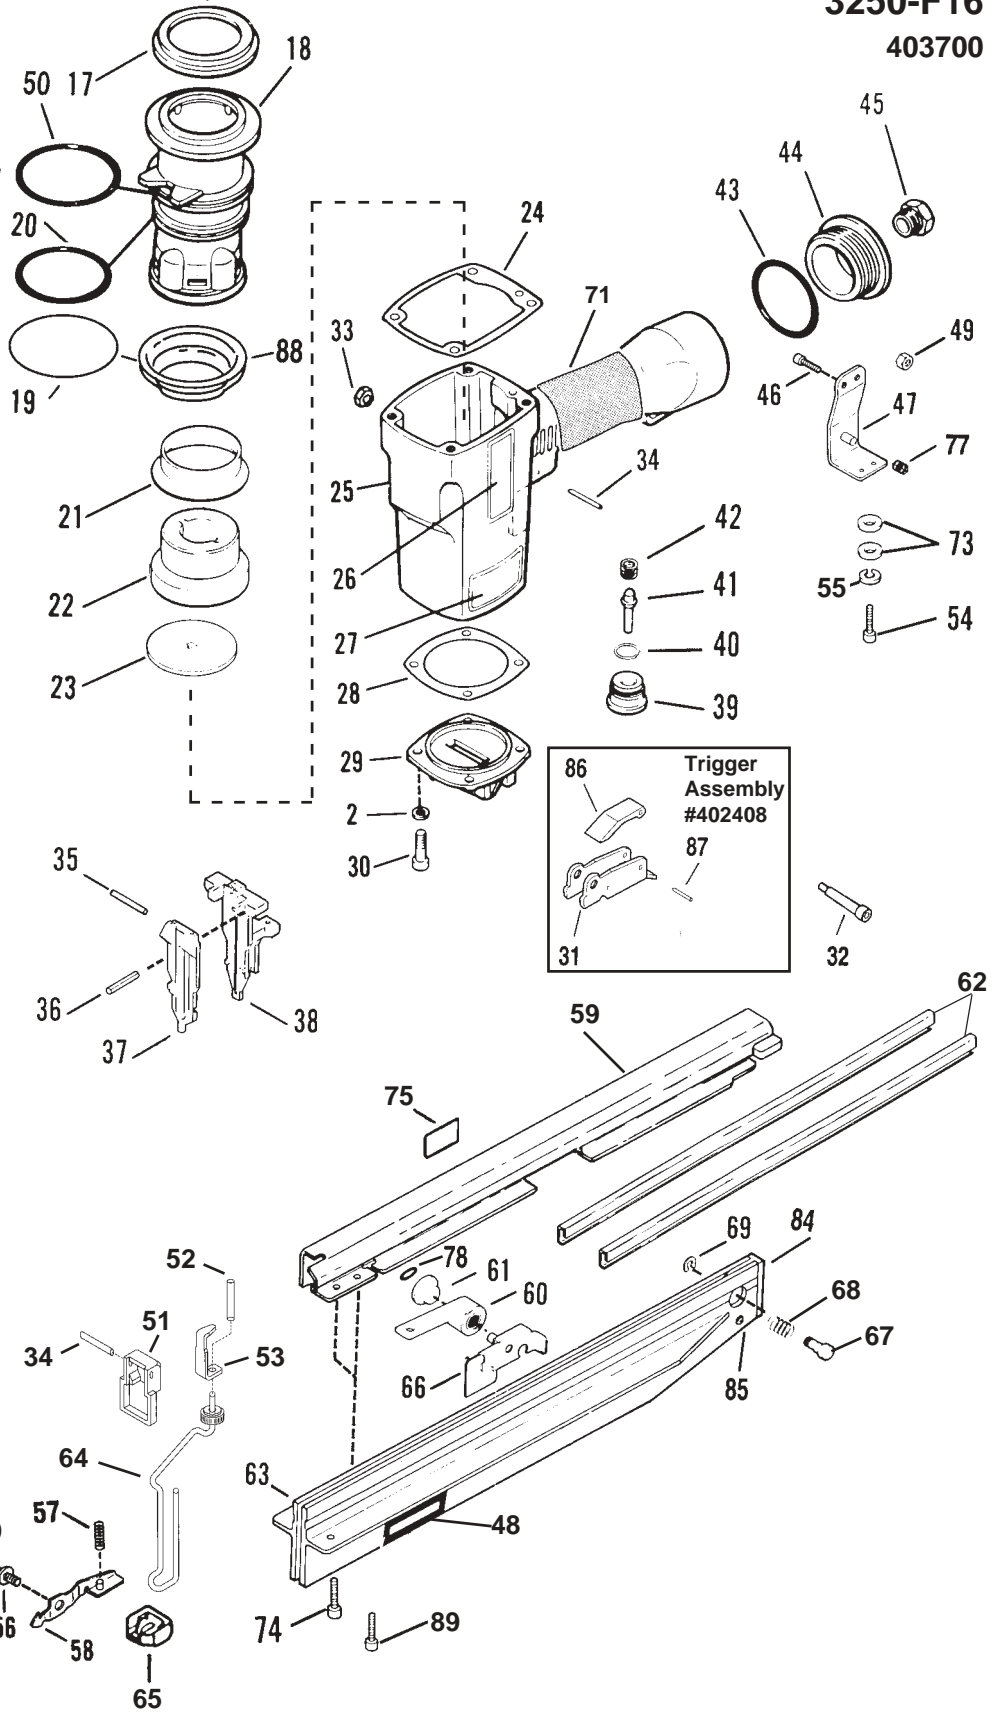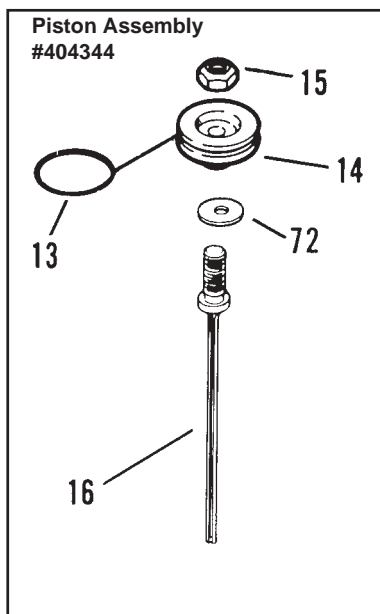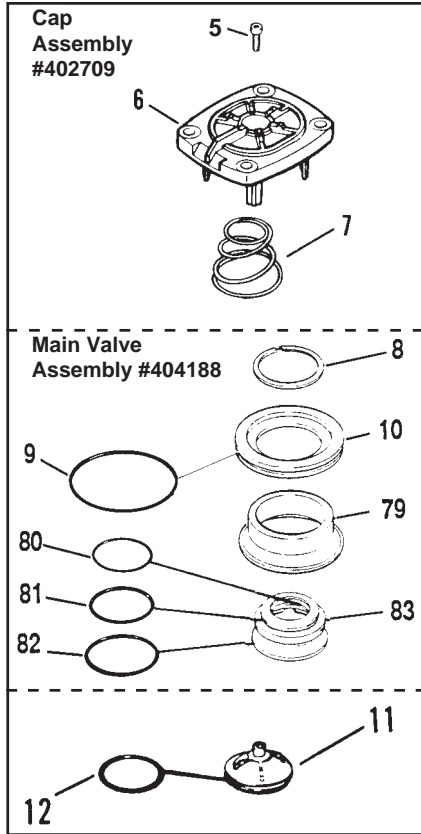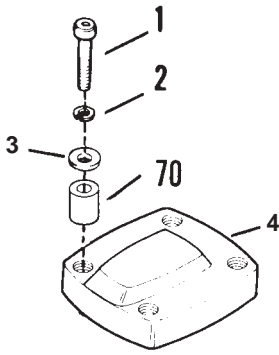

⚠ WARNING
All parts must be periodically inspected and replaced if worn or broken. Failure to do this can affect the tool's operation and present a safety hazard.