

21.08.2015 |

## Jig Saw - F 012 456 700 - 4567

Item	Part Number	Description	Illustration	Price	Quantity	Price Group
4	2 610 919 588	On-Off Switch	N/A	-,-	1	26
42	2 610 912 487	Protection	N/A	-,-	1	11
57	2 610 921 397	Base Plate	N/A	-,-	1	-
651	2 607 335 328	Accumulator Battery 14,4V, 1,25Ah, NiCd	N/A	-,-	1	45
653	2 607 225 367	Fast Charger USA 120/9,6V-18V, 3h	N/A	-,-	1	31
827	2 610 912 739	Blade Holder	N/A	-,-	1	25
843	2 610 915 062	Support bracket	N/A	-,-	1	20

No  
Diagram  
Available

Parts List  
Only