



# SERVICE PARTS LIST

**BUL. 54-40-9010**

## POWER MITER TABLE


REVISED BUL 6375-1      DATE April '68

**Catalog No. 6455**

Starting Serial No. **375-1001**

WIRING INSTR.

*Both Model and Serial No. must be furnished to obtain correct parts.*

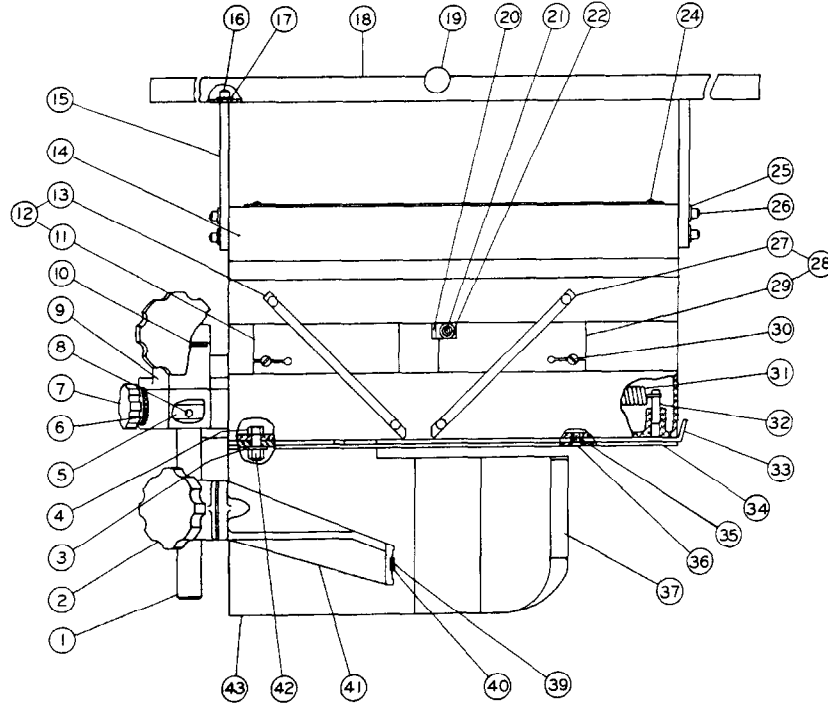

ILLUSTRATED PARTS

FIG.	PART NO.	DESCRIPTION OF PART	FIG.	PART NO.	DESCRIPTION OF PART
1	45-08-0081	Pivot Support Shaft	22	45-88-5220	Washer
2	43-98-0161	Knob	(2)	24	06-77-0625 Name Plate Drive Screw (2)
3	45-88-5261	Washer	(2)	25	45-88-5220 Washer (4)
4	06-75-0500	3/8-16x1 Hex Hd. Base Ext. Mtg. Bolt	(2)	26	06-75-3100 1/4-20x1 Soc. Hd. Arm Mounting Screw (4)
5	28-04-0101	Spring Arm Assembly	27	43-56-0132	Left Hand Miter Guide Blade Assembly
6	44-40-0271	Lower Limit Locknut	28	43-56-0151	Left Hand Miter Guide Assembly (includes items 27 & 29)
7	43-98-0150	Lower Limit Knob	29	42-20-0251	Left Hand Miter Guide Base Assembly
8	06-65-1675	Roll Pin	30	06-75-2075	10-24x3/8 Socket Drive Flat Head Screws (2)
9	28-90-0081	Pivot Support	31	40-50-7500	Spring
10	34-60-1825	Shaft Retaining Ring	32	06-65-1240	5/16 x 1-1/4 Groove Pin
11	42-20-0241	Right Hand Miter Guide Base	33	45-24-0061	Undercut Slide
12	43-56-0141	Right Hand Miter Guide Assembly (includes 11 & 13)	34	42-18-0131	Rip Guide Bar
13	43-56-0122	Right Hand Miter Guide Blade Assembly	35	45-36-0491	Spacer (6)
14	28-06-0701	Base Assembly	36	06-81-2665	10-24x5/8 Flat Hd. Undercut Mech. Mtg. Sc. (6)
15	42-09-0081	Extension Support Arms (2)	*37	12-98-5920	Caution Plate
16	06-75-2950	1/4-20x1/2 Soc. Hd. Ext. Bar Mtg. Screw (2)	39	06-81-8050	Guide Plate Mounting Screw (2)
17	45-88-5220	Washer (2)	40	43-56-0083	Guide Plate
18	42-18-0141	Extension Cross Bar	41	28-04-0301	Saw Arm
19	45-46-0101	Square Cut Off Stop Block Assembly	42	06-55-2500	3/8-16 Hex Ext. Base Nut (2)
20	42-36-0621	Miter Guide Cut Off Bracket	43	28-32-0101	Base Extension Assembly (includes item 37)
21	06-75-2950	1/4-20x1/2 Soc. Hd. Bracket Mounting Screw			

MISCELLANEOUS PARTS NOT SHOWN

PART NO.	DESCRIPTION OF PART	PART NO.	DESCRIPTION OF PART
06-65-0630	Type 5-3/16x1/2 Pivot Pin Support Locating Pin	45-88-5261	Pivot Lock Knob Washer
06-65-0630	Type 5-3/16x1/2 Miter Guide Dowel (2)	45-88-5261	Saw Arm Adj. Knob Washer
06-65-1220	Spring Arm Groove Pin	48-66-4080	Rubber Flex Wrench Holder
06-75-2200	10-24x1/2 Soc. Hd. Miter Guide Assembly Screw (4)	49-96-0080	3/16 Allen Wrench
06-81-5800	6-32x5/16 Fil. Hd. Sem Saw Guard Handle Screw (2)	42-28-0191	Square Cut Off Stop Block
06-87-2400	1/4-20x1/2 Wing Bolt	44-04-0050	Table Leg (3)
06-97-4125	Pivot Support Mounting Bolt Washer (2)	06-75-0650	3/8-16x2-1/4 Hex. Hd. Pivot Support Mounting Bolt (2)
42-60-0060	Chain Assembly	45-88-5261	Washer, Chain Assembly
43-62-0371	Saw Guard Handle	06-59-1000	Wing Nut, Chain Assembly
44-68-0140	Leg Caps (3)	*48-40-7660	Saw Blade
06-75-3100	1/4-20x1 Soc. Hd. Miter Guide Stop Screw	44-74-0111	Miter Guide Post (Included w/item 13 or 27) (4)
42-70-0160	Switch Clip	44-46-0080	Oiler (included w/item 9)
49-96-0060	1/8 Allen Wrench	49-96-0070	5/32 Socket Wrench