





Parts List for 690LRVS Type 8

Item Number	Part Number	Description	Qty Required
1	903660	ARMATURE	1
2	904289	SS/A-FIELD	1
3	N030459	BRUSH & SPRING	2
4	A22756	SWITCH	1
5	839549	CORD	1
6	152684-00	TERMINAL	1
7	697861	TERMINAL,GROUND	1
10	A22752	ID LABEL	1
11	855284	BEARING	1
21	874299	FAN	1
22	803483	BRUSH CAP	2
23	873497	BRUSH HOLDER	2
24	878064SV	BEARING	1
25	A22753	REAR HOUSING	1
26	905490	MOTOR CAP	1
27	876671	COLLET 1/2 INCH	1
27	876669	COLLET 1/4 INCH	1
27	42999	1/4 INCH COLLET ASSY	1
27	42950	1/2 INCH COLLET ASSY	1
27	42975	3/8 INCH COLLET ASSY	1
27	42975	3/8 INCH COLLET ASSY	1
30	903426	CONTROL-SPEED	1
31	882185	SCREW MACHINE STEEL	2
52	A11034	FRONT CASE	1
81	875893	COLLET NUT	1
83	872793	CHUCK	1
98	823030	SNAP-RING	1

Parts List for 690LRVS Type 8

Item Number	Part Number	Description	Qty Required
99	A11331	WARNING LABEL	1
100	878389	SCREW	2
101	A22709	OPEN-END WRENCH	1
103	803632	SET-SCREW	2
104	803496	WASHER	2
105	898484	PLUG	1
106	876965	SCREW	2
108	802426	RING	1
110	901266	STRAIN RELIEVER	1
111	800835	PIN	4
113	682063	CONNECTOR VS	1
115	892780	SCREW	1
119	A24391	WARNING LABEL	1
120	681260	SCREW & WASHER	2
121	874137	CORD CLAMP	1
122	878262	SCREW	2
123	887452	DUST SHIELD	1
201	A23103	BASE HOUSING	1
223	872998	DEPTH RING	1
225	908572	HANDLE	2
241	903120	SHAFT	1
242	688860	SCREW	3
243	A26327	NAMEPLATE	1
244	802417	WASHER	1
245	42186	ROUTER SUB-BASE	1
245	875807	SUB BASE	1
246	800869	SPRING	3

Parts List for 690LRVS Type 8

Item Number	Part Number	Description	Qty Required
247	907236	BUCKLE	1
249	911809	SCREW	2
252	903118	PIN	1
253	A22759	NAMEPLATE	1
253	903693	NUT	1
254	A00323	WEAR PLATE	1
800	883807	GREASE	1
856	42186	ROUTER SUB-BASE	1
856	42188	ROUTER SUB BASE	1
856	42160	ROUTER EDGE GUIDE	1
861	A22987	KITBOX	1