







Parts List for 693LRPK Type 8

Item Number	Part Number	Description	Qty Required
1	903660	ARMATURE	1
2	903659	FIELD	1
2	A22750	NAMEPLATE	1
3	N030459	BRUSH & SPRING	2
4	A22756	SWITCH	1
5	839549	CORD	1
6	152684-00	TERMINAL	1
7	697861	TERMINAL,GROUND	1
10	A22752	ID LABEL	1
11	855284	BEARING	1
21	874299	FAN	1
22	803483	BRUSH CAP	2
23	873497	BRUSH HOLDER	2
24	878064SV	BEARING	1
25	A22753	REAR HOUSING	1
26	905489	HOUSING CAP	1
27	876669	COLLET 1/4 INCH	1
27	42999	1/4 INCH COLLET ASSY	1
27	42950	1/2 INCH COLLET ASSY	1
27	42975	3/8 INCH COLLET ASSY	1
27	42975	3/8 INCH COLLET ASSY	1
27	876671	COLLET 1/2 INCH	1
52	A11034	FRONT CASE	1
81	875893	COLLET NUT	1
83	872793	CHUCK	1
98	823030	SNAP-RING	1
99	A11331	WARNING LABEL	1

Parts List for 693LRPK Type 8

Item Number	Part Number	Description	Qty Required
100	878389	SCREW	2
101	A22709	OPEN-END WRENCH	1
103	803632	SET-SCREW	2
104	803496	WASHER	2
105	898484	PLUG	1
106	838312	SCREW	2
108	802426	RING	1
110	901266	STRAIN RELIEVER	1
111	800835	PIN	4
113	682063	CONNECTOR VS	1
115	892780	SCREW	1
119	A24391	WARNING LABEL	1
120	681260	SCREW & WASHER	2
121	874137	CORD CLAMP	1
122	878262	SCREW	2
123	887452	DUST SHIELD	1
201	A23103	BASE HOUSING	1
223	872998	DEPTH RING	1
225	908572	HANDLE	2
241	903120	SHAFT	1
242	688860	SCREW	3
243	A26327	NAMEPLATE	1
244	802417	WASHER	1
245	42186	ROUTER SUB-BASE	1
245	875807	SUB BASE	1
246	800869	SPRING	3
247	903114	BUCKLE	1

Parts List for 693LRPK Type 8

Item Number	Part Number	Description	Qty Required
249	911809	SCREW	2
252	903118	PIN	1
253	903693	NUT	1
254	A00323	WEAR PLATE	1
300	A22764	BASE	1
303	897187	COLUMN	2
304	698805	TURRET	1
305	896769	STOP SCREW	1
306	892552	LEVER	1
307	872242	SCREW	1
308	699675	CLAMP SCREW	1
309	892531	SPRING SS/A	1
310	699563	SET SCREW	1
311	699552	CLAMP PLUG	1
312	872729	ROLLED PIN	1
313	875050	KNOB	2
314	802425	WASHER	1
316	802752	WASHER	1
317	873309	SCREW	1
318	699399	POINTER	1
319	881290	KNOB	1
321	699991	DEPTH ROD	1
322	892174	NUT	1
323	699553	STOP COLLAR	1
324	850802	WASHER	1
325	A13321	SCALE	1
326	897161	KNOB	1

Parts List for 693LRPK Type 8

Item Number	Part Number	Description	Qty Required
327	873315	CLAMP	1
328	699558	BUSHING	1
329	699400	SPRING GUIDE	1
330	801752	SCREW	1
331	862641	NUT	1
332	883806	SCREW	1
333	685533	WASHER	1
334	850552	SPRING	1
335	895591	WASHER	1
336	860687	BALL	1
338	A22761	ID LABEL	1
339	886538	SCREW	1
340	872762	SHIELD	1
341	875807	SUB BASE	1
342	874117	SCREW	1
342	688860	SCREW	1
344	699556	BUSHING-STOP	1
345	699561	SPRING	1
346	872789	SHLDER BEARING	1
347	802430	LOCKWASHER	1
348	885517	NUT	1
350	903595	NUT	1
356	A24271	NAMEPLATE	1
361	A22762	WARNING LABEL	1
800	883807	GREASE	1
856	802876	ALLEN WRENCH	1
856	905230	HOLDER-WRENCH	1

Parts List for 693LRPK Type 8

Item Number	Part Number	Description	Qty Required
856	42186	ROUTER SUB-BASE	1
856	42160	ROUTER EDGE GUIDE	1
856	42188	ROUTER SUB BASE	1
861	A22986	KITBOX	1