


Parts Breakdown

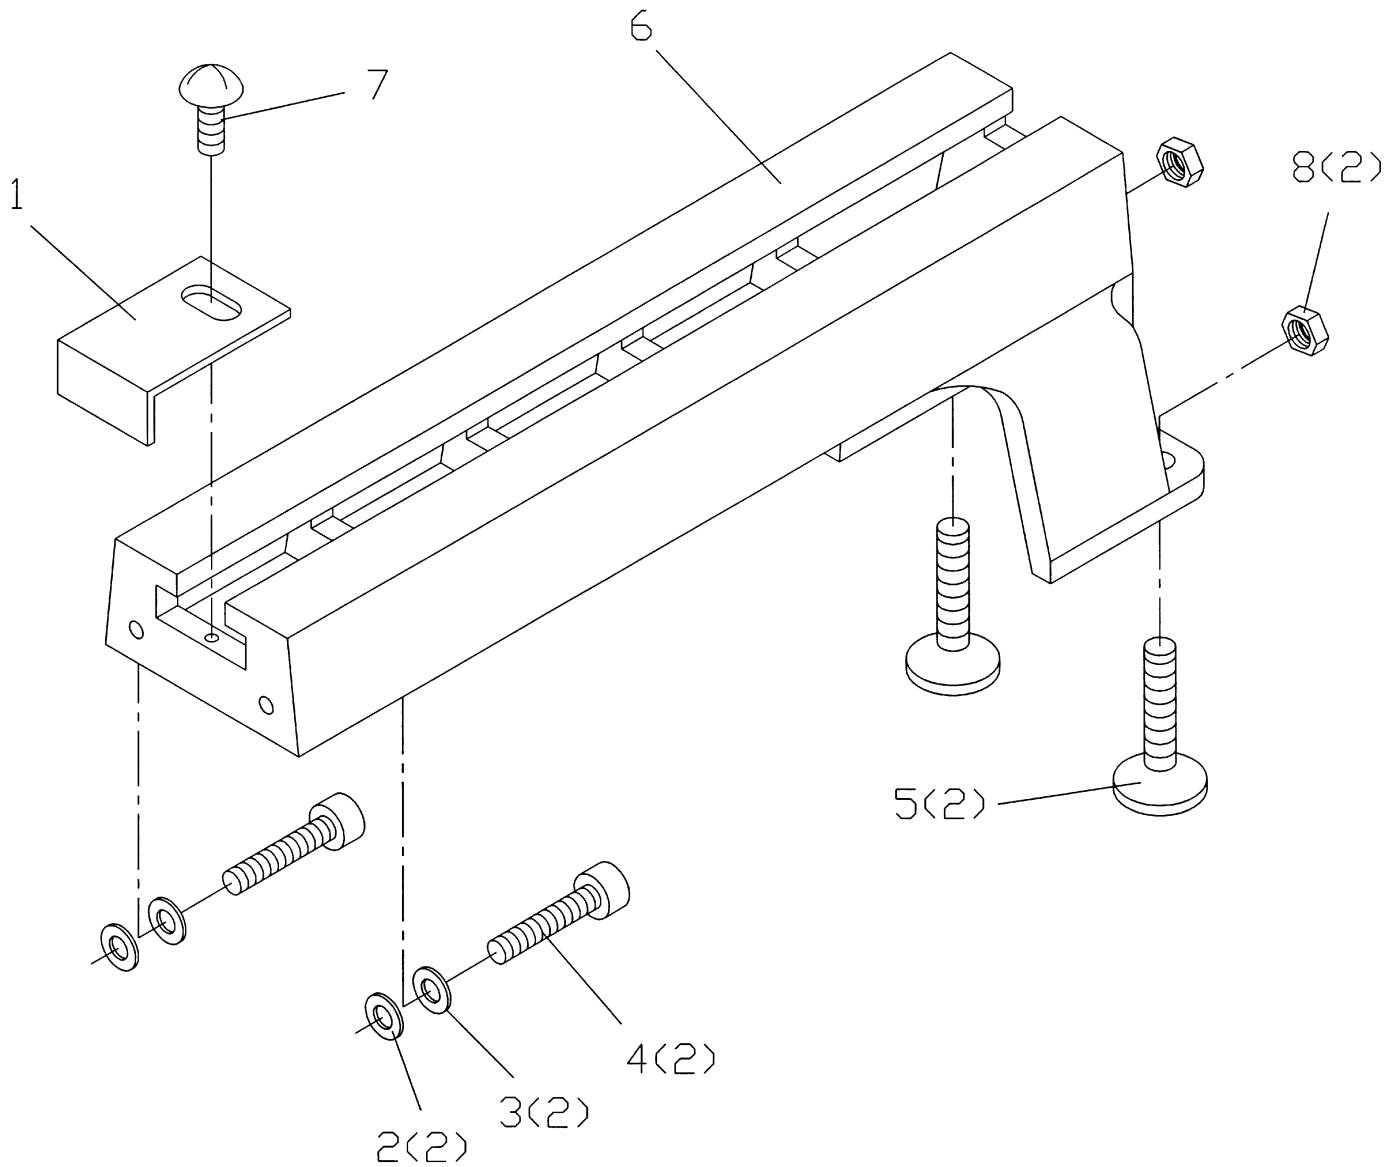

Parts List for JML-1014 Bed Extension

Index No.	Part No.	Description	Size	Quantity
1	JML-BE01	Plate		1
2	TS-0680031	Flat Washer	5/16	2
3	TS-0720081	Lock Washer	5/16	2
4	TS-0208061	Hex Socket Cap Screw	5/16 x 1	2
5	JML-BE05	Level Pad		2
6	JML-BE06	Extension Bed		1
7	TS-081B05	Screw	1/4 x 1/2	1
8	TS-0561021	Hex Nut	3/8	2