

:

:**ASW 9-10**
71123400980

				(USD)	
0010	31912101010	Motor housing	1		-
0020	31912087000	Motor housing	1		-
0030	40612065009	Sealing ring	1		-
0040	31415061003	Pressure piece	2		-
0055	54199026990	Motor	1		-
0060	30762421990	Electronics	1		-
0070	30220065000	Pressure piece	1		-
0080	30719666000	Connecting cable	1		-
0090	30762377020	Foil conductor	1		-
0100	32436074000	Flange	1		-
0105	42443003043	Circlip M4	2		-
0110	43075001030	Countersunk screw M3X20	2		-
0125	30109173030	Planetary gear	1		-
0130	32424025004	Cover	1		-
0140	32424026000	Cover	1		-
0150	30904043000	Leaf spring	1		-
0160	32805221000	Switch pushbutton	1		-
0170	30904044000	Leaf spring	1		-
0180	32805220000	Switch pushbutton	1		-
0190	31415101000	Pressure piece	1		-
0200	30901379000	Spiral spring	1		-
0210	32804001000	Slide switch	1		-
0220	32816710000	Switch pushbutton	1		-
0235	30508040010	Bush	1		-
0250	30104139000	Tool holder	1		-
0260	30103051001	Clutch ring	1		-
0270	41708017002	Ball	9		-
0280	30103052000	Clutch ring	1		-
0290	41708018000	Ball	3		-
0295	41708018000	Ball	6		-
0300	30901377000	Spiral spring	1		-
0310	32009074002	Ring	1		-
0320	41708014001	Ball	3		-
0330	32009073004	Adjusting ring	1		-
0340	40201022008	Straight pin	1		-
0350	32436073000	Flange	1		-
0360	42615090002	Circlip	1		-
0370	41701001054	Grooved ball bearing	1		-
0380	42644002007	Circlip	1		-
0395	32624192990	Disc	1		-
0410	30101038000	Clutch part	1		-
0420	30509048000	Thread ring	1		-
0430	30501352000	Sleeve	1		-
5000	32123002006	Adjustment spanner - torque	1		-
5030	31206137030	Gearbox housing 3/8" aussen	1		-
9000	34101094060	Operating instructions	1		-
9010	34151094000	List of spare parts ASW 9-10	1		-
9020	34110183060	Operating instructions	1		-

ASW 9-10
71123400980

- 7 112 00 - ASW 9-10
- 7 112 08 - ASW 9-10
- 7 112 09 - ASW 9-10
- 7 112 34 - ASW 9-10-250
- 7 112 36 - ASW 9-10-25T

