

Parts List for the RM-22T Rotary Machine

Index No.	Part No.	Description	Size	Quantity
1.....	RM22N-1	Body Assembly.....		1
2.....	RM22N-2	Base Assembly.....		1
10.....	RM22N-10	Key.....	6x6x20	4
11.....	RM22N-11	Upper Shaft.....		1
12.....	RM22N-12	Adjust Seat.....		1
13.....	RM22N-13	Spring.....		1
14.....	RM22N-14	Screw.....		1
16.....	RM22N-16	Handle Assembly.....		1
17.....	RM22N-17	Collar.....		1
18.....	RM22N-18	Spring Pin.....	5x32	1
19.....	RM22N-19	Spring Collar.....		1
20.....	RM22N-20	Spring.....		1
21.....	RM22N-21	Collar.....		1
22.....	RM22N-22	Set Screw.....	M12x40	2
23.....	RM22N-23	Hex Nut.....	M12	2
24.....	RM22N-24	Oil Cup.....		2
25.....	RM22N-25	Gear.....		2
26.....	RM22N-26	Adjusting Nut.....		1
29.....	RM22N-29	Collar.....		2
30.....	RM22N-30	Gauge Seat.....		1
31.....	RM22N-31	Gauge Stop.....		2
32.....	RM22N-32	Set Screw.....		1
33.....	RM22N-33	Knurled Nut.....		4
34.....	RM22N-34	Lower Shaft.....		1
36.....	RM22N-36	Gear Cover.....		1
37.....	RM22N-37	Button Head Hex Screw.....		2
38.....	RM22N-38	Handle.....		1
43.....	RM22N-43	Bushing.....		2
44.....	RM22N-44	Beading Roll (set).....		2
.....	RM22N-44-1	Turning Roll (set).....		2
.....	RM22N-44-2	Closing Roll (set).....		2
.....	RM22N-44-3	Jogging Roll (set).....		2
.....	RM22N-44-4	Flanging Roll (set).....		2
.....	RM22N-44-5	Crimping Roll (set).....		2
45.....	RM22N-45	Roll Nut.....		2
49.....	RM22N-49	Base.....		1
50.....	RM22N-50	Screw.....		1
52.....	RM22N-52	Handle.....		1
53.....	RM22N-53	Socket Head Cap Screw.....	M8x40	1
54.....	RM22N-54	Socket Head Cap Screw.....	M8x15	1
55.....	RM22N-55	Pin.....	8x45	1
56.....	RM22N-56	Set Screw.....	M8x16	1
57.....	RM22N-57	Set Screw.....	M6x6	1
58.....	RM22N-58	C-Ring.....	20	1
59.....	RM22N-59	Pin.....	5x20	1
60.....	RM22N-60	Hex Nut.....	M8	1
.....	RM22N-61	Spanner Wrench (not shown).....		1
.....	RM22N-ID	ID Label (not shown).....		1
.....	RM22N-W	Warning Label (not shown).....		1
.....	RM22N-J	JET Label (not shown).....		1