



Parts List for BDN200 Type 1

Item Number	Part Number	Description	Qty Required
1	5140058-29	SCREW	1
3	5140058-30	EXHAUST COVER	1
4	5140058-31	O-RING	1
8	5140058-32	SEAL	1
9	5140058-33	EXHAUST VALVE ASSY	1
10	5140058-34	SPRING	1
11	5140058-35	O-RING	1
12	5140058-36	HEAD VALVE PISTON	1
13	5140058-37	GASKET	1
14	000000-00	No Longer Available	1
16	5140058-39	PISTON DRIVER ASSY.	1
17	5140058-40	COLLAR	1
19	5140058-41	O-RING	1
22	5140058-42	NOZZLE	1
23	5140058-43	O-RING	1
24	000000-00	No Longer Available	1
25	5140058-45	E-RING	1
26	5140058-46	PIN	1
27	5140058-47	TRIGGER	1
29	000000-00	No Longer Available	1
30	5140058-49	SPRING PIN	1
38	5140058-50	SPRING	1
39	5140058-51	CONTACT TRIP	1
48	5140058-55	LEVER ASSEMBLY	1
57	5140058-52	NOMAR PAD	1
62	5140058-53	WARNING LABEL	1
63	5140058-54	WARNING LABEL	1