



Parts List for BT1400-B2 Type 3

Item Number	Part Number	Description	Qty Required
2	5140015-02	WASHER,SPRING	12
3	5140015-03	WASHER	12
10	5140015-10	SHIELD	1
11	5140015-11	SHIELD	1
12	5140015-12	RING	2
13	5140015-13	SCREW	2
14	5140015-14	SCREW	1
15	5140015-15	DUST EXTRACTION	1
16	5140015-16	SPRING PIN	1
17	5140015-17	SPRING PLATE	1
18	5140015-18	SPRING	1
19	5140015-19	BOLT	1
20	5140015-20	NUT	1
21	5140015-21	SCREW	1
22	5140015-22	BOLT	1
23	5140015-23	OUTER FLANGE	1
24	5140069-57	INNER FLANGE	1
25	5140015-25	SCREW	1
26	5140015-26	COVER,FRONT	1
27	5140069-58	SPINDLE	1
28	5140069-59	GEAR	1
29	5140069-60	FLANGE	1
30	5140015-30	SCREW	2
31	5140015-31	RING	1
32	5140069-61	KEY	1
33	5140015-33	BEARING	1
34	5140015-34	BEARING	1

Parts List for BT1400-B2 Type 3

Item Number	Part Number	Description	Qty Required
35	5140015-35	SPRING	1
36	5140015-36	BUTTON	1
37	5140015-37	SPINDLE LOCK	1
39	5140069-62	GEAR CASE	1
40	5140015-40	O-RING	1
41	5140015-41	BEARING	1
42	5140012-94	ARMATURE	1
43	5140015-43	BEARING	1
44	5140015-44	RUBBER SLEEVE	1
45	5140069-63	BAFFLE, FAN	1
46	5140015-46	SCREW	1
47	5140012-96	STATOR	1
48	5140047-27	FIELD CASE	1
49	5140015-49	SCREW	1
50	5140015-50	BRUSH	1
51	5140015-51	BRUSH HOLDER	1
52	5140015-52	SPRING	2
53	5140015-53	SCREW	4
54	5140015-54	SCREW	5
55	5140047-28	CAP	1
56	5140067-03	NAME PLATE	1
57	5140069-64	SCREW	1
58	5140069-65	SCREW	6
59	5140047-29	HANDLE & COVER	1
60	5140069-66	POWER CORD	1
61	5140047-30	CORD PROTECTOR	1
62	5140015-62	PROTECTOR	1

Parts List for BT1400-B2 Type 3

Item Number	Part Number	Description	Qty Required
63	5140069-67	CORD CLAMP	1
64	5140047-31	SCREW	4
65	5140047-32	SCREW	2
66	5140047-33	HANDLE	1
67	5140047-34	CLAMSHELL	1
68	5140015-68	CAPACITOR	1
69	5140047-35	SWITCH	1
70	5140047-36	TRIGGER	1
71	5140015-71	SCREW	1
72	5140015-72	SHIELD	1
73	5140015-73	SHIELD	1
74	5140015-74	TORSION SPRING	1
75	5140015-75	SCREW	1
76	5140015-76	PIVOT PLATE	1
77	5140015-77	BOLT	1
78	5140015-78	SHIELD	1
79	5140015-79	SCREW	4
80	5140015-80	WASHER	4
81	5140015-81	BEVEL KNOB	3
82	5140015-82	BAFFLE	1
83	5140015-83	NUT	1
84	5140015-84	PIN,SPLIT	1
85	5140015-85	LOCKING PIN	1
86	5140015-86	CAP	1
87	5140015-87	BEVEL SCALE	1
88	5140015-88	TRUNNION	1
89	5140015-89	HANDLE,ADJ.	1

Parts List for BT1400-B2 Type 3

Item Number	Part Number	Description	Qty Required
90	5140015-90	STUD	1
91	5140015-91	PIVOT SHAFT	1
92	5140015-92	SCREW	10
93	5140015-93	SPRING WASHER	10
94	5140015-94	WASHER	10
95	5140015-95	BEVEL POINTER	1
96	5140015-96	NUT	1
97	5140015-97	WASHER	1
98	5140015-98	TABLE	1
99	5140015-99	BEVEL POINTER	1
100	5140016-00	DETENT SPRING	1
101	5140016-01	BUTTON	1
102	5140047-37	HANDLE	1
103	5140016-03	SCREW	2
104	5140016-04	CLAMP PLATE	1
105	5140016-05	SCREW	2
106	5140016-06	DETENT PLATE	1
107	5140016-07	KERF PLATE	1
108	5140016-08	WEAR PLATE	2
109	5140016-09	BASE	1
110	5140016-10	BOLT	1
111	5140016-11	BRACKET	1
112	5140016-12	WRENCH	1
113	5140016-13	CLAMP	1
114	5140016-14	DUST BAG	1
115	5140016-15	BLADE	1
118	5140042-78	BRAND LABEL	1

Parts List for BT1400-B2 Type 3

Item Number	Part Number	Description	Qty Required
119	5140042-79	LABEL	1
120	5140042-81	CAUTION LABEL	1
121	5140042-82	LABEL	1
124	186769-00	SCREW	2
125	5140069-68	FLAT WASHER	1
126	5140069-69	SPRING,WASHER	1
127	5140069-70	WASHER	1
128	5140069-71	SPRING	1
129	5140069-72	WASHER	1
130	5140069-73	WASHER	1
131	5140069-74	SPRING WASHER	1
132	5140069-75	SET SCREW	1
133	5140069-76	MODULE	1