



Parts List for BT1650-AR Type 1

Item Number	Part Number	Description	Qty Required
1	5140100-10	PAN HEAD SCREW	2
2	5140100-11	POWER CORD	1
3	5140100-12	SPRING WASHER	8
4	5140100-13	HEX NUT	6
5	5140100-14	PAN HEAD SCREW	4
6	5140100-15	PLATE,COVER	1
7	5140100-16	SPRING WASHER	2
8	5140100-17	HEX HEAD SCREW	2
9	5140100-18	BASE	1
10	5140100-19	HEX HEAD SCREW	4
11	5140100-20	HOUSING SET	1
12	5140100-21	SUPPORT TABLE	1
13	5140100-22	INDICATOR	1
14	5140100-23	PAN HEAD SCREW	1
15	5140100-24	TILT BRACKET	1
16	5140100-25	SPRING WASHER	10
17	5140100-26	SPRING	1
18	5140100-27	FLAT WASHER	4
19	5140100-28	HEX HEAD BOLT	1
20	5140100-29	SPRING	1
21	5140100-30	TENSION BOLT	1
21	5140100-31	PULL SCREW	1
21	5140100-32	WEDGE NUT	1
21	5140100-33	PULL WEDGE	1
21	5140100-34	KNOB	1
22	5140100-35	BOTTOM ARM ROCKER	1
23	5140100-36	SPRING WASHER	2

Parts List for BT1650-AR Type 1

Item Number	Part Number	Description	Qty Required
24	5140100-37	HEX HEAD BOLT	2
25	5140100-38	BEARING FLANGE	4
26	5140100-39	PAN HEAD SCREW	1
27	5140100-40	SCREW- ROUND HEAD	4
28	5140100-41	RETAINER	2
29	5140100-42	ROCKER ASSEMBLY	1
30	5140100-43	HEX NUT	1
31	5140100-44	HEX HEAD BOLT	1
32	5140100-45	SPACER BUMPER	1
33	5140100-46	SPACER BEARING	1
34	5140100-47	LINK ASSEMBLY	1
35	5140100-48	ALLEN WRENCH	1
36	5140100-49	CORD CLAMP	1
38	5140100-50	HEX HEAD BOLT	1
39	5140100-51	FLAT WASHER	4
40	5140100-52	BLADE HOLDER	1
41	5140100-53	BLADE HOLDER	1
42	5140100-54	HEX HEAD BOLT	2
43	5140100-55	TABLE INSERT	1
44	5140100-56	KNOB	1
46	5140100-58	PAN HEAD SCREW	4
47	5140100-59	DROP FOOT	1
49	5140100-60	FLAT WASHER	1
50	5140100-61	SWITCH COVER	1
51	5140100-62	MOTOR	1
52	5140100-63	ECCENTRIC	1
53	5140100-64	TABLE	1

Parts List for BT1650-AR Type 1

Item Number	Part Number	Description	Qty Required
54	5140100-65	HEX HEAD BOLT	1
55	5140100-66	PIPE	1
56	5140100-67	SUPPORT ROD	1
57	5140100-68	BELLOWS RETAINER	1
58	5140100-69	BELLOWS	1
59	5140100-70	TOOTH WASHER	4
60	5140100-71	SET SCREW	1
61	5140100-72	PAN HEAD SCREW	1
63	5140100-73	PCB	1
64	5140100-74	PAN HEAD SCREW	2
65	5140100-75	PAN HEAD SCREW	5
66	5140100-76	PAN HEAD SCREW	3
67	5140100-77	BLOWER TUBES	1
68	5140100-78	KNOB	1
69	5140100-79	BEARING FENCE	2
70	5140100-80	SET PLATE	1
71	5140100-81	SWITCH CASE	1
72	5140100-82	SWITCH	1
73	5140100-83	RUBBER FOOT	4
74	5140100-84	PAN HEAD SCREW	4
75	5140100-85	COVER	1
76	5140100-86	ALLEN WRENCH	1
79	5140100-87	FLAT WASHER	1
80	5140100-88	PAN HEAD SCREW	2
81	5140100-89	KNOB	1
82	5140100-90	SPEED CONTROLLER	1
85	5140100-91	TOOTH WASHER	1

Parts List for BT1650-AR Type 1

Item Number	Part Number	Description	Qty Required
86	5140100-92	BLADE BOX	1
87	5140100-93	TOOTH WASHER	1
88	5140100-94	HEX HEAD BOLT	1