



Parts List for BV1400-AR Type 1

Item Number	Part Number	Description	Qty Required
1	5140018-01	SHOULDER BAG	1
2	5140018-02	INLET ELBOW	1
3	5140018-03	BLOWER NOZZLE	1
4	5140018-04	CORD PROTECTOR	1
5	5140018-05	CABLE & PLUG	1
6	5140018-06	SCREW	10
7	5140018-07	MOTOR BRACKET,U	1
8	5140018-08	WAVY WASHER	2
9	5140018-09	HOUSING CLAMSHL	1
10	5140018-10	BRUSH PLATE	1
11	5140018-11	BRUSH PLATE	2
12	5140018-12	BRUSH HOLDER	2
13	5140018-13	BRUSH	2
14	5140018-14	FIELD	1
15	5140018-15	BALL BEARING	2
16	5140018-16	RETAINING RING	2
17	5140018-17	ARMATURE	1
19	5140018-19	BEARING SUPPORT	1
20	5140018-20	FAN	1
21	5140018-21	SCREW	2
22	5140018-22	SWITCH	1
23	5140018-23	CLAMPING PLATE	2
24	5140018-24	SCREW	2
25	5140018-25	CORD CLAMP	1
26	5140018-26	PCB	1
27	5140018-27	COVER	1
28	5140018-28	BRUSH SPRING	2

Parts List for BV1400-AR Type 1

Item Number	Part Number	Description	Qty Required
29	5140018-29	MAIN SWITCH ASM	1
30	5140018-30	BLOWER TUBES	1
31	5140018-31	CLAMSHELL	1
32	5140018-32	GUARD	1
33	5140018-33	CORD	1
34	5140018-34	TUBE,UPPER	1
35	5140018-35	LOWER TUBE	1
36	5140018-36	SCREW	2
37	5140018-37	WASHER	1