



## Parts List for CCS818 Type 2

Item Number	Part Number	Description	Qty Required
1	330019-03	SCREW	18
2	330019-05	SCREW,PLASTITE	1
3	622895-00	SPROCKET	1
4	90519191	CLAMP	1
5	90519190	SCREW	1
6	90507689	SCREW SKT HD CAP GAI	2
7	624521-00	RETAINING RING	1
8	90550462	TRIGGER	1
9	90502128	ACTUATOR	1
10	90502132	GUARD	1
11	90502134	BAR	1
12	90502135	COVER	1
13	90517008	TENSION SPRING	1
14	90502137	SPRING, TRIGGER	1
15	90502141	CLAMP	1
16	90502142	CHAIN COVER	1
17	90502143	CLIP	1
18	90502145-02	TRANSMISSION ASSY.	1
20	90502469	SCREW	5
21	90569955	CLAMSHELL SET	1
22	90502720	SWITCH	1
23	90502723	HEX WRENCH	1
24	90502764	HANDLE	1
25	624735-00	BOTTLE	1
27	623382-00	CHAIN	1
28	623381-00	BAR	1
29	624732-00	SHEATH	1

## Parts List for CCS818 Type 2

Item Number	Part Number	Description	Qty Required
30	90513361	SWITCH	1
31	90519433	WAVY WASHER	1
866	90554640	BATTERY PACK	1
867	5102026-00	BATTERY CAP	1
871	90571729	CHARGER	1