



Parts List for CD120S Type 3

Item Number	Part Number	Description	Qty Required
1	149518-01	SCREW	1
2	5147554-00	KEYLESS CHUCK	1
3	5101240-00	SPRING PIN	1
4	148354-03	BIT CLIP	1
5	311978-01	F/R ACTUATOR	1
6	311993-00	SCREW	6
7	498511-00	SCREW	1
8	5148194-00	TRANSM.& CLUTCH	1
9	90534528	SWITCH	1
14	5102939-13	CLAMSHELL SET	1
15	5102349-01	MOTOR&PINION	1
16	5102538-27	NAMEPLATE	1
17	5102537-01	ID LABEL	1
19	5103587-00	BIT HOLDER ASSY	1
23	5100976-00	TERMINAL BLOCK	1
25	5100035-01	SPRING	2
856	71-399	MAG.BIT TIP HOLDER	1
861	5102001-09	KITBOX	1
866	HPB12	BATTERY PACK	1
867	5102026-00	BATTERY CAP	1
871	90500926	CHARGER	1