



Parts List for CD1800K Type 2

Item Number	Part Number	Description	Qty Required
1	497014-59	CLAMSHELL	1
2	311978-01	F/R ACTUATOR	1
3	148354-03	BIT CLIP	1
4	607918-41	SCREWDRIVER BIT	1
5	497030-04	VSR DC SWITCH	1
6	497020-38	TRANSMISSION	1
7	000000-00	No Longer Available	1
8	330013-03	SCREW	4
9	498796-00	KEYLESS CHUCK	1
10	149518-01	SCREW	1
11	311975-10	TOP INSERT	1
12	000000-00	No Longer Available	1
13	497017-24	LABEL,ID	1
14	046376-00	PIN	1
15	330019-00	SCREW	2
16	PS145	18V BATTERY	1
17	90500930-01	PS185 18V CHARGER	1
861	497641-05	LATCH	2
861	499124-13	KIT BOX	1