



Parts List for CD18SRK-2 Type 4

Item Number	Part Number	Description	Qty Required
2	5100799-09	CHUCK	1
3	5101240-00	SPRING PIN	1
4	148354-03	BIT CLIP	1
5	311978-01	F/R ACTUATOR	1
6	311993-00	SCREW	6
7	498511-00	SCREW	1
8	5103416-02	TRANSMISSION	1
9	5102586-04	VSR SWITCH	1
14	000000-00	No Longer Available	1
16	000000-00	No Longer Available	1
17	5102537-01	ID LABEL	1
19	5103587-00	BIT HOLDER ASSY	1
20	497927-02	RETAINING CLIP	1
21	497935-02	BEARING WASHER	1
22	5100115-00	BIT RELEASE RING	1
23	5100976-00	TERMINAL BLOCK	1
24	5100117-00	SPRING	1
25	5100035-01	SPRING	2
26	5100776-00	HUB CAP	1
27	5101752-00	WASHER	1
28	5102929-00	INSULATOR	2
856	71-399	MAG.BIT TIP HOLDER	1
861	499124-14	KIT BOX	1
866	HPB18	BATTERY	2
867	5102026-00	BATTERY CAP	2
871	5103069-10	CHARGER	1
871	5103069-12	CHARGER	1