



Parts List for CRT129K Type 1

Item Number	Part Number	Description	Qty Required
1	497014-30	CLAMSHELL SET	1
2	311978-01	F/R ACTUATOR	1
3	148354-03	BIT CLIP	1
4	607918-41	SCREWDRIVER BIT	1
5	497030-40	VSR SWITCH	1
6	497015-01	TOP COVER	1
7	311979-00	SHIFTER BUTTON	1
8	330013-03	SCREW	4
9	498796-00	KEYLESS CHUCK	1
10	149518-01	SCREW	1
11	311965-01	SHIFTER WIRE	1
12	497018-29	NAMEPLATE	1
13	497017-08	IDENT. LABEL	1
14	418719-04	MOTOR & PINION	1
15	000000-00	No Longer Available	1
16	PS130	12V BATTERY	1
17	418352-01	PS160 12V CHARGER	1
18	330019-00	SCREW	2
19	046376-00	PIN	1
861	418759-02	BOX,KIT	1