



## Parts List for D21582K-QS Type 1

Item Number	Part Number	Description	Qty Required
1	1002571-00	ARMATURE	1
2	1002575-00	FIELD	1
3	1002741-00	CORD SET	1
4	1002617-00	PCB ASSY	1
5	492301-00	SWITCH	1
6	1002577-00	MOTOR HOUSING ASSY.	1
7	1002578-00	GEAR CASE COVER	1
8	1002620-00	GEARBOX	1
9	1002621-00	SPINDLE	1
10	492277-00	MOTOR HOUSING	1
11	492283-00	BAFFLE	1
12	330065-06	SCREW	4
13	492282-00	BRUSH COVER	2
14	1002581-00	BRUSH & LEAD	2
15	1002582-00	BRUSH HOLDER	2
16	330065-25	SCREW	4
17	492281-00	GEAR CASE COVER	1
18	1002739-00	GEAR BOX HOUSING	1
19	1002583-00	SELECTOR	1
20	1002584-00	LEVER	1
21	1002585-00	O-RING	1
22	1002586-00	CORD PROTECTOR	1
23	492273-00	HANDLE HOUSING	1
24	330019-19	SCREW	4
25	1002587-00	BEARING	1
26	1002588-00	SEAL	1
27	1002622-00	SEAL	2

## Parts List for D21582K-QS Type 1

Item Number	Part Number	Description	Qty Required
28	1002590-00	BEARING	1
29	1002589-00	NEEDLE BEARING	1
30	493899-00	SCREW	1
31	1002591-00	CIRCLIP	1
32	1002592-00	GEAR	1
33	1002597-00	RING	1
34	1002598-00	PIN	1
35	1002593-00	SCREW	2
36	1002594-00	LOCK WASHER	2
37	1002595-00	DISC	2
38	1002596-00	RING	2
39	1002599-00	NEEDLE BEARING	1
40	1002600-00	NEEDLE BEARING	1
41	1002623-10	SEAL	1
52	330065-09	SCREW	4
53	330019-15	SCREW,PLASTITE	4
54	492302-00	TRIGGER	1
55	330065-05	SCREW	2
56	1002613-00	CORD CLAMP	1
57	1002624-00	HOLDER	1
58	1002614-00	SCREW	1
59	492326-00	COLLAR	1
60	1002625-00	DISC	1
61	492548-00	ADAPTOR	1
62	1002626-00	SEAL	2
63	1002627-00	VALVE	1
64	1002628-00	CONNECTOR	1

## Parts List for D21582K-QS Type 1

Item Number	Part Number	Description	Qty Required
65	N021120	HANDLE	1
66	1002629-00	HOSE ASSY.	1
67	1002630-00	SEAL	2
68	1002615-00	SIDE HANDLE ASY	1
69	1002616-00	CLUTCH ASSY.	1
70	1002655-00	SCREW	1
71	1003199-00	SEAL KIT	1
90	1004303-00	SPANNER	1
95	868111-00	SPANNER	1
800	1003362-00	GREASE	1
806	1003363-00	OIL	1
811	1003464-00	TUBE SILICONE	1
836	559671-99	SERVICE TOOL	1
837	559672-99	SERVICE TOOL	1
838	559673-99	SERVICE TOOL	1
839	559674-99	SERVICE TOOL	1
840	559675-99	SERVICE TOOL	1
841	559676-99	SERVICE TOOL	1
842	559677-99	SERVICE TOOL	1
843	559678-99	SERVICE TOOL	1
844	559680-99	SERVICE TOOL	1
845	559690-99	SERVICE TOOL	1
846	559692-99	SERVICE TOOL	1