 
 


862

 


18

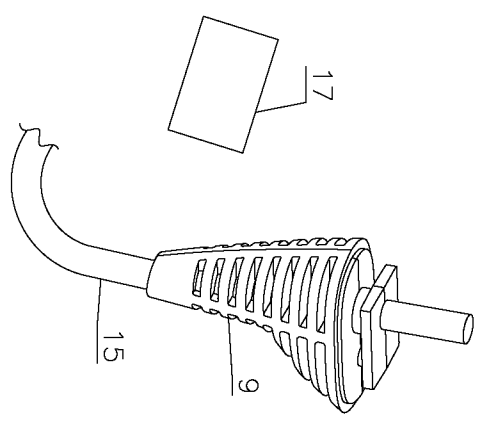



17

15

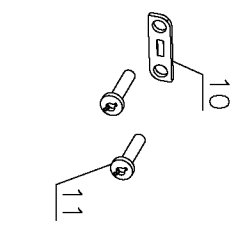


10

  
11

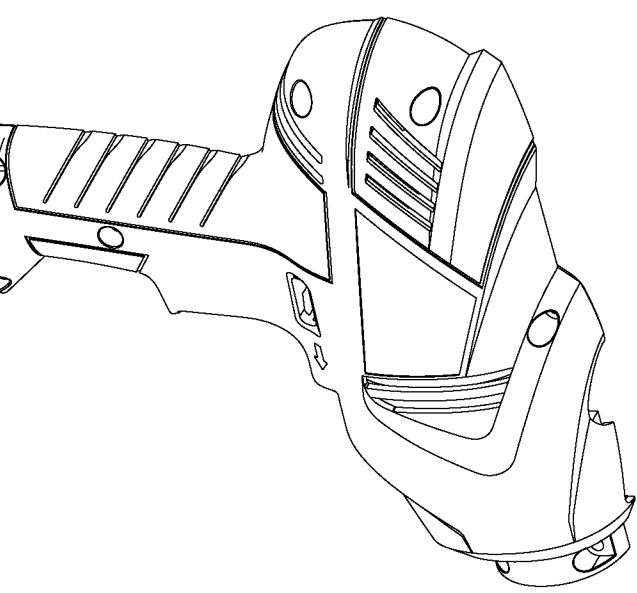


16

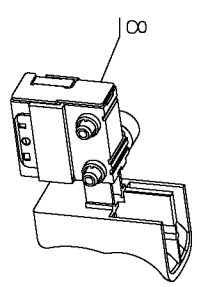 

8

 


6

 


7



 
4

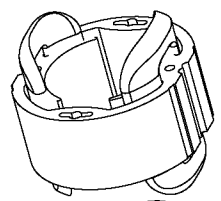



19

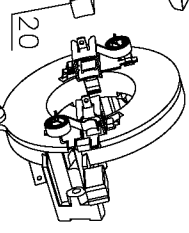 


20

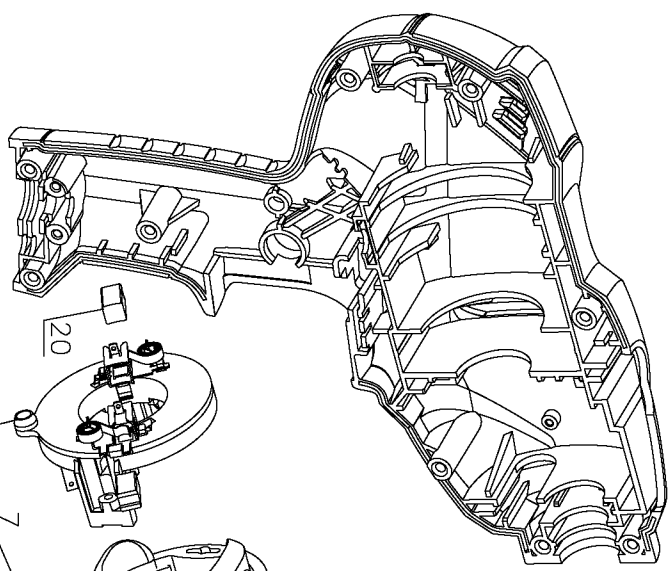 


12

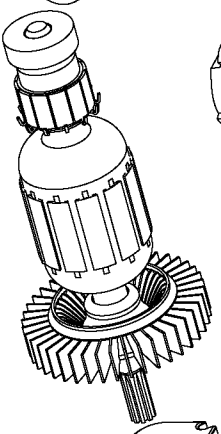  


14

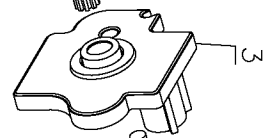 

3

 

2

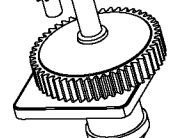 

1

## Parts List for DR250B-B3LZ Type 1

Item Number	Part Number	Description	Qty Required
1	626482-00	KEYLESS CHUCK	1
2	157312-02	CHUCK SCREW	1
3	90545243	REAR BRG. PLT. ASSY.	1
4	629167-00	COIL SPRING	1
6	630240-00	BAR	1
7	633510-00	BAR,PIVOT	1
8	90510030	SWITCH	1
9	635395-00	CORD PROTECTOR	1
10	329301-00	CLAMP,CORD	1
11	330019-03	SCREW	2
12	330019-63	SCREW	2
14	612861-00	BIT HOLDER	1
15	90511915	CORDSET	1
16	330019-04	SCREW,PLASTITE	9
17	493312-00	WARN LABEL	1
18	607918-55	SCREWDRIVER BIT	1
19	635697-01	BRUSH RING ASY	1
20	90552990	BRUSH	2
862	90533670	TOOL BAG	1