



## Parts List for DW311K Type 1

Item Number	Part Number	Description	Qty Required
1	634812-00SV	ARMATURE	1
2	634810-00SV	FIELD	1
3	874289	BRUSH & RETAINER ASY	2
4	5140102-37	SWITCH KIT	1
5	330081-08	CORD, 16-2SJ	1
8	882704	SCREW	2
11	855284	BEARING	2
12	802302	RING	2
14	879421	SCREW	1
15	906952	SCREW	2
16	911450SV	SS/A-SHOE ASSEMBLY	1
17	906725	INSULATOR BOOT	1
18	906701	FRONT HOUSING	1
19	879429	SPACER	1
20	853246	RING	1
21	890819	WOBBLE PLATE	1
27	883098	TUBE-CARRIER	1
29	879408	SCREW	2
30	882255	SCREW	2
31	648924-00	SPRING	1
33	897774	COLLAR	1
34	648594-00	CLAMP PIN	1
35	632169-00	ORBIT SELECTOR	1
36	882187	SCREW	2
37	847418	SPRING	1
39	879458	PLATE	1
40	879457	FELT SEAL	1

## Parts List for DW311K Type 1

Item Number	Part Number	Description	Qty Required
41	684931	WASHER	1
42	902998	SEAL	1
44	330019-19	SCREW	4
45	906705	INTERMEDIATE PLATE	1
46	883097SV	DRIVE SHAFT	1
47	330019-13	SCREW,M4X19	9
48	882703	SCREW	4
52	631342-00	FIELD CASE	1
56	906043	PLATE	1
57	631234-00	HANDLE SET	1
58	697965	RET RING	1
59	882348	FELT SEAL	2
63	694432	BEARING MOUNT	1
65	801852	SEAL	1
71	908873	FELT SEAL	1
72	651021-00	SHOE LEVER	1
78	450212-00	TERMINAL,MALE	1
79	878904	FAN	1
80	450877-00	CORD CLAMP	1
81	330019-02	SCREW,PLASTITE	3
82	638557-00	SPIRAL PIN	1
83	636945-00	ID LABEL	1
84	636946-00	NAMEPLATE	1
85	636944-00	WARNING LABEL	1
86	898878	LEAD	1
87	865321	BRUSH INSULATOR	2
88	865323	BRUSH HOLDER	2

## Parts List for DW311K Type 1

Item Number	Part Number	Description	Qty Required
89	330005-01	PROTECTOR,CORD	1
90	330003-17	BEARING,BALL	1
91	879431	BEARING-BALL	3
92	879401	GEAR	1
93	N074353	RECIP-SHAFT KIT	1
800	286445-00	GREASE.14 OZ.	1
800	875667	LUBRICANT-4LBS	1
800	875914	TUBE GREASE	1
846	639561-00	LIMITER	1
861	635353-00	KIT BOX	1