



## Parts List for DW341-BR Type 11

Item Number	Part Number	Description	Qty Required
1	1006582-01	ARMATURE 115V	1
2	1006581-01	FIELD 115V	1
3	495748-00	BRUSH HOLDER PLATE	1
4	N055694	SWITCH	1
5	487918-03	BRUSH	2
6	445860-00	SPRING,BRUSH	2
7	330122-46	CORD & PLUG	1
8	330005-01	PROTECTOR,CORD	1
9	330019-02	SCREW,PLASTITE	2
10	821070	CORD CLAMP	1
11	330065-25	SCREW	2
15	N075483	BLACK LEAD	1
16	N075484	RED LEAD	1
20	479202-01	CLAMSHELL SET	1
21	330065-27	SCREW	2
22	479179-00	CASTING	1
23	330045-09	SCREW	4
24	490331-01	CARRIER	1
25	1007091-00	FELT SEAL	1
26	490457-00	COMPRESSION SPRING	1
27	490330-01	SUPPORT BEARING	1
28	1006574-00	FELT SEAL	2
29	496596-00	SEAL	1
30	490329-01	BEARING	1
31	1006502-00	GEARCASE COVER	1
32	479820-01	WASHER	1
40	479190-00	SHAFT	1

## Parts List for DW341-BR Type 11

Item Number	Part Number	Description	Qty Required
43	370167-00	SCREW	2
44	479338-00	BLADE CLAMP	1
45	324006-00	SCREW	4
46	582261-00	CLAMP	1
47	582257-00	DRIVE ROLLER	1
48	479820-00	WASHER	1
49	1007735-00	SCREW	2
50	N080218	GEAR	1
60	330004-01	BEARING,NEEDLE	2
61	479186-01	ECCENTRIC	1
62	491122-00	GUARD L.H.	1
63	491123-00	GUARD R.H.	1
64	479203-00	NOZZLE	1
65	479189-01	WEIGHT,BALANCE	1
68	479192-00	FORK	1
69	479194-01	ROLLER ASSY	1
70	490349-00	THRUST PLATE	1
71	330016-01	WASHER	1
79	1007820-00	SPRING	1
80	479181-01	CASTING	1
81	490627-00	BAFFLE, FAN	1
82	605040-67	BEARING	1
83	494315-01	QUADRANT	1
85	1007797-00	LEVER	1
86	1007796-00	CLIP	1
87	330041-55	PIN	1
88	1007509-00	SHOE ASSY.	1

## Parts List for DW341-BR Type 11

Item Number	Part Number	Description	Qty Required
89	479966-00	ANTI-SPLINTER DEVICE	1
90	1005085-00	COVER PLATE	1
95	322319	NUT	1
100	098120-16	SCREW	2
101	98197-06	LOCK WASHER	2
102	479532-00	CLAMP	1
110	1009149-00	SCREW	1
120	487848-02	HEX WRENCH (4MM)	1
800	870889-03	GREASE	1
817	395657-00	ID LABEL	1
821	N071657	NAMEPLATE	1
861	1006384-00	KIT BOX	1