



Parts List for DW852-AR Type 5

Item Number	Part Number	Description	Qty Required
1	186178-01	ARMATURE	1
2	186179-01	FIELD	1
3	949825-04	SWITCH,LOCK-ON	1
4	940160-03	CUT-OFF BRUSH	2
5	185283-01	CORD & PLUG	1
7	933058-00	SCREW	3
8	932369	WASHER	3
9	947451-03	FLANGE ASSY.	1
10	860083-03	NUT	1
11	930925	WASHER	1
12	930929	FLANGE	1
13	949892-07	SCREW	1
14	931942-02	9IN GUARD	1
15	330024-14	SCREW,PLASTIC	4
16	947962-00	COVER,GEARCASE	1
17	578243-00	SPINDLE	1
18	574853-11	BEARING	1
19	930924	FLANGE	1
20	930923	SEAL	1
21	930922	SPACER	1
22	932522	GEAR & PINION	1
23	186210-00	SCREW	4
24	401048-00	GEARCASE ASSY	1
25	937098	CLIP	1
26	930909	SEAL	1
27	574853-09	BEARING	1
28	931067	SEAL	1

Parts List for DW852-AR Type 5

Item Number	Part Number	Description	Qty Required
29	931062	SPACER	1
30	930028-00	RING, O	1
31	931066	FLANGE	1
32	938331	SPACER	1
33	330003-36	BEARING,BALL	1
34	938332	SLEEVE	1
35	933499	SIDE HANDLE	1
36	931072	SCREW	2
37	402808-00	BAFFLE	1
38	949405-03	BRUSH PLATE	1
39	402816-00	SPRING,BRUSH	2
40	578193-00	FIELD CASE	1
41	578194-00	HANDLE & COVER	1
42	933364-02	COVER,BRUSH	2
43	930934	SHOCK ABSORBER	4
44	947964-01	PROTECTOR,CORD	1
45	931297	SCREW	4
46	931469-02	SCREW	4
47	930284-01	SCREW	2
48	931477	CORD CLAMP	1
49	938733	WRENCH	1
50	807043	HEX KEY	2
51	403462-00	LEAD	2
52	578506-12	NAMEPLATE	1
53	578476-00	ID LABEL	1