



Parts List for FS1442K12 Type 1

Item Number	Part Number	Description	Qty Required
1	497014-23	CLAMSHELL SET	1
2	311978-01	F/R ACTUATOR	1
3	148354-03	BIT CLIP	1
4	607918-41	SCREWDRIVER BIT	1
5	497030-40	VSR SWITCH	1
6	497015-01	TOP COVER	1
7	311979-00	SHIFTER BUTTON	1
8	330013-03	SCREW	4
9	498796-02	KEYLESS CHUCK	1
10	149518-01	SCREW	1
11	311965-01	SHIFTER WIRE	1
12	497039-49	NP:FS1442 T1	1
13	000000-00	No Longer Available	1
14	497025-00	MOTOR & PINION	1
15	497026-02	GEARBOX/CLUTCH	1
16	PS140	14.4V BATTERY	1
17	PS1MVC	1 HOUR CHARGER	1
18	330019-00	SCREW	2
19	046376-00	PIN	1
861	499125-00	KIT BOX	1
875	497641-05	LATCH	2