



Parts List for FS1800CS Type 1

Item Number	Part Number	Description	Qty Required
1	497492-00	HANDLE ASSY.	1
2	497496-09	CLAMSHELL SET	1
3	498175-00	SHROUD ASSY	1
4	486563-00	SCREW	2
5	497549-01	BAFFLE	1
6	497515-10	SWITCH (ON-OFF)	1
7	5100034-00	TERMINAL BLOCK	1
8	497486-02	PIVOT SCREW	1
9	497525-08	MOTOR & GEARBOX	1
10	497524-00	STOPPER	1
11	497577-00	EYELET	1
12	498156-00	SCREW	1
13	497495-00	SCREW	10
14	497503-00	CRANK,LOCK-OFF	1
15	497504-02	SPRING,LOCK-OFF	1
16	497476-00	SCREW,BLADE	1
17	497477-01	WASHER,OTR CLMP	1
18	498178-06	BLADE,CDLS.SAW	1
19	497478-01	IN.CLAMP WASHER	1
20	497479-00	RING,RETAINING	1
21	497480-00	GUARD,LOWER	1
22	000000-00	No Longer Available	1
23	98000-09	WRENCH,HEX-4MM	1
24	000000-00	No Longer Available	1
25	497552-00	KERF INDICATOR	1
26	497551-02	SCREW	1
27	497583-00	PLUG,WRENCH	1

Parts List for FS1800CS Type 1

Item Number	Part Number	Description	Qty Required
28	497915-00	KNOB	1
29	497558-00	BOLT	1
30	497898-00	NUT,ACORN	1
31	497576-05	LEVER,ADJUST.	1
32	497575-00	E-RING	1
33	5100035-03	SPRING	2
34	497485-00	HEXSCREW,M6X15	1
35	498513-00	WASHER,SPRING	1
39	497472-07	IDENT. LABEL	1
40	497473-15	NAMEPLATE	1
861	5100857-06	STORAGE BAG	1
866	90503508	BATTERY PACK	1
867	5102026-00	BATTERY CAP	1
871	5103069-12	CHARGER	1