 
 
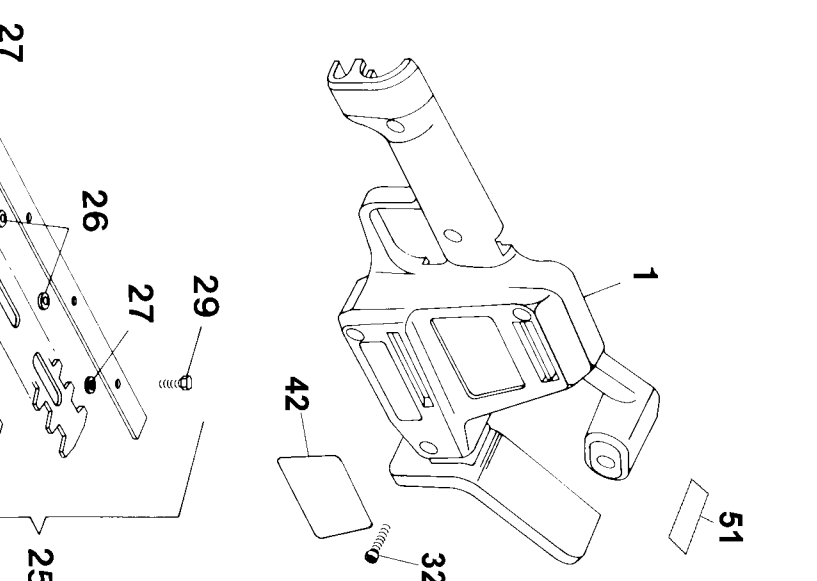 


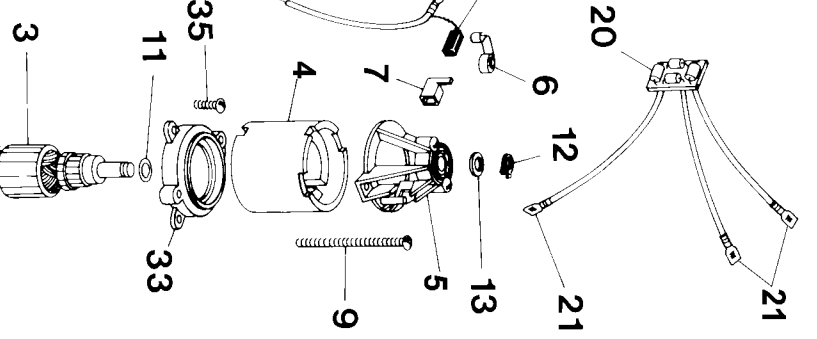

847

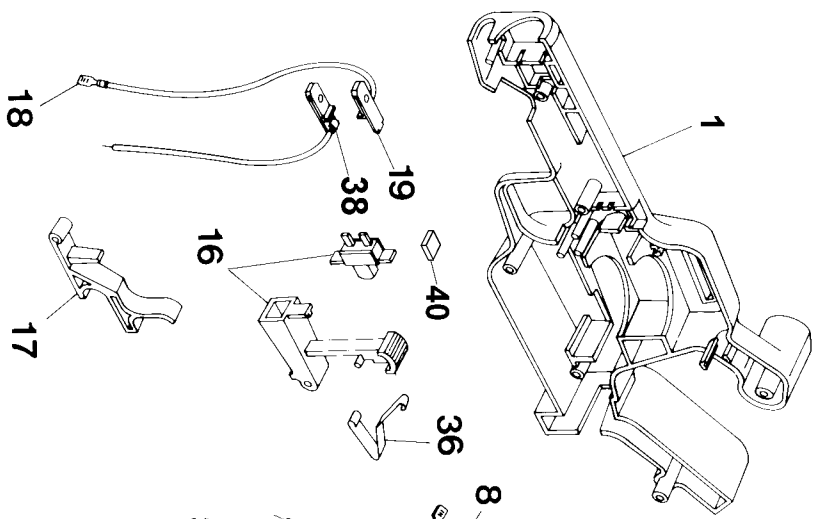

Parts List for HT200 Type 3

Item Number	Part Number	Description	Qty Required
1	000000-00	No Longer Available	1
3	573201-01	ARMATURE & FAN	1
4	000000-00	No Longer Available	1
5	000000-00	No Longer Available	1
6	000000-00	No Longer Available	2
7	000000-00	No Longer Available	2
8	148875-00	BRUSH	2
9	330019-09	SCREW	2
11	157315-00	WASHER,SPRING	1
12	000000-00	No Longer Available	1
13	148902-00	WASHER,PLAIN	1
14	148991-01	CASE,GEAR	1
16	000000-00	No Longer Available	1
17	148997-00	CLAMP,CORD	1
18	000000-00	No Longer Available	1
19	87486-00	CONTACT,TERM.	1
20	384920-01	PC BOARD	1
21	136086-02	TERMINAL	3
23	90516433SV	GEAR ASSY	1
24	000000-00	No Longer Available	1
25	603759-01	BLADE ASSEMBLY	1
26	071653-13	SPACER	1
27	071653-13	SPACER	2
28	381980-00	NUT,STOP	5
29	88782-00	SCREW	5
30	397589-00	WASHER	1
31	330045-13	SCREW,TAPTITE	4

Parts List for HT200 Type 3

Item Number	Part Number	Description	Qty Required
32	330019-04	SCREW,PLASTITE	7
33	000000-00	No Longer Available	1
34	133952-00	WASHER	1
35	330045-05	LOCK SCREW	3
36	149333-00	SPRING	1
37	330001-08	BEARING,SLEEVE	1
38	151625-00	BLADE,POLARIZED	1
40	382427-00	PAD,PRESSURE	1
42	000000-00	No Longer Available	1
51	000000-00	No Longer Available	1
847	679853-00	BLADE SPACER KT	1