




1

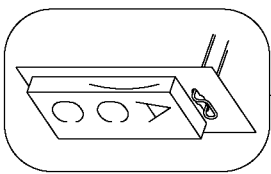


856

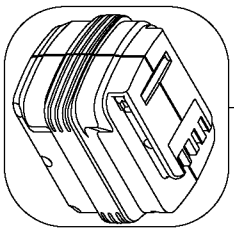


866

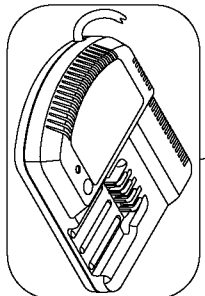

871

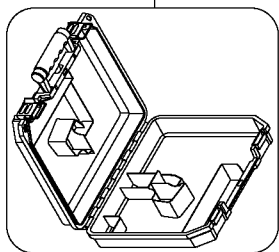

861

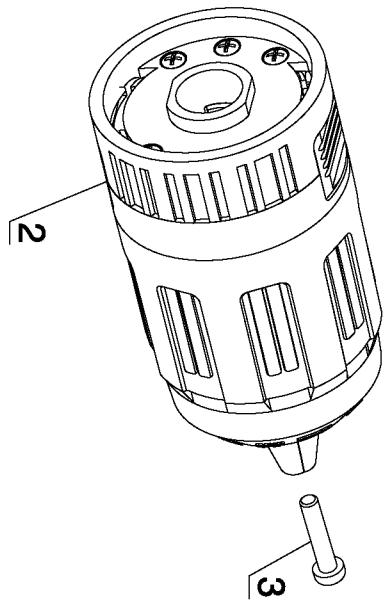

2

3

## Parts List for PC1800HD Type 1

Item Number	Part Number	Description	Qty Required
1	90542505	DRILL, HAMMER	1
2	90534907	CHUCK	1
3	5103096-01	SCREW	1
856	90536563	SIDE HANDLE ASY	1
861	90532919	KIT BOX	1
866	90543485	18V BATTERY	1
871	90545445	CHARGER	1