


# PN100

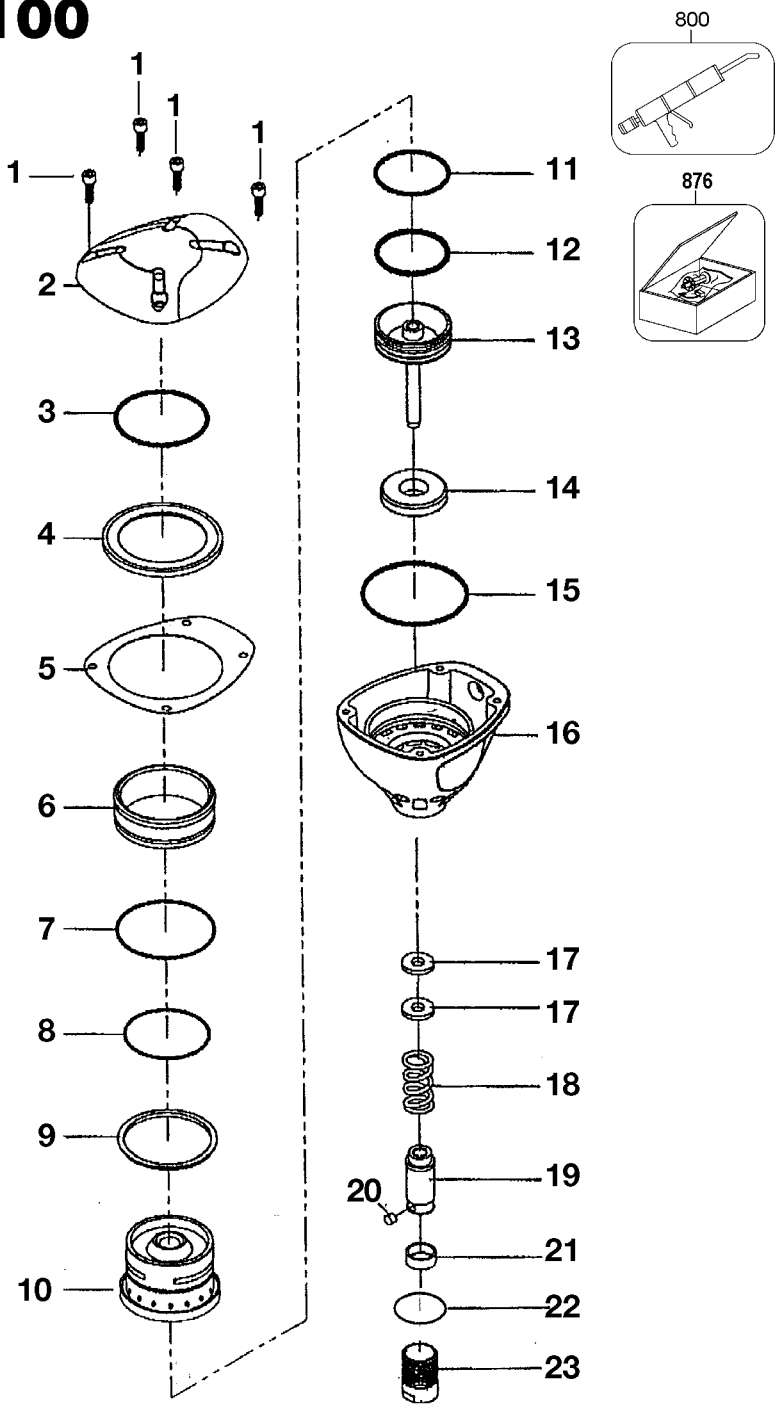

IP1138-1 REVC 11/00  
TO BE USED WITH IP1138-2 AND 120914 OPERATION AND MAINTENANCE MANUAL

## Parts List for PN100 Type 0

Item Number	Part Number	Description	Qty Required
1	174064	SCREW-SHCS-M5X0.8X18	4
2	P2020000140	CAP	1
3	S06A013800	O-RING	1
4	P2040000300	VALVE SEAT	1
5	P2020000300	GASKET	1
6	P2042000500	ASSEMBLY-CYLINDER	1
7	S06Z003200	O-RING	1
8	S06Z002700	SEAL	1
9	P2040000800	BUMPER-VALVE	1
10	P2042000700	VALVE	1
11	S06A013100	O-RING	1
12	S06A022300	O-RING	1
13	G0201600	ASSEMBLY-DRIVER/PIST	1
14	P2040001300	BUMPER	1
15	S06A014300	SEAL	1
16	P2020000232	FRAME	1
17	P2045203762	WASHER	2
18	P2045201762	SPRING	1
19	G3200200	NOSE	1
20	P2040003100	MAGNET	1
21	P2040002900	RETAINER-MAGNET	1
22	S06S002000	SEAL	1
23	P2045201862	GUIDE	1
800	100653	LUBE (2CC)	1
800	100679	LUBE (1LB.CAN)	1
876	120963	GRIP-PN100 LEATHER	1
876	120964	WRENCH-PN100	1

## Parts List for PN100 Type 0

Item Number	Part Number	Description	Qty Required
876	120965	KIT-PN100 O-RING	1
876	120966	NOSE-PN100 FINISH NA	1