



Parts List for PS3200K Type 1

Item Number	Part Number	Description	Qty Required
1	000000-00	No Longer Available	1
2	311978-00	ACTUATOR	1
3	148354-03	BIT CLIP	1
4	607918-41	SCREWDRIVER BIT	1
5	486603-01	2SPD DC SWITCH	1
6	486256-09	TRANSMISSION	1
7	151222-00	MOTOR	1
8	330013-04	SCREW	6
9	498796-00	KEYLESS CHUCK	1
10	149518-01	SCREW	1
11	311975-01	TOP,INSERT	1
12	418442-00	NAMEPLATE	1
13	418443-00	LABEL,IDENT	1
16	PS120	9.6V BATTERY PACK	1
17	418352-00	PS150 9.6V CHARGER	1
861	000000-00	No Longer Available	1