



Parts List for PS3300K Type 1A

Item Number	Part Number	Description	Qty Required
1	000000-00	No Longer Available	1
2	311978-00	ACTUATOR	1
3	148354-03	BIT CLIP	1
4	607918-41	SCREWDRIVER BIT	1
5	486784-00	VSR SWITCH	1
6	486256-49	TRANSMISSION	1
7	497784-21	MOTOR & PINION	1
8	330013-04	SCREW	6
9	498796-00	KEYLESS CHUCK	1
10	149518-01	SCREW	1
11	311975-01	TOP,INSERT	1
12	418442-41	NP: PS3300 T1A	1
13	000000-00	No Longer Available	1
16	PS120	9.6V BATTERY PACK	1
17	418352-00	PS150 9.6V CHARGER	1
861	000000-00	No Longer Available	1