



## Parts List for PS350 Type 1

Item Number	Part Number	Description	Qty Required
1	000000-00	No Longer Available	1
2	143845-00	LEVEL	1
3	148354-03	BIT CLIP	1
4	607918-41	SCREWDRIVER BIT	1
5	381324-00	SWITCH,VSR	1
6	000000-00	No Longer Available	1
7	000000-00	No Longer Available	1
8	330013-04	SCREW	6
9	330075-25	KEYLESS CHUCK	1
10	149518-01	SCREW	1
11	046376-00	PIN	1
12	000000-00	No Longer Available	1
13	000000-00	No Longer Available	1
16	PS130	12V BATTERY	1
871	418352-01	PS160 12V CHARGER	1