



Parts List for PS3500K Type 1

Item Number	Part Number	Description	Qty Required
1	418482-02	CLAMSHELL SET	1
2	311978-00	ACTUATOR	1
3	148354-03	BIT CLIP	1
4	607918-41	SCREWDRIVER BIT	1
5	486784-00	VSR SWITCH	1
6	486256-09	TRANSMISSION	1
7	152983-00	MOTOR,D.C.	1
8	330013-04	SCREW	6
9	498796-00	KEYLESS CHUCK	1
10	149518-01	SCREW	1
11	311975-01	TOP,INSERT	1
12	418442-02	NAMEPLATE	1
13	418443-02	LABEL,IDENT	1
16	PS130	12V BATTERY	1
17	418352-01	PS160 12V CHARGER	1
861	000000-00	No Longer Available	1