



Parts List for PT382 Type 0

Item Number	Part Number	Description	Qty Required
1	5140068-59	OIL SEAL	1
2	5140068-60	SCREW	8
3	5140068-61	O-RING	1
4	5140068-62	O-RING	2
5	5140068-63	BUSHING	1
6	5140068-64	WASHER	1
7	5140092-90	ANVIL COLLAR	1
8	5140092-91	ANVIL	1
9	5140068-65	SPRING	1
10	5140068-66	CAM	1
11	5140068-67	STEEL BALL	1
12	5140068-68	CAGE	1
13	5140068-69	MOTOR HOUSING	1
14	5140068-70	VALVE	1
15	5140068-71	CASE	1
16	5140092-92	O-RING	1
17	5140092-93	TRIGGER	1
18	5140092-94	HANDLE GRIP	1
19	5140068-73	ROLL PIN	1
20	5140068-74	GUIDE	1
21	5140092-95	O-RING	1
22	5140092-96	SPRING PIN	1
23	5140068-75	EXHAUST DEFLECTOR	1
24	5140092-97	O-RING	1
25	5140092-98	VALVE BODY	1
26	5140092-99	O-RING	1
27	5140093-00	VALVE STEM	1

Parts List for PT382 Type 0

Item Number	Part Number	Description	Qty Required
28	5140093-01	BUSHING	1
29	5140093-02	E-RING	1
30	5140093-03	SPRING PIN	2
31	5140068-76	HOSE ADAPTOR	1
32	5140068-77	BALL BEARING	1
33	5140068-78	OIL SEAL	1
34	5140068-79	FRONT PLATE	1
35	5140068-80	CYLINDER	1
36	5140068-81	ROTOR	1
37	5140068-82	REAR PLATE	1
38	5140068-83	BALL BEARING	2
39	5140068-84	GASKET	6
40	5140068-85	COVER REAR	1
41	5140068-86	SPRING PIN	1
42	5140068-87	ROTOR BLADE	6
43	5140068-88	AIR REGULATOR	1
44	5140068-89	PIN	1
45	5140068-90	SPRING	1
46	5140093-04	SPRING	1
47	5140068-72	O-RING	1
876	D25462	KIT SERVICE PT382	1
876	D25450	KIT TRIGGER REPAIR P	1