



Parts List for TV250K Type 1A

Item Number	Part Number	Description	Qty Required
1	419461-02	CLAMSHELL SET	1
2	311978-00	ACTUATOR	1
3	148354-03	BIT CLIP	1
4	607918-41	SCREWDRIVER BIT	1
5	419583-00	SWITCH,VSR	1
6	486256-49	TRANSMISSION	1
7	497784-20	MOTOR & PINION	1
8	330013-04	SCREW	6
9	498796-00	KEYLESS CHUCK	1
10	149518-01	SCREW	1
11	311975-01	TOP,INSERT	1
12	386372-40	NP: TV250 T1A	1
13	418443-05	NP:TV250K T1	1
16	000000-00	No Longer Available	1
17	418352-01	PS160 12V CHARGER	1