



## Parts List for TV310 Type 1

Item Number	Part Number	Description	Qty Required
1	000000-00	No Longer Available	1
2	000000-00	No Longer Available	1
3	000000-00	No Longer Available	2
4	000000-00	No Longer Available	2
5	134252-00	HOLDER,BRUSH	2
7	000000-00	No Longer Available	1
8	330073-96	CORD/8'/18-2SJT	1
9	000000-00	No Longer Available	1
10	000000-00	No Longer Available	1
11	85909-00	BEARING,SLEEVE	1
12	85899-00	BEARING,SLEEVE	2
13	10511-00	BEARING,THRUST	1
14	000000-00	No Longer Available	2
15	000000-00	No Longer Available	1
16	000000-00	No Longer Available	1
18	000000-00	No Longer Available	1
19	85894-00	BEARING,SLEEVE	1
21	000000-00	No Longer Available	1
22	330075-25	KEYLESS CHUCK	1
25	037381-00	WASHER	2
26	157315-00	WASHER,SPRING	1
27	91903-10	COVER,SWITCH	1
28	000000-00	No Longer Available	1
29	330019-13	SCREW,M4X19	1
30	000000-00	No Longer Available	2
31	000000-00	No Longer Available	1
35	000000-00	No Longer Available	1

## Parts List for TV310 Type 1

Item Number	Part Number	Description	Qty Required
38	000000-00	No Longer Available	1
40	000000-00	No Longer Available	1
42	32114-06	CONNECTOR	1
46	157312-00	SCREW,SPEC.,LH	1
800	429698-00	GREASE:4 LB CAN	1