



Parts List for TV450 Type 1

Item Number	Part Number	Description	Qty Required
1	000000-00	No Longer Available	1
2	000000-00	No Longer Available	1
3	000000-00	No Longer Available	1
5	368329-01	BOARD,CIRCUIT	1
6	770235	CORD PROTECTOR	1
7	330073-98	CORD/8 FT/18-2	1
8	000000-00	No Longer Available	1
9	000000-00	No Longer Available	1
10	748158-00	SPRING	1
11	370966-00	WASHER	2
14	832457-00	BRUSH & HOLDER	2
15	372828-00	LEAD	1
16	830393-00	LEAD,BOT.SWITCH	1
18	369620-00	NUT	1
19	000000-00	No Longer Available	1
20	369619-00	GEAR	1
21	793254-00	SCREW	6
22	368389-00	ROLLER	1
23	368360-00	BEARING	2
24	000000-00	No Longer Available	1
25	374292-00	PIN	3
26	799310-00	RING,0	1
27	000000-00	No Longer Available	1
28	000000-00	No Longer Available	1
29	000000-00	No Longer Available	2
30	368366-00	COVER	1
31	369008-00	GUARD	1

Parts List for TV450 Type 1

Item Number	Part Number	Description	Qty Required
32	370584-00	GUARD	1
33	000000-00	No Longer Available	1
34	000000-00	No Longer Available	1
35	368857-00	CLAMP	1
36	376409-00	SCREW	2
37	369304-00	SHOE	1
38	000000-00	No Longer Available	1
39	000000-00	No Longer Available	1
40	370169-00	PLATE	1
41	370170-00	CIRCLIP	2
42	000000-00	No Longer Available	1
43	000000-00	No Longer Available	1
44	581190-02	CLAMP ASSEMBLY	1
45	5103541-00	SCREW	9
46	749286-00	YOKE	1
47	000000-00	No Longer Available	1
48	376132-00	BLOCK	1
49	368352-00	KNOB,UPPER	1
50	371662-00	SPRING	1
51	368353-00	KNOB,LOWER	1
52	371311-00	PLATE	1
53	811057-00	PIN, GUIDE	1
55	368608-00	ADAPTER,VACUUM	1