



Model XRM04B Parts List

A = Standard Equipment

O = Circuit Diagram

Item#	Part#	Description	Q'ty	Unit
001	SE00000437	WIRE	1	PC.
002	SE00000325	SCREW PTB 3X8(NI)	3	PC.
003	SE00000443	PCB A ASS'Y USA	1	PC.
004	SE00000325	SCREW PTB 3X8(NI)	6	PC.
005	SE00000330	PCB C ASS'Y USA	1	PC.
006	SE09090011	SCREW 1.7	4	PC.
007	SE00000333	POWER BUTTON HOLDER	1	PC.
008	SE00000334	POWER BUTTON	1	PC.
009	SE09090011	SCREW 1.7	5	PC.
010	SE00000336	PRESET BUTTON HOLDER	1	PC.
011	SE00000337	PRESET BUTTON	1	PC.
012	SE00000325	SCREW PTB 3X8(NI)	3	PC.
013	SE00000339	PCB P ANT BAR ASS'Y	1	PC.
014	SE00000325	SCREW PTB 3X8(NI)	2	PC.
015	SE00000239	KNOB LENS HOLDER	1	PC.
016	SE00000193	SCREW 3X10	2	PC.
017	SE00000343	PCB P USB ASS'Y	1	PC.
018	SE09064161	SCREW M4X16	1	PC.
019	SE00000325	SCREW PTB 3X8(NI)	4	PC.
020	SE09064161	SCREW M4X16	1	PC.
021	SE00000347	FRONT CABINET ASS'Y	1	PC.
022	SE09064161	SCREW M4X16	1	PC.
023	SE00000325	SCREW PTB 3X8(NI)	1	PC.
024	SE09064161	SCREW M4X16	1	PC.
025	SE00000352	FRONT BUMPER	1	PC.
026	SE00000160	SCREW PTHE6X47(CR)	4	PC.
027	SE0338PC5Z	FRONT BAR	2	PC.
028	SE00000355	JACK RUBBER COVER	1	PC.
029	SE00000356	JACK COVER	1	PC.
030	SE21B1110A	ROTARY KNOB RING	1	PC.
031	SE00000243	ROTARY KNOB	1	PC.
032	SE09176166	HEX SCREW M6X16	2	PC.
033	SE00000358	BATTERY BUMPER	1	PC.
034	SE00000360	REAR BUMPER(BLK)	1	PC.
035	SE09176166	HEX SCREW M6X16	2	PC.
036	SE00000363	LOCKER COVER(BLK)	1	PC.
037	SE00000364	LOCKER FIXER PIN 73.5MM	1	PC.
038	SE00000366	LOCK HINGER(BLK)	1	PC.
039	SE00000368	BATTERY COVER(BLK)	1	PC.
040	SE00000369	LOCKER FIXER PIN 64.5MM	1	PC.
041	SE00000325	SCREW PTB 3X8(NI)	2	PC.
042	SE00000371	BATTERY COVER PACKING	1	PC.
043	SE00000248	BACK UP BATTERY COVER	1	PC.
044	SE00000176	SCREW PTHE6X20(CR)	1	PC.
045	SE00000249	HANDLE HOLDER(R)	1	PC.
046	SE00000179	HANDLE	1	PC.
047	SE00000250	HANDLE HOLDER(L)	1	PC.
048	SE00000176	SCREW PTHE6X20(CR)	1	PC.
049	SE09176166	HEX SCREW M6X16	1	PC.

050	SE00000184	SPRING	2 PC.
051	SE09994007	STEEL BALL	2 PC.
052	SE023PC020	EVA 25X18X5.5	1 PC.
053	SE00000445	SCREW PTB 3X45(NI)	1 PC.
054	SE09994007	STEEL BALL	2 PC.
055	SE00000184	SPRING	2 PC.
056	SE09176166	HEX SCREW M6X16	1 PC.
057	SE00000187	HANDLE SUS-PLATE (R)	1 PC.
058	SE00000445	SCREW PTB 3X45(NI)	1 PC.
059	SE00000192	HANDLE SUS-PLATE(L)	1 PC.
060	SE00000393	REAR CABINET(BLK)	1 PC.
061	SE00000395	RUBBER ANT 88-108(BLK)	1 PC.
062	SE00000398	ROD ANT PACKING	1 PC.
063	SE00000396	ROD ANT TERMINAL	1 PC.
064	SE00000325	SCREW PTB 3X8(NI)	1 PC.
065	SE023PC020	EVA 25X18X5.5	1 PC.
066	SE00000403	DC RUBBER COVER	1 PC.
067	SE00000404	SCREW PTHE 3X14(CR)	1 PC.
068	SE021PC030	BATTERY COVER LOCKER	1 PC.
069	SE00000406	SPEAKER PACKING	1 PC.
070	SE00000407	SPEAKER(R)	1 PC.
071	SE00000408	SPEAKER PANEL ASS'Y	1 PC.
072	SE024J9040	PACKING	4 PC.
073	SE9076146A	HEX SCREW M6X14	4 PC.
074	SE9076146A	HEX SCREW M6X14	4 PC.
075	SE024J9040	PACKING	4 PC.
076	SE00000408	SPEAKER PANEL ASS'Y	1 PC.
077	SE00000438	SPEAKER (L)	1 PC.
078	SE00000406	SPEAKER PACKING	1 PC.
079	SE00000416	TERMINAL E (B)	1 PC.
080	SE00000325	SCREW PTB 3X8(NI)	2 PC.
081	SE00000200	TERMINAL C	1 PC.
082	SE00000325	SCREW PTB 3X8(NI)	2 PC.
083	SE00000420	PCB B BATTERY SWITCH ASS'Y	1 PC.
084	SE00000325	SCREW PTB 3X8(NI)	1 PC.
085	SE00000422	SPEAKER HOLDER	1 PC.
086	SE00000423	PCB B AUX IN 2 ASS'Y	1 PC.
087	SE00000193	SCREW 3X10	2 PC.
088	SE00000199	SILICON RUBBER WASHER	1 PC.
089	SE00000325	SCREW PTB 3X8(NI)	1 PC.
090	SE00000199	SILICON RUBBER WASHER	1 PC.
091	SE00000325	SCREW PTB 3X8(NI)	1 PC.
092	SE00000422	SPEAKER HOLDER	1 PC.
093	SE00000430	SWITCH KNOB	1 PC.
094	SE00000431	BATTERY SWITCH ASS'Y	1 PC.
095	SE00000325	SCREW PTB 3X8(NI)	2 PC.
096	SE00000433	PCB B DC JACK ASS'Y	1 PC.
097	SE09090011	SCREW 1.7	2 PC.
098	SE00000435	DC JACK HOLDER	1 PC.
099	SE00000436	TERMIANL G (B)	1 PC.
100	SE00000325	SCREW PTB 3X8(NI)	3 PC.
101	SE00000195	W/TIES 100MM	3 PC.
102	SE024PC040	PACKING	1 PC.
A01	SE00000104	AC ADAPTER	1 PC.