



**BOSCH**

# Router

----- | 0 601 604 534

---

## Table of Content

Spare parts list.....	2
Illustration - Type.....	4

## Spare parts list

Item	Part Number	Description
1	3 605 108 554	Motor Housing BLUE
2	3 604 220 528	Field 115V
3	3 604 011 513	Armature 115V
4	3 605 500 583	Sealing cap
5	3 600 900 517	groove ball bearing
6	3 600 034 502	Front Panel
7	3 600 133 500	Protective Washer
8	3 600 900 515	groove ball bearing
9	3 607 200 505	Switch
10	3 604 460 509	Cable
11	3 600 390 501	Compression-Gland Fitting
12	3 600 703 500	Grommet
13	3 601 023 500	Switch Plate
15	3 600 210 502	O-Ring
17	3 600 492 500	Carbon Brush Holder
19	3 601 023 501	fixing plate
21	3 608 098 501	Nut
22	3 600 499 520	Collet Ø 1/2"
23	3 603 313 501	Union Nut
24	3 600 410 502	Spacer
25	3 603 429 508	Socket head cap screw
26	2 916 680 006	Spring Lock Washer DIN 127-B 5
27	3 603 410 501	Socket head cap screw
28	3 603 415 537	Socket head cap screw
29	3 603 301 515	Hex Nut
33	3 605 702 568	Base
34	3 603 231 500	Ball Knob
35	3 600 190 500	Base Plate
36	3 601 119 695	Nameplate
37	3 603 440 500	Square-Head Bolt
38	3 600 100 500	Washer
39	3 603 339 500	Wing Nut
40	2 910 011 219	Socket head cap screw DIN 84-BM6x70-5.8
41	2 916 030 013	Toothed lock washer DIN 6797-A16,5-FST
43	2 610 915 162	Screw

## Spare parts list

Item	Part Number	Description
44	3 603 340 500	Socket head cap screw
49	1 601 110 449	Nameplate CAUTION
50	3 603 344 504	Latch
50/2	3 603 231 509	Latch
50/3	3 603 410 500	Socket head cap screw
50/4	3 604 612 500	Compression Spring
650/5	1 907 950 503	Single-Head Eng. Wrench DIN 894 SW 9
650/6	9 601 497 905	Single-Head Eng. Wrench SW 6
733	3 605 702 600	Base Plate

Illustration - Type - E

Type 0 601 601 0 .. (0 601 905 1 ..)  
 Issue } 93 - 01 1 602 1 .. (0 601 905 2 ..)  
 Stand } 1 604 1 .. (0 601 905 4 ..)

