SERVICE PARTS LIST

Milwaukee

06-82-7475

10-20-2840

22-74-0510 12-20-3340 14-74-0310 16-01-2125 18-01-2000

22-18-1240

22-18-1245 22-20-0425

22-32-0420

40-50-8745

22-56-0975

23-66-1005

23-94-4290

23-94-4295

28-14-0747

28-20-1160 28-41-0956

31-05-0350

31-15-0601

31-44-2040

31-44-2045

32-75-1310

13

14 15

16

18

19

19a

20

2ĭ

24 25

27

★ 26

SPECIFY CATALOG NO. AND SERIAL NO. WHEN ORDERING PARTS

CORDLESS CIRCULAR SAW

REVISED BULLETIN 54-40-7020

DATE Mar. 2011

(25)

(4)

(43)

Functionally

check the lower guard #26, with the

(42)

(33)

(36)

(50)

WIRING INSTRUCTION **SEE REVERSE SIDE**

(1

0

(14)

(27)

(15)

 
(26)


(2)

(6)

(54)

(49)



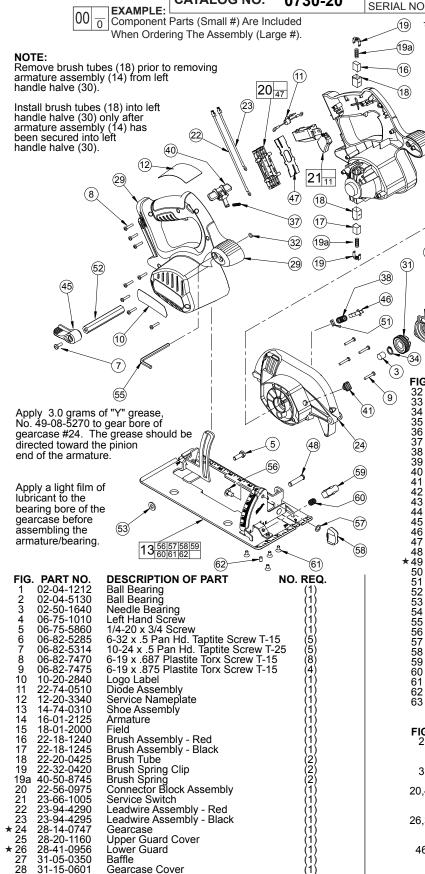

6-19 x .875 Plastite Torx Screw T-15

Logo Label

Armature Field

Brush Tube

Gearcase

Baffle

Diode Assembly

Shoe Assembly

Brush Spring Clip

Upper Guard Cover Lower Guard

Right Handle Halve

Left Handle Halve

Spindle Gear

Gearcase Cover

Service Switch

Service Nameplate

Brush Assembly - Red

Brush Assembly - Black

Brush Spring Connector Block Assembly

Leadwire Assembly - Red

Leadwire Assembly - Black

A57B & A57C ★= Part number change from previous service

parts list.

30

(28)

(35)

saw set at full depth of cut and 0° bevel. Place the (39) saw upside down with the shoe 63 34 35 horizontal. Fully retract the guard and then release it. The guard must return briskly. FIG. PART NO. **DESCRIPTION OF PART** NO REQ O-Ring Retaining Ring - External Retaining Ring - External 32 33 34-40-4480 34-60-0860 34-60-0920 38-50-1160 Spindle 40-50-0045 Guard Spring 37 38 39 40-50-0350 40-50-8040 42-38-0222 Spring Spring Rubber Bumper Switch Lock-Out 42-42-1020 42-42-1030 Spindle Lock Button Inner Flange Outer Flange 42 43-34-0790 43 44 45 43-34-0795 44-10-0420 44-10-0430 Guard Lever Depth Lever 46 44-20-0650 Spindle Lock Connector Block Cover 44-60-0740 Pivot Pin Retaining Plate Bumper Screw Felt Seal 49 50 51 44-66-0561 45-04-0485 45-06-0720 52 45-08-0395 Depth Shaft 53 45-88-1515 Washer 45-88-5615 Wave Spring Washer 49-96-0080 06-10-0660 45-88-1560 3/16 Hex Key 1/4-20 x 1/2 Short Neck Carriage Bolt 55 56 57 58 Washer Bevel Adjustment Knob Rip Fence Knob 43-98-0730 43-98-0720 59 Spring 10-32 x 3/8 CSK Machine Screw T-25 10-32 x 3/8 Set Screw Gear Service Assembly 40-50-0650 06-82-9605 06-83-1600 14-46-2575 62 63

FIG.

49-22-1001

Orient the ball bearing so that the seal faces the commutator and the shield faces the shaft end.

Rip Fence (Not Shown)

- 3 Press needle bearing flush to .015 sub-flush in gearcase.
- 20,47 Concave side of connector block cover to face connector block.
- 26,33 Position retaining ring with rounded edge facing lower guard.
- 46 Functionally check spindle lock. Spindle lock must return briskly when released from engagement in gear.

MILWAUKEE ELECTRIC TOOL CORPORATION

