


Item	Part No.	Description
1	180300	Screw Set
2	145569	Anti-Rotation Screw
3	180558	Motor Housing Assembly
4	180150	Switch
5	180151	Trigger
6	180559	Lead Wire
7	180305	Terminal Block


Item	Part No.	Description
8	180152	Driver
9	180153	Motor
10	180155	Fan
11	180156	Power Cord

The above part numbers are for serial numbers 210018251 and greater.

BOOM AND TRIMMER PARTS-RYOBI 100r

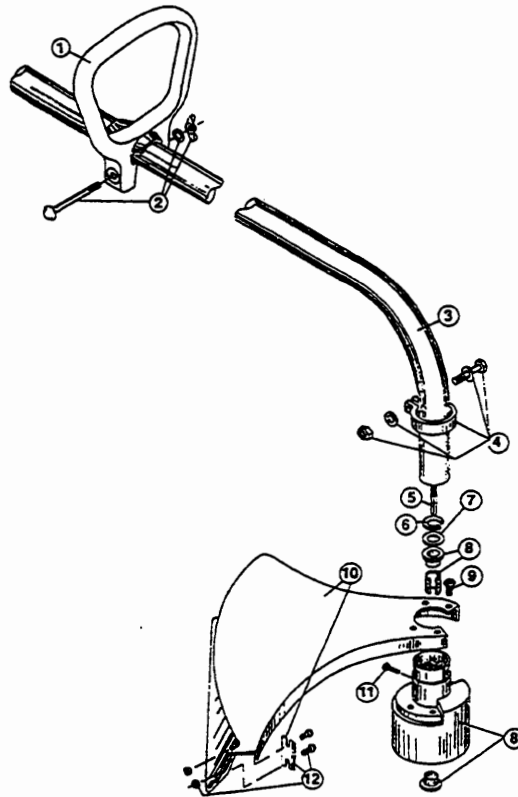

Item	Part No.	Description
1	145819	D-Handle
2	153523	D-Handle Hardware Assembly
3	180560	Drive Shaft Housing Assembly
4	153597	Lower Clamp Assembly
5	180561	Flexible Drive Shaft
6	145570	Retaining Ring
7	145567	Washer
8	153312	Bushing Housing Assembly
9	180531	Guard Mounting Screw Assembly
10	147593	Guard and Blade Assembly
11	145569	Anti-Rotation Screw
12	682061	Blade Assembly
13	153313	Spool Shaft
14	153619	Outer Spool and Eyelet Assembly
15	145566	Eyelet
16	610660	Retainer (10 pack)
17	610317	Spring
18	153600	Inner reel
19	153066	Bump Head Knob Assembly
*	180117	Monofil Cutting Line (50 ft.)
*	180522	Spool and Line (40 ft.) Assembly

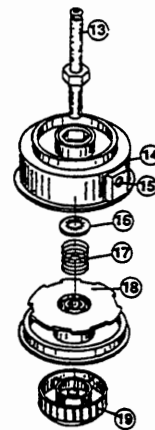

* not shown