505 505H 8505

SERVICE NOTES


FIELD REPLACEMENT


The current field has only 2 leads as opposed to 4 leads on early fields. When replacing an early field with the current field, refer to the wiring diagram below.

PAD HOLDER BEARING

Apply loctite to the outer race of the pad holder bearing when assembling.

WIRING DIAGRAM

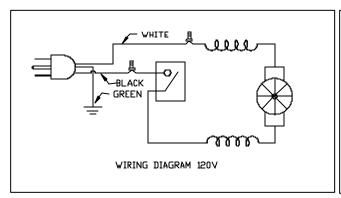

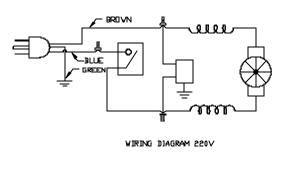

BEARING RETAINER

Early version used a retainer plate (844573) to secure the fan end bearing (#11A) to the housing. Current version uses two washers (#113) to retain bearing. Retainer plate (844573) is no longer available. Two (#113) washers may be used to service all versions.

PAD

When installing pad, apply a small bead of RTV sealant to backing plate around the center hole. This will prevent dust infiltration of the pad bearing.


FIELD SPACERS

Special field spacers were used on Type 2, Serial Numbers 088034 through 090482. The spacers are only required with the original motor housing on these units. If a replacement motor housing is installed, the spacers must not be used.

PORTER+CABLE FINISHING SANDER

WARNING: Electrical repairs should only be attempted by trained repairmen. Contact the nearest Porter-Cable Service Center or other competent repair center

505 505H 8505

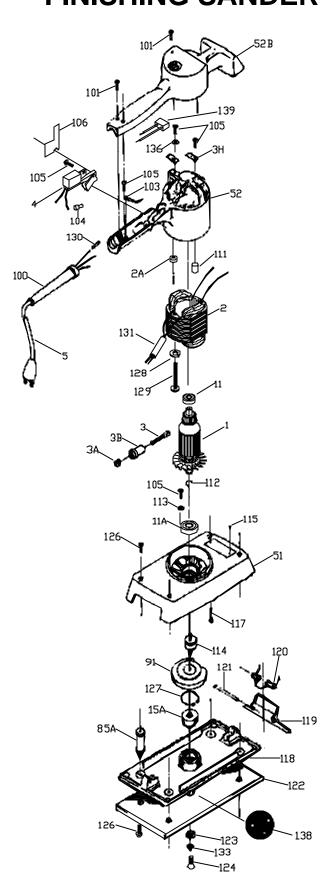

Ref	f.		
No		Part No.	Description
1		693920	Armature 120V
2		873129 693921	Armature 220V Field 120V
_		904264	Field 220V, T3
		873130	Field 220V, T1, T2
2A		872625**	Field Spacers, CF, (T2, 120V,
3		857761	S/N 088034 thru 090482 ONLY) Brush 120V
3		904094	Brush 220V
3A		823727	Brush Cap
3B		844089	Brush Holder
3H		801271	Brush Holder Clip
4 5		802441 846674	Switch Cord 120V
Ü		879758	Cord 220V, Euro
11		855284	Comm End Bearing
11 <i>A</i>		855277	Fan End Bearing
15 <i>A</i>	4	895993**	Counterweight Bearing
51	n	858913 907427	Base Housing, 505 Base Housing, 505H
52		693914**	Motor Housing, 505
		874044	Motor Housing, Commemorative 505
505	n	907428	Motor Housing, 505H
52E	3	844082 685979	Motor Housing Cap 120V, 505 Motor Housing Cap 220V
	n	907426	Motor Housing Cap, 505H
85 <i>A</i>		846738	Pad Post
91		874574	Counterweight
100 101		838270	Cord Strain Reliever Screw
103		878813 849314	Ground Wire Terminal
104		682063	Connector
105	5	882187	Screw
106		844684	Wire Guard, Early Units
111 112		842597 853455	Bearing Plug Fan End Bearing Ring
113		800471**	Washer
114	ļ	844414	Coupling
115		801374	Spec. Plate Screw, Early Units
117 118		844644	Base Screw
110	•	846457	Pad Holder Assy., Incl.: Ref. 15A, 119, 120, 121, 127
119)	844094	Paper Clamp
120		844095	Paper Clamp Spring
121 122		844096	Paper Clamp Hinge Pin
122	-	13598** 846456**	Stikit Pad, Current Felt Pad, Early Units
123	3	844574	Counterweight Bearing Washer
124		845974	Counterweight Screw
126	6	681637	Screw, (After S/N 096056)
127	,	851011 802426	Screw, (Before S/N 96056) Snap Ring
128		802414	Lock Washer, Early T2 Units
129		838310	Field Screw 10-24 X 1 3/4"
400		853480	Field Screw 10-24 X 1 9/16"
130 131		802303 879363	Connector Sleeving
133		841851	Counterweight Lock Washer
136		802995	Filter Spacing Washer, Early 220V Units
138		879038	Dust Seal
139)	903653 895988	Filter 220V, T3 Filter, Rectangular Type 220V, Late T2
		856787	Filter, Rectangular Type 220V, Late 12 Filter, Barrell Type 220V, T1, Early T2
140)	903652	Capacitor 220V, T3 Only
*		855628	Field Lead
*		Not Chause	
**		Not Shown See Service	Notes
		JUL JUI VILLE	110100