



## Parts List for 11222 Type 1

Item Number	Part Number	Description	Qty Required
101	000000-00	No Longer Available	1
102	498901-00	GEARBOX	1
103	499682-01	SWITCH	1
104	419471-00	SCREW	4
105	498010-10	CLAMSHELL	1
106	498024-00	RELEASE SPRING	1
107	499006-01	ACTUATOR	1
108	499113-01	ACTUATOR FWR/REV	1
109	000000-00	No Longer Available	1
110	498669-00	TORSION SPRING	1
111	330013-04	SCREW	7
112	000000-00	No Longer Available	1
201	499683-01	SANDER HEAD	1
202	498892-00	SANDING PLATE	1
203	498071-00	SCREW	2
301	000000-00	No Longer Available	1
302	498796-00	KEYLESS CHUCK	1
303	149518-01	SCREW	1
401	499685-01	JIGSAW HEAD	1
402	498045-00	SHOE ASSEMBLY	1
403	368673-00	SCREW	1
404	498040-00	LEFT SPRING	1
405	498037-00	PIN	1
406	498038-00	WASHER, WEAR	1
407	498042-00	WASHER	2
408	498041-00	RIGHT SPRING	1
409	498035-00	ACTUATOR	1

## Parts List for 11222 Type 1

Item Number	Part Number	Description	Qty Required
410	498043-00	SCREW	2
411	498039-00	CIRCLIP	2
412	370165-00	BLADE HOLDER	1
414	498904-00	QUICK RELEASE	1
846	000000-00	No Longer Available	1
856	607918-41	SCREWDRIVER BIT	1
861	499916-00	KITBOX	1
866	497033-83	BATTERY PACK	1
871	5101181-05	CHARGER	1