


Parts Breakdown for the "J" Series Pallet Trucks

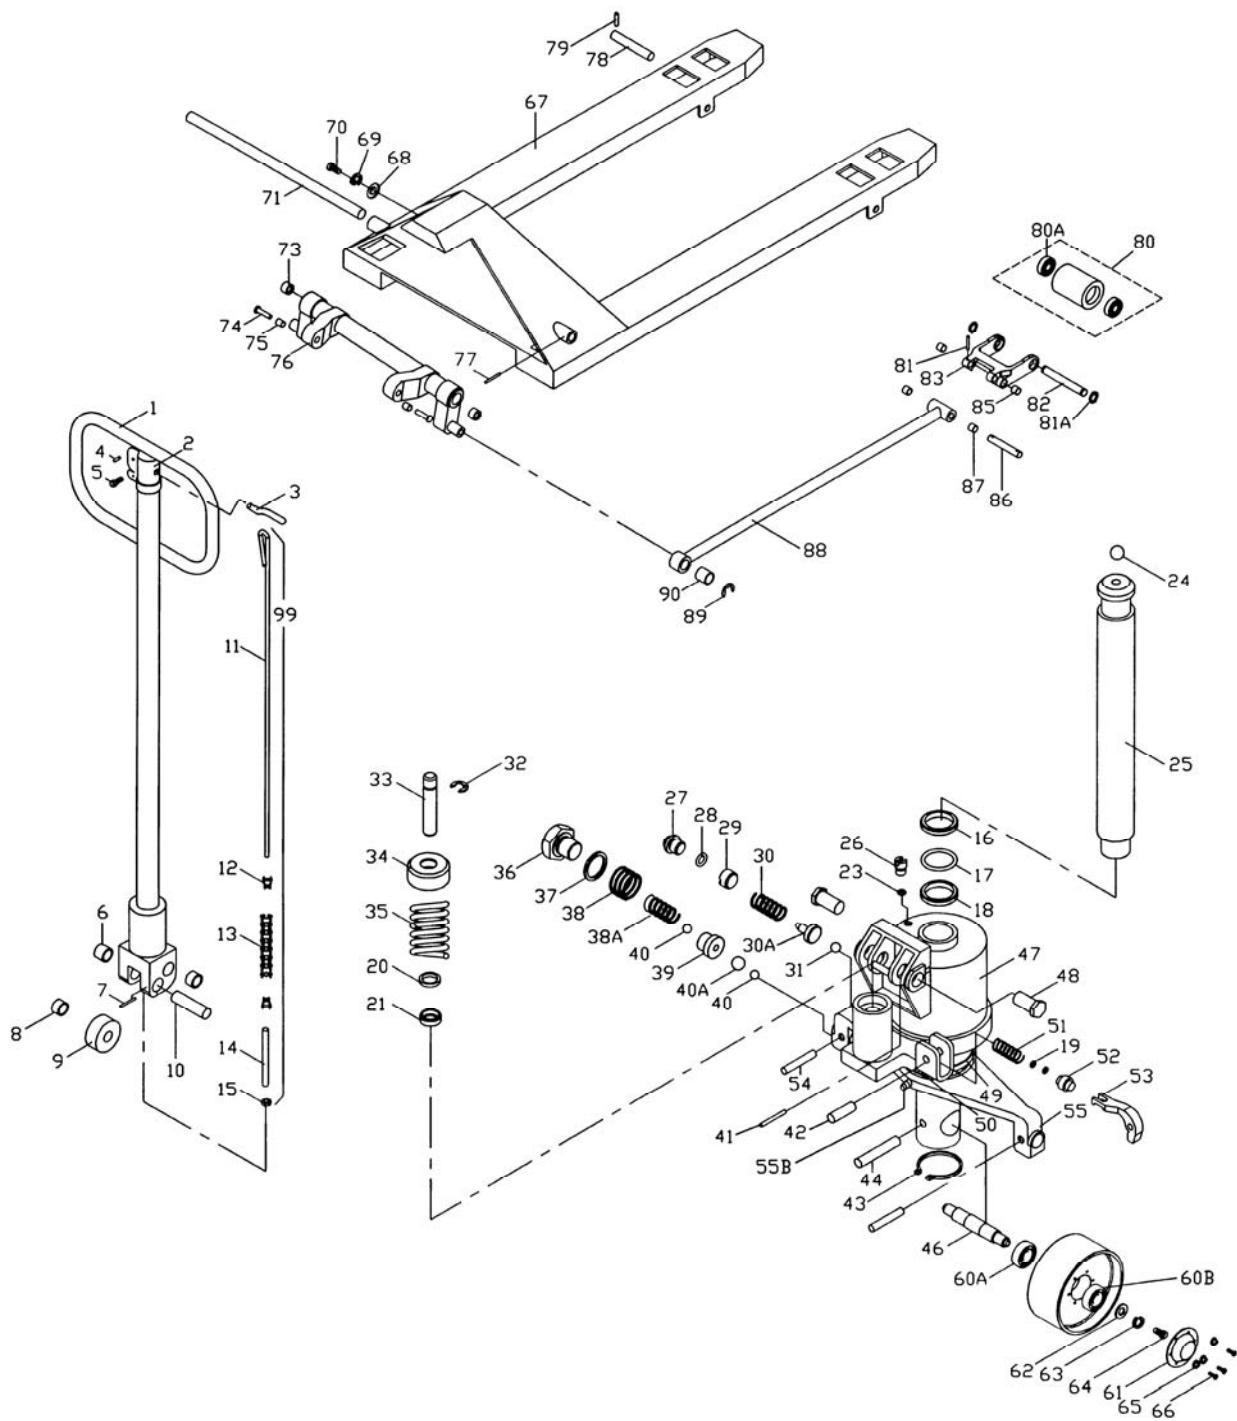

Parts List for the "J" Series Pallet Trucks

Index	Part No.	Description	Size	Qty.
1.....	PT2748A-001	Handle.....		1
2.....	PT2748A-002	Handle Cap		1
3.....	PT2748A-003	Lever.....		1
4.....	PT2748A-004	Spring Pin	5x16mm	1
5.....	PT2748A-005	Bolt	M8x20	1
6.....	PT2748A-006	Oil Lite Bushing.....		2
7.....	PT2748A-007	Spring Pin	3x28mm	1
8.....	PT2748A-008	Oil Lite Bushing.....		1
9.....	PT2748A-009	Roller		1
10.....	PT2748A-010	Roller Pin		1
11.....	PT2748A-011	Release Rod.....		1
12.....	PT2748A-012	Chain Joint		2
13.....	PT2748A-013	Chain		1
14.....	PT2748A-014	Anchor Bolt		1
15.....	PT2748A-015	V-Nut.....	M8.....	1
16.....	PT2748J-101A	Dust Seal *		1
17.....	PT2748J-101A	O-Ring *	29.8x3.5mm	1
18.....	PT2748J-101A	U-Packings *	30x38x6mm	1
19.....	PT2748J-101A	O-Ring *	4.8x1.9mm	2
20.....	PT2748J-101A	Dust Seal *		1
21.....	PT2748J-101A	U-Packings *	18x26x5	1
23.....	PT2748J-101A	O-Ring *	6x1.9mm	1
24.....	SB-14MM.....	Steel Ball.....	14mm.....	1
25.....	PT2748J-025	Ram Piston (<i>all models except PT-3348J</i>)		1
	PT3348J-025	Ram Piston (<i>PT-3348J Only</i>)		1
26.....	PT2748A-026	Oil Plug		1
27.....	PT2748A-027	Pressure Adjust Screw.....		1
28.....	PT2748J-101A	O-Ring *	11.6x2.4mm	1
29.....	PT2748A-029	Release Screw		1
30.....	PT2748A-030	Spring	10x2.3x27mm	1
30A	PT2748A-30A	Valve		1
31.....	SB-6MM	Steel Ball.....	6mm.....	1
32.....	PT2748A-032	E-Ring	15mm.....	1
33.....	PT2748L-033	Plunger Piston		1
34.....	PT2748A-034	Spring Cap		1
35.....	PT2748A-035A	Spring	38x5x121mm	1
36.....	PT2748A-036	Release Plug		1
37.....	PT2748A-037	Washer	20mm.....	1
38.....	PT2748A-038	Spring	8x1.5x12.8mm	1
38A	PT2748A-038A	Spring	4.8x0.7x15mm	1
39.....	PT2748A-039	Valve Housing		1
40.....	SB-6MM	Steel Ball.....	6mm.....	2
40A	SB-9MM	Steel Ball.....	9mm.....	1
41.....	PT2748A-041	Spring Pin	3x28mm	2
42.....	PT2748A-042	Spring Pin	8x25mm	1
43.....	PT2748A-043	Snap Ring	44mm	1
44.....	PT2748A-044	Spring Pin	8x45mm	1
46.....	PT2748A-046	Wheel Shaft (<i>all models except PT-1636J</i>)		1
	PT1636J-046	Wheel Shaft (<i>PT-1636J Only</i>)		1
47.....	PT2748J-109	Pump Housing Assembly (<i>all models except PT-1636J & PT-3348J</i>)		1
	PT1636J-109	Pump Housing Assembly (<i>PT-1636J Only</i>)		1
	PT3348J-109	Pump Housing Assembly (<i>PT-3348J Only</i>)		1

Index	Part		Description	Size	Qty.
No.	No.				
48.....	PT2748A-048.....		Handle Pin.....		2
49.....	PT2748A-049.....		Bearing Base.....		1
50.....	BB-51109.....		Ball Bearing.....	51109.....	1
51.....	PT2748A-051.....		Spring.....	6.3x1.2x25mm	1
52.....	PT2748A-052.....		Release Nozzle		1
53.....	PT2748A-053.....		Cam		1
54.....	PT1636J-054.....		Spring Pin	6x30mm	2
55.....	PT2748A-055.....		Table (<i>all models except PT-1636J & PT-3348J</i>).....		1
	PT1636J-055		Table (<i>PT-1636J Only</i>)		1
	PT3348J-055		Table (<i>PT-3348J Only</i>)		1
55B	PT2748A-055B		Grease Fitting.....		1
60.....	PT2748L-103.....		Steer Wheel Assembly W/Bearings.....		2
60A	BB-6205VV		Steer Wheel Ball Bearing	6205VV	2
60B	BB-6304VV		Steer Wheel Ball Bearing	6304VV	2
61.....	PT2748A-061.....		Cap		2
62.....	TS-1550071.....		Washer.....	10mm.....	2
63.....	TS-0720091.....		Lock Washer	10mm.....	2
64.....	TS-1491021.....		Bolt.....	M10x20	2
65.....	TS-1551031.....		Lock Washer	5mm.....	6
66.....	TS-1481041.....		Bolt.....	M5x16	6
67.....			Fork Frame (N/A)		1
68.....	TS-1550061.....		Washer.....	8mm.....	2
69.....	TS-1551061.....		Lock Washer	8mm.....	2
70.....	TS-1504031.....		Socket Head Cap Screw.....	M8x14	2
71.....	PT2748A-071.....		Crank Shaft (<i>PT-2736J / PT-2742J / PT-2748J</i>).....		1
	PT2048A-071		Crank Shaft (<i>PT-2036J / PT-2042J / PT-2048J</i>).....		1
	PT1636J-071		Crank Shaft (<i>PT-1636J Only</i>)		1
	PT3348J-071		Crank Shaft (<i>PT-3348J Only</i>)		1
73.....	PT2748J-073.....		Oil Lite Bushing		2
74.....	PT2748A-074.....		Table Pin.....		2
75.....	PT2748A-075.....		Oil Lite Bushing		2
76.....	PT2748J-076.....		Lifting Yoke (<i>PT-2736J / PT-2742J / PT-2748J</i>).....		1
	PT2048J-076		Lifting Yoke (<i>PT-2036J / PT-2042J / PT-2048J</i>).....		1
	PT1636J-076		Lifting Yoke (<i>PT-1636J Only</i>)		1
	PT3348J-076		Lifting Yoke (<i>PT-3348J Only</i>)		1
77.....	PT2748J-077.....		Spring Pin (<i>all models except PT-3348J</i>)	6x35mm	1
	PT3348J-077		Spring Pin (<i>PT-3348J Only</i>)	6x30mm	1
78.....	PT2748J-078A.....		Arm Pin (<i>all models except PT-3348J</i>)	16x96mm	2
	PT3348J-078		Arm Pin (<i>PT-3348J Only</i>)		2
79.....	PT2748J-079.....		Spring Pin	5x25mm	2
80.....	PT2748J-080BN		Black Nylon Load Wheel W/Bearings (<i>all models except PT-3348J</i>).....		2
	PT3348J-080ZS		Steel Load Wheel W/Bearings (<i>PT-3348J Only</i>)		2
80A	BB-6004VV		Load Wheel Bearing (<i>all models except PT-3348J</i>)	6004	4
	BB-6203LS		Load Wheel Bearing (<i>PT-3348J Only</i>)	6203	4
81.....	PT2748J-081		Spring Pin	5x30mm	2
81A	PT2748J-081A		Snap-Ring (<i>all models except PT-3348J</i>)	20mm	4
	PT3348J-081A		Snap Ring (<i>PT-3348J Only</i>)	17mm	4
82.....	PT2748J-082		Load Wheel Axle (<i>all models except PT-3348J</i>)		2
	PT3348J-082		Load Wheel Axle (<i>PT-3348J Only</i>)		2
83.....	PT2748J-083		Arm (<i>all models except PT-3348J</i>)		2
	PT3348J-083		Arm (<i>PT-3348J Only</i>)		2

Index	Part		Description	Size	Qty.
No.	No.				
85.....	PT2748J-085		Oil Lite Bushing (<i>all models except PT-3348J</i>).....		4
	PT3348J-085		Oil Lite Bushing (<i>PT-3348J Only</i>)		4
86.....	PT2748J-086A.....		Rod Pin (<i>all models except PT-3348J</i>).....	16x145mm	2
	PT3348J-086		Rod Pin (<i>PT-3348J Only</i>).....		2
87.....	PT2748J-087		Oil Lite Bushing (<i>all models except PT-3348J</i>).....		4
	PT3348J-087		Oil Lite Bushing (<i>PT-3348J Only</i>)		4
88.....	PT2736J-088		Rod (<i>PT-1636J / PT-2036J / 2736J</i>)		2
	PT2742J-088		Rod (<i>PT-2042J / PT-2742J</i>).....		2
	PT2748J-088		Rod (<i>PT-2048J / PT-2748J</i>).....		2
	PT3348J-088		Rod (<i>PT-3348J Only</i>).....		2
89.....	PT2748A-089.....		E-Ring	37mm.....	2
90.....	PT2748A-090.....		Bushing		2
99.....	PT2748A-099.....		Release Rod Assembly.....		1
	PT2748J-101A.....		Repair Kit (includes index # 16-23, 28)		1
	PT2748J-109		Pump Assembly (<i>all models except PT-1636J & PT-3348J</i>).....		1
	PT1636J-109		Pump Assembly (<i>PT-1636J Only</i>).....		1
	PT3348J-109		Pump Assembly (<i>PT-3348J Only</i>).....		1
	PT2748J-110		Pump, Handle, Wheel Assy (<i>all models except PT-1636J.... & PT-3348J</i>)		
	PT1636J-110		Pump, Handle, Wheel Assembly (<i>PT-1636J Only</i>).....		1
	PT3348J-110		Pump, Handle, Wheel Assembly (<i>PT-3348J Only</i>).....		1
	MP-012.....		Touch-Up Paint (not shown)		1
	PT1636J-ID		I.D. Label (not shown).....		1
	PT2036J-ID		I.D. Label (not shown).....		1
	PT2042J-ID		I.D. Label (not shown).....		1
	PT2048J-ID		I.D. Label (not shown).....		1
	PT2736J-ID		I.D. Label (not shown).....		1
	PT2742J-ID		I.D. Label (not shown).....		1
	PT2748J-ID		I.D. Label (not shown).....		1
	PT3348J-ID		I.D. Label (not shown).....		1
	PT2748J-JET		JET Logo Label (not shown)		2
	PT2748J-WL.....		Warning Label (not shown)		1
	PT2748J-PL.....		Pump Label (not shown)		1

* Available only in the repair kit – PT2748J-101A