



FIG.	PART NO.	DESCRIPTION OF PART	QTY.
	7	43-62-0122 Pipe Handle	(1)
	8	34-60-0827 Retaining Ring	(1)
	30	31-44-1100 Spade Handle	(1)
	32	06-75-0500 3/8-16 x 1" Hex Hd. Spade Handle Screw	(2)
	33	22-22-1350 R. H. Brush Holder Assembly	(1)
	34	22-18-0670 Carbon Brush Assembly	(2)
	35	23-44-0220 Brush Retaining Cap	(2)
	36	28-50-6129 Motor Housing Assembly	(1)
	41	31-55-0065 Coil Shield	(1)
	43	02-04-1050 Ball Bearing	(1)
	49	02-04-0913 Ball Bearing	(1)
	50	28-50-6235 Bearing Support Housing	(1)
	51	06-82-5346 8-32 x 3/4" Pan Hd. T-20 Screw	(4)
	52	45-88-7110 Spring Washer	(1)
	53	16-50-1076 Armature Assembly	(1)
	54	42-14-0150 Baffle	(1)
	55	06-82-7412 8-16 x 1-7/8" Pan Hd. Plast. T-20 Screw	(2)
	56	18-50-0076 Field Assembly	(1)
	57	23-16-0425 Field Insulator	(1)
	58	23-66-1020 Switch	(1)
	59	31-44-1441 R.H. Drill Handle	(1)
	60	31-44-1446 L.H. Drill Handle	(1)
	61	44-76-0150 Cord Protector	(1)
	62	06-82-5382 1/4-20 x 3/4" Pan Hd. Taptite T-27 Screw	(4)
	63	06-82-7326 8-16 x 1" Pan Hd. Plastite T-20 Screw	(3)
	64	45-88-0605 Flat Washer	(2)
	65	06-95-5150 6-32 x 1/4" Ground Screw	(1)
	66	22-64-0121 Cord Set	(1)
	67	43-62-0246 Handle Grip	(1)
	68	31-17-0155 Cord Clamp	(1)
	69	06-82-7270 8-16 x 5/8" Pan Hd. Slit. T-20 Plastite	(2)
	70	22-84-0660 Fan	(1)
	71	22-22-1355 L.H. Brush Holder Assembly	(1)
	10-98-5986	Caution Label	(1)

