
## **SERVICE PARTS LIST**

Milwankee


 SPECIFY CATALOG NO. AND SERIAL NO. WHEN ORDERING PARTS


 M12™ FUEL™ 3/8" Right Angle Impact Wrench w/ Friction Ring
 CATALOG NO.
 STARTING SERIAL
 L18A
 WIRING INSTRUCTION See Page 2

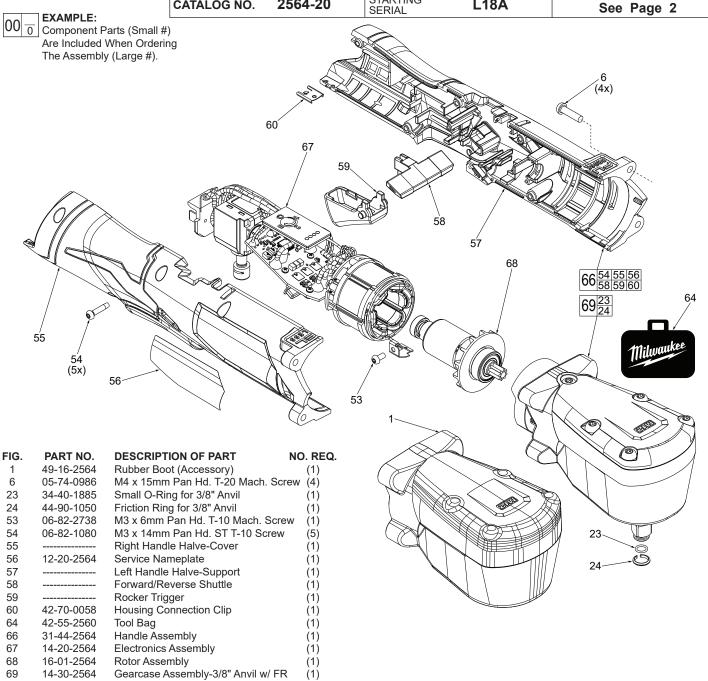

COREW TOROUT ORFOLEIOATIONS				
SCREW TORQUE SPECIFICATIONS				
			SEAT TORQUE	
FIG.	PART NO.	WHERE USED	(KG/CM)	(IN/LBS)
6	05-74-0986	Housing/Gearcase	21±1	18±1
53	06-82-2738	Ground Plate	10±1	8±1
54	06-82-1080	Housing Cover	10±1	8±1


## WIRING INSTRUCTIONS

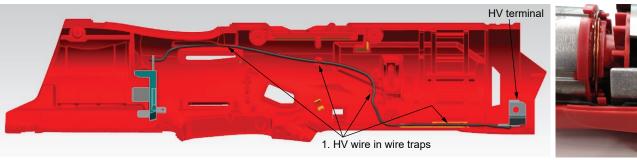

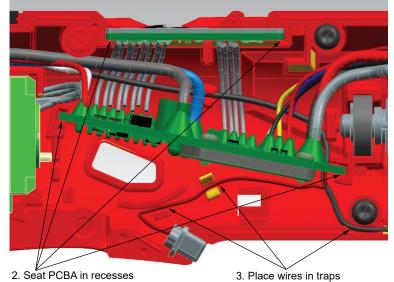




4. Place LED light in recess with the red wire to the top

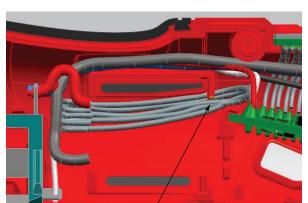



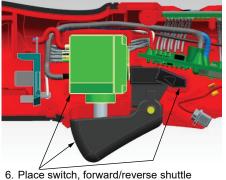

 Place switch, forward/reverse shuttle and trigger in handle support recesses as shown



Align HV terminal

as shown

Housing Connection Clip

8. Place battery terminal block firmly and squarely in handle recess.

Switch Trigger Fwd/Rev Shuttle LED PCBAs Rotor Assy. Stator Assy. HV Term.

Prior to installing the Housing Cover, be sure all elements of the Electronics Assembly are seated properly (Stator, Main PCBA, Selector PCBA, On-Off Switch, LED Assembly and Battery Terminal Block Connector). Be sure the Grounding Terminal is in place and that all wires are pressed down into all wire traps and channels. Check to assure that

wires will not interfere with moving parts. Prior to installing the Housing Cover, place Forward/Reverse Shuttle onto On-Off Switch and through Housing Support opening. Check to assure that wires will not be pinched. Secure the Housing Cover to the Housing Support with five M3 x 16mm ST T-10 Screws. Be sure to replace the Housing Clip at the bottom of the battery opening.