


Snow Thrower

For 4140 G/H

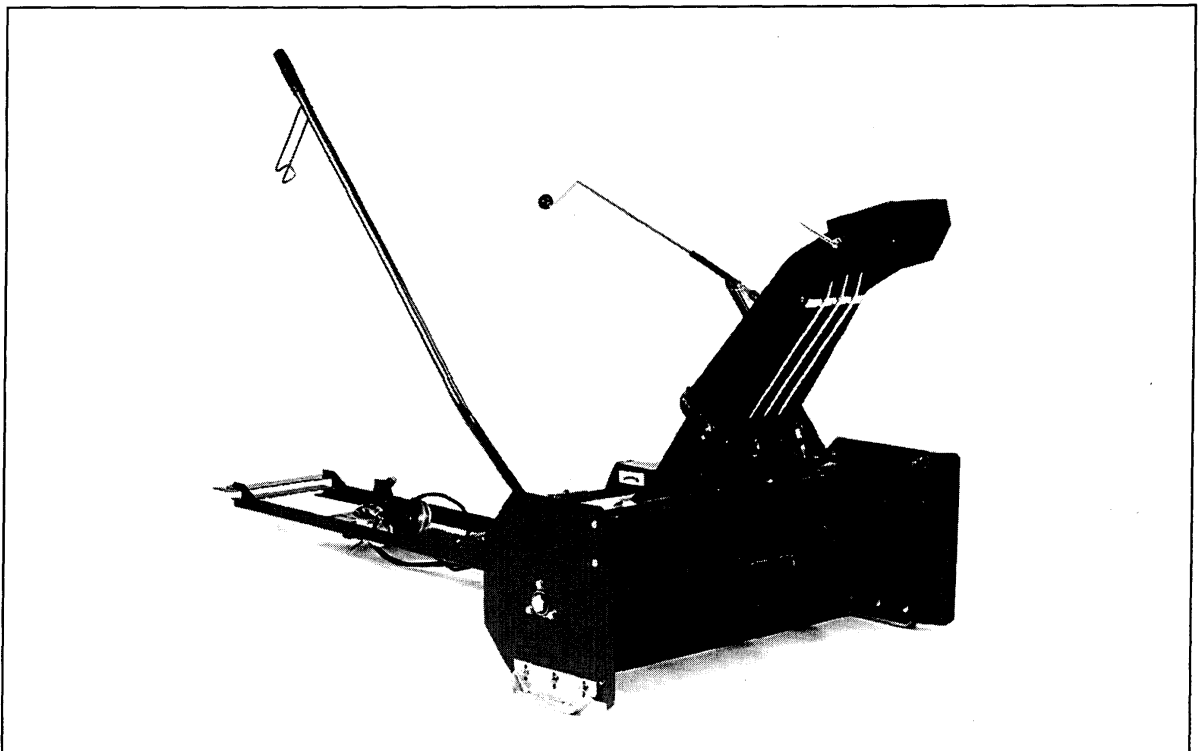

1.1995

Spare parts

Ersatzteile

Pièces détachées

Reserve onderdelen

Repuestos

Reservdelar

Part no.	Pos.	Part name	Part no.	Pos.	Part name
531 00 52-50	1	Frame	531 00 52-78	51	Key
531 00 52-51	2	Weldment, Spiral	725 24 45-71	52	Set Screw
531 00 52-52	3	Guard	531 00 52-79	53	Weldment
531 00 52-53	4	Skid Plate	531 00 52-80	54	Belt Tightener
531 00 52-54	5	Drive Chain	531 00 52-81	55	Lever
531 00 52-55	6	Joint	531 00 52-82	56	Frame
531 00 52-56	7	Control Rod	531 00 52-83	57	Support
531 00 52-57	8	Weldment, Lift	531 00 52-84	58	Pin
531 00 52-58	9	Weldment, Lift	732 25 22-01	59	Nut, Lock
531 00 52-21	10	Shaft	731 23 22-01	60	Nut
531 00 52-59	11	Bearing	531 00 52-85	61	Guide, Belt
531 00 52-60	12	Collar	531 00 52-86	62	Collar
738 21 04-04	13	Bearing	531 00 52-87	63	Collar
531 00 51-98	14	Circlip	531 00 52-88	64	Spring
531 00 52-61	15	Pulley	531 00 52-89	65	Collar
531 00 51-97	16	Collar	531 00 52-90	66	Collar
531 00 52-62	17	Pulley	531 00 52-91	67	Screw, Lock
531 00 52-63	18	Collar	725 25 46-71	68	Screw
531 00 51-92	19	Shaft	531 00 52-92	69	Lever
531 00 52-16	20	Pin, Spring	531 00 52-03	70	Spring
531 00 52-17	21	Pin Set	531 00 52-93	71	Plate
725 24 95-71	22	Screw	531 00 52-94	72	Weldment, Left
734 11 72-01	23	Washer	531 00 52-95	73	Weldment, Right
732 25 20-01	24	Nut, Lock	531 00 52-96	74	Lever
531 00 51-41	25	Grip	731 23 18-01	75	Nut
531 00 52-64	26	Grip	531 00 52-97	76	Belt Guard
531 00 51-43	27	Pin, Spring	725 24 55-71	77	Screw
725 24 49-51	28	Screw	531 00 52-98	78	Pin, Spring
732 21 18-01	29	Nut, Lock	531 00 52-06	79	Control Rod
531 00 52-65	30	Collar	531 00 52-13	80	Pin, Spring
			531 00 52-14	81	Pin, Split
734 11 63-01	31	Washer			
531 00 52-66	32	Screw, Lock			
531 00 51-87	33	Screw, Special			
531 00 52-67	34	Discharge Pipe			
531 00 52-68	35	Chute			
531 00 52-69	36	Rubber			
725 23 68-71	37	Screw			
734 11 52-01	38	Washer			
531 00 52-70	39	Screw, Special			
732 25 16-01	40	Nut, Lock			
725 24 51-71	41	Screw			
531 00 52-71	42	Collar			
734 11 63-01	43	Washer			
531 00 52-72	44	Belt Guard			
531 00 52-73	45	Weldment			
531 00 52-74	46	Guard			
531 00 52-75	47	Pulley			
531 00 52-76	48	Drive Shaft			
531 00 52-77	49	V-Belt			
725 24 47-71	50	Screw			

A

