


Parts List

Index No.	Part No.	Description	Size	Qty
1	J-F225-101	Base.....		1
2	F225-102	Spring Pin.....	Ø M4x10	2
3	F225-103	Scale.....		1
4	F225-104	Support Block.....		1
5	TS-1503041	Socket Head Cap Screw.....	M6x16	2
8	F225-108	Stop Rod		1
9	J-F225-109	Cabinet.....		1
10	J-F225-110	Coolant Tank.....		1
12	TS-1490041	Hex Cap Screw	M8x25	4
13	F225-113	Rubber Foot		4
14	TS-1502031	Socket Head Cap Screw.....	M5x12	2
15	F225-115	Coolant Valve.....		1
16	F225-116	Coolant Tubing.....		1
17	F225-117	Disc.....		1
18	F225-118	Swivel Plate.....		1
19	J-F225-119	Pivot Block		1
20	F225-120	Pivot Pin.....		1
21	TS-1490101	Hex Cap Screw	M8x55	2
22	3AEH-3C-13	Socket Head Cap Screw.....	M8x90	2
23	TS-1523051	Socket Set Screw	M6x16	2
24	F225-124	Lead Screw		1
25	F225-125	Guide Rod		2
26	5515388	Retaining Ring.....	S14	2
27	J-F225-127	Middle Support		1
28	TS-1504111	Socket Head Cap Screw.....	M8x55	2
29	F225-129	Plate (Serial no.11111107 and lower)	6mm.....	2
29	F225-129N	Plate (Serial no.12011108 and higher)	9mm.....	2
30	TS-1514031	Flat Head Screw.....	M6x20	2
31	F225-131	Cover		1
32	F225-132	Support Plate.....		2
33	J-F225-133	Rear Vise Jaw		1
34	J-F225-134	Front Vise Jaw.....		1
35	F225-135	Jaw Insert		2
36	F225-136	Jaw Insert		2
37	TS-1503051	Socket Head Cap Screw.....	M6x20	4
38	TS-1540041	Hex Nut	M6.....	4
39	F225-139	Handle Hub		1
40	F225-140	Handle.....		3
41	F225-141	Spring Pin.....		1
42	F225-142	Support Link		1
43	TS-1541031	Lock Nut	M8.....	1
44	TS-1504041	Socket Head Cap Screw.....	M8x20	1
45	F225-145	Guard Link.....		1
46	F225-146	Retaining Ring.....	S60	1
47	F225-147	Screw		1
48	TS-1504031	Socket Head Cap Screw.....	M8x16	1
49	F225-149	Connector Fitting		1
50	F225-150	Fixed Blade Guard.....		1
51	F225-151	Moveable Blade Guard		1
52	F225-152	Socket Head Cap Screw (LH Thread)	M12x25 LH.....	1
53	F225-153	Blade Shaft Flange		1
54	F225-154	Blade Shaft.....		1
55	F225-155	Oil Seal	TC 30 40 5	1
56	F225-156	Handle Grip		1
57	TS-2284081	Flat Head Screw	M4x8	4

Index No.	Part No.	Description	Size	Qty
58	F225-158	Limit Switch		1
59	F225-159	Cable		1
60	F225-160	Handle		1
61	TS-154010	Hex Nut	M16	1
62	J-F225-162	Head		1
63	F225-163	Oil Plug		1
64	F225-164	Spring Screw	4x16mm	1
65	F225-165	Spring		2
66	WH45-42	Socket Set Screw	M6x4	1
67	F225-167	Worm Gear		1
68	F225-168	Oil Sight Glass		1
69	BB-6001ZZ	Ball Bearing	6001ZZ	1
70	F225-170	Nut		1
71	F225-171	Worm		1
72	F225-172	Head Gasket		1
73	J-F225-173	Switch Box		1
74	F225-174	Switch		1
75	J-F225-175	Motor	1HP, 115V	1
	F225-175C	Capacitor (not shown)	250VAC, 400MFD	1
	F225-175MC	Magnetic Contact (not shown)	115V, 1Ph	1
	F225-175OR	Overload Relay (not shown)		1
76	BB-609ZZ	Bearing	609ZZ	1
77	F225-177	E-Clip	E-10	1
78	F225-178	Pump Connection Box		1
79	TS-1501051	Socket Head Cap Screw	M4x16	3
80	F225-180	Coolant Pump		1
81	TS-1503051	Socket Head Cap Screw	M6x20	2
82	F225-182	Power Cord		1
83	TS-1550021	Flat Washer	M4	2
84	TS-1532032	Pan Head Screw	M4x10	1
85	J-F225-185	Cover		1
86	TS-2171012	Pan Head Screw	M4x6	4
87	F225-187	Indicator		1
88	F225-188	Rubber Sheet		1
89	F225-189	Front Cover Plate		1
90	F225-190	Rear Plate		1
91	F225-191	Stock Stop		1
92	F225-192	Thumbscrew	M6x20	1
93	TS-1540041	Hex Nut	M6	1
94	TS-2171012	Pan Head Screw	M4x6	2
95	TS-1504031	Socket Head Cap Screw	M8x16	2
96	F225-196A	Tapping Screw	M3x10	3

Exploded View

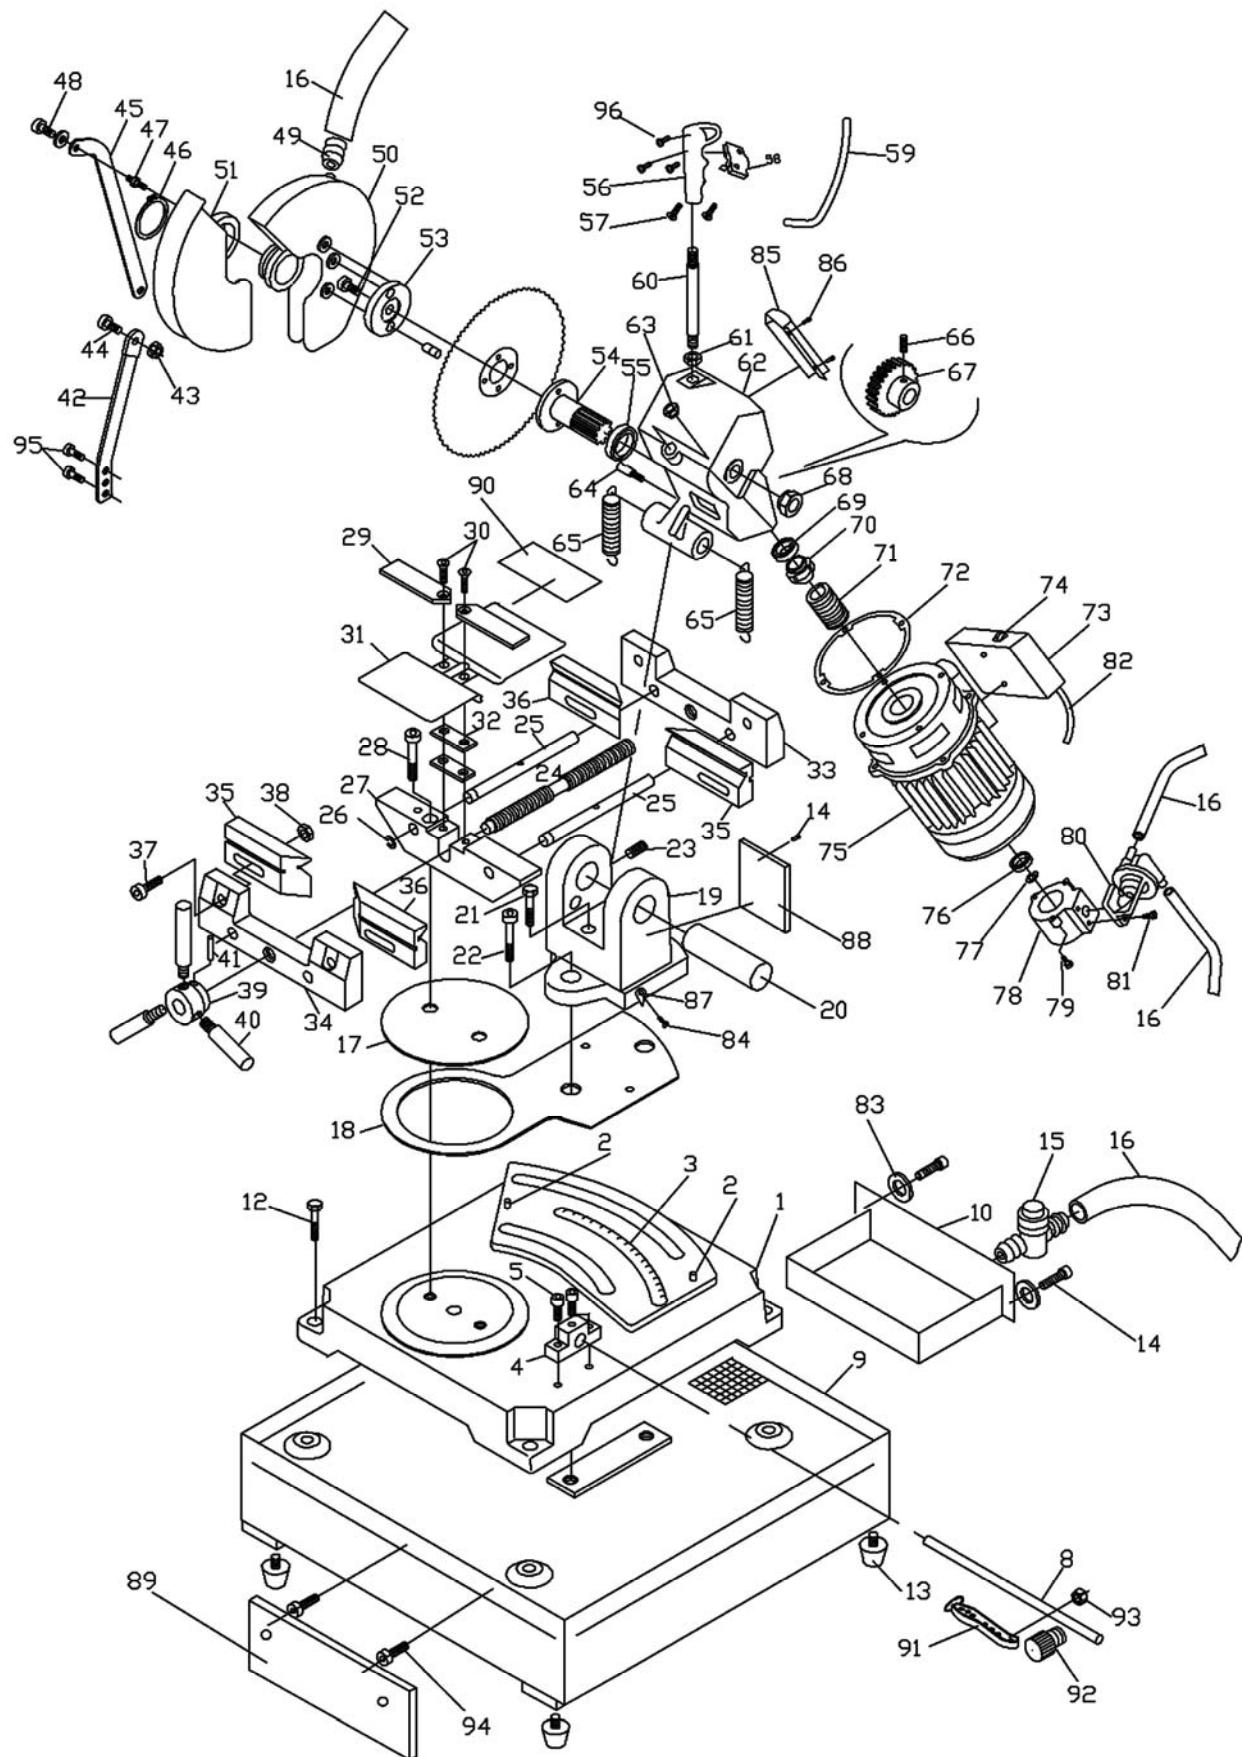

Wiring Diagram

