



Pneumatic Riveter

#505920, JAT-920



Operation & Parts Manual

M-505920

Edition 2

11/2018




Stock No.:
Serial No.:
Purchased from:
Date purchased:

JET
427 New Sanford Road
LaVergne, TN 37086
Ph.: 800-274-6848
www.jettools.com

Copyright © 2015 JET

#505920, JAT-920 Pneumatic Riveter – exploded view

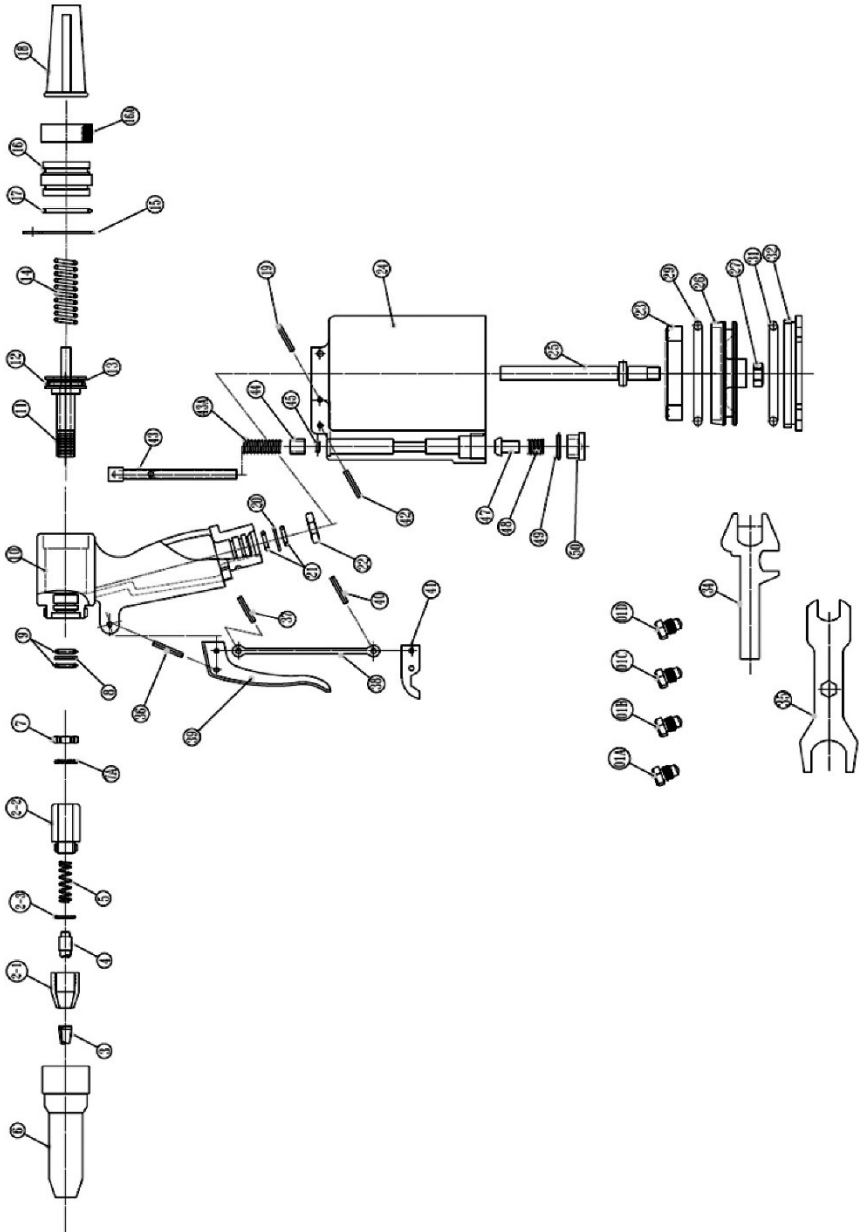

#505920, JAT-920 Pneumatic Riveter – parts list

Index	Part No.	Description	Qty
1	706-1A	Nosepiece 3/16 in.	1
	706-1B	Nosepiece 5/32 in.	1
	706-1C	Nosepiece 1/8 in.	1
	706-1D	Nosepiece 3/32 in.	1
2-1	JAT920-021	Front jaw case	1
2-2	JAT920-022	Back jaw case	1
2-3	JAT920-023	Jaw case o-ring	1
3	706-03	Jaw	2
4	706-04	Jaw pusher	1
5	706-05	Jaw pusher spring	1
6	706-06	Frame head	1
7	706-07	Case lock nut 7/16x20x4T	1
7A	706-07A	Case washer ring 7/16	1
8	706-08	Backup ring P12	1
9	706-09	Backup O-ring	2
10	JAT920-10	Frame	1
11	706-11	Oil piston	1
12	706-12	Oil piston O-ring P22A	1
13	706-13	Backup ring P22A	1
14	706-14	Return spring	1
15	706-15	Hanging clip	1
16	706-16	Frame cap	1
16A	706-16A	Safety cap nut	1
17	706-17	Frame clip O-ring 27x2	1
18	706-18	Safety cap	1
19	706-19	Setting screw pin 4x32	1
20	706-20	Backup ring P12	1

Index	Part No.	Description	Qty
21	706-21	Backup O-ring P12	2
22	706-22	Frame lock nut	1
23	706-23	Rubber cushion	1
24	706-24	Air cylinder	1
25	706-25	Air piston stem	1
26	706-26	Air piston	1
27	706-27	Air piston lock nut 5/16x18UNC	1
29	706-29	Air piston O-ring P60	1
31	706-31	Cylinder O-ring 70x2.5	1
32	JAT920-32	Cylinder cap	1
34	706-34	Spanner gauge	1
35	706-35	Spanner wrench	1
36	706-36	Trigger pin 3x18	1
37	706-37	Connector	1
38	706-38	Trigger rod	1
39	JAT920-39	Trigger	1
40	706-40	Connector	1
41	JAT920-41	Trigger lever	1
42	706-42	Lever pin 3x22	1
43	706-43	Valve pusher	1
43A	706-43A	Valve pusher spring	1
44	706-44	Valve collar	1
45	706-45	Valve O-ring 6.1x1.8	1
47	706-47	Valve	1
48	706-48	Valve spring	1
49	706-49	Valve cap O-ring P14	1
50	706-50	Valve cap	

RBK-0810 Rebuild Kit, contains 1A,1B,1C,1D, 2,3,9,12,17,21,29,31