Milutukee. **BULLETIN NO. SERVICE PARTS LIST** 54-24-1367 REVISED BULLETIN DATE SPECIFY CATALOG NO. AND SERIAL NO. WHEN ORDERING PARTS 54-24-1366 Jan. '96 3/4" ROTARY HAMMER WIRING INSTRUCTION SERIAL NUMBER 5366-1 794C CATALOG NO. 58-01-1315 FIG. 50 PART NO. 34-40-4235 • 34-60-1315 34-60-2540 34-60-2551 **DESCRIPTION OF PART** NO. REQ. DESCRIPTION OF PAR'
O-Ring
Retaining Ring-External
Retaining Ring-External
Retaining Ring-External
Retaining Ring-External
Retaining Ring-External
Retaining Ring-Internal
Retaining Ring-Internal
Intermediate Shaft
Wobble Shaft
Spindle Assembly
Soning 51 53 54 55 56 57 58 59 ★ 60 28 ----1 34-60-2570 34-80-2355 34-80-2355 34-80-5030 36-66-4591 36-92-0711 38-50-6041 40-50-8461 Spring 61 SEE REVERSE SIDE FOR SPECIAL NOTES AND LUBRICATION 22 <u>19</u> 79 71 3 50 33 60 44 54 64 65 88 **EXAMPLE:**

00 7	Component When Order	Parts (Small #) Are Included ing The Assembly (Large #).	34 / / / 59 62 68	55 43 55 61	~ / ~ /	88	
FIG.	PART NO.	DESCRIPTION OF PART	NO. REQ.	43 58 61	~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~		16
1	02-04-0648	Ball Bearing	(1)	8	34		
ż	02-04-0820	Ball Bearing	(1)		5/ ```		, *
2 3	02-04-0851	Ball Bearing	(1)				
4	02-04-1510	Ball Bearing	(1)	.			\mathcal{Q}
5	02-50-1615	Needle Bearing	<u>(1)</u>				
6	02-50-6455	Needle Bearing	(2)			53	
7	02-80-0110	Thrust Bearing	(1)			89	
8	02-80-0121	Thrust Bearing	(1)			87	
9	06-54-0300	5/16-18 Square Nut	<u> </u>			8/	
10	06-65-3690	1/8 x 1/2 Groove Pin 5/16-18 x 4-1/2" Hex Hd. Bolt	\ \ \	62	40-50-8470	Spring 4/	(1)
11 13	06-75-5835 06-82-7284	8-16 x 3/4" Pan Hd. Slot. Plast. T-20	}; <u>}</u> }	l 63	40-50-8481	Spring 10	(1) (1) (1) (8) (1)
14	06-82-7326	8-16 x 1" Pan Hd. Slot. Plast. T-20	(4) (2) (2) (3)	★ 64	40-50-8491	Spring 70 10	(1)
15	06-82-7393	7-18 x 2" Pan Hd. Slot. Plast. T-20	\ 5 \	l 65	02-02-1300	Spring Rail 72 10	(8)
16	05-88-5988	(K50 x 35mm) Pan Hd. Slot. T-20	}₃∖	66 67	42-76-0671	Dust Cap	(1)
17	10-20-1200	Product Label - Falcon	\ 1 \	67	42-76-0291	Chuck Collar	(1)
19	22-84-0650	Fan Assembly	(1)	68	42-90-0261	Coupling	Ω?
20	12-20-0120	Service Naméplate Kit	(1)	69	42-96-0140	Bearing Cup	\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\
20 22 23 24 25 26 27	16-10-0660	120 V Armature	(1)	70	43-44-0930 ●	Gasket	\;\{
23	18-11-0140	120 V Field	(1)	71 72	43-62-0841 14-49-0010 ●	Side Handle Assembly Shift Knob Assembly	};{
24	22-18-0800	Brush Service Kit	(1)	74	44-60-0530	Ground Pin) {
25	22-20-0810	Brush Tube	(2)	75	44-60-0550	Roller Pin	(1) (2) (1)
26	22-56-0640	Pin Housing Assembly 8' Quick -Lok Cord	(1)	76	14-09-0130 ●	Piston Assembly	71
27	48-76-4008	8' Quick -Lok Cord	(1)	177	44-68-0560	Plug - Cap	λiί
28 29 32 33 34 36 37 38	23-52-1570●	Brush Spring Assembly	\ <u>{</u> }	78	44-82-0140	Ram	(1)
29	23-66-2121	Switch	\ \ \	79	44-94-0161	Depth Rod	(1)
32	28-28-2032 30-37-0050	Diaphragm Striker Guide	\;\{	80	45-06-0560	Depth Rod Oil Seal	(1)
34	30-72-0100	Wobble Plate) ; {	★ 82	45-34-0121	Socket	(1)
36	31-17-0230	Handle Ring);{	83	45-56-2591	Striker	(1)
37	31-40-0076	Gear Case	\i\	84	45-88-8280	Thrust Washer	(1) (2) (2) (1)
38	31-44-1780	Right Handle Half	}i{	85 86	45-88-8291	Thrust Washer	(2)
39	31-44-1785	Left Handle Half	(1)) 86	45-88-8300	Washer	(2)
40	31-50-0990	Motor Housing	(1)	87	45-88-8310	Washer	(1) (2)
41	31-58-0521	Chuck Sleeve	(1)	88	45-88-8321	Washer	(2)
42	32-40-2230	Intermediate Gear	(1)	89	45-88-8330	Tab Washer	34(
43 44	14-29-0051	Pinion Shaft Assembly	(1)	91	34-60-3610 ● 14-46-5368	Retaining Ring-External Lubrication Service Kit	} }
44	32-10-4080	Clutch Gear	(1)	1	14-40-0308	EUDITION OF VICE INIT	(1)
45	34-40-1215	Q-Ring	(1)	1			
46	34-40-2450 ●	O-Ring	(3)	i	MILWAU	JKEE ELECTRIC TOOL CORP	PORATION
47	34-40-4220	O-Ring	(2)	1	13135 V	V. LISBON RD., BROOKFIELD	. WI 53005
48	34-40-4225●	O-Ring	(1)	I	10100 1		,

Drwg. 1

SERVICE FIXTURES:

61-30-0280 Pressing Tool 61-30-0290 Assembly Tool

LUBRICATION INSTRUCTIONS Type "K" Grease, No. 49-08-4161

Apply a thin film of grease to the following parts as indicated:


FIG.	INSTRUCTION
60	Large I.D. of spindle, forward and
	rear bearing journals.
33	Large I.D. of striker guide.
83	Striker-all over.
76,82	Inside and outside diameters of
	piston assembly,
	including I.D. of socket.
78	All over ram, except rear face.
32	Armature bearing bore of
	diaphragm.
45,46,50	O-rings.


Apply a <u>thin to moderately heavy coat</u> of grease to the following parts indicated:


FIG. 75	INSTRUCTION Roller Pins (This also to aid in assembly).
47,48 42,43,44	O-rings. All gear and pinion teeth.
	THERE IS TO BE NO OBEAS

CAUTION: THERE IS TO BE NO GREASE IN THE CHAMBER BETWEEN THE PISTON AND RAM BEYOND THE THIN COATINGS APPLIED TO THE TWO PARTS AS DESCRIBED ABOVE.


▲ SEE ASSEMBLY LUBRICATION NOTE

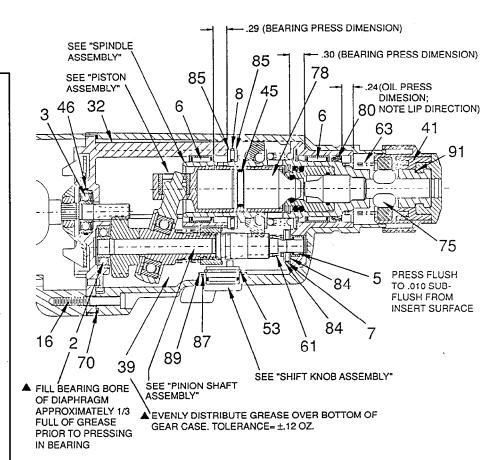

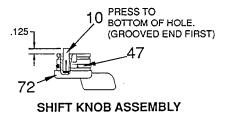

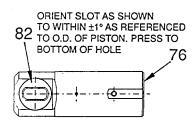

PISTON ASSEMBLY

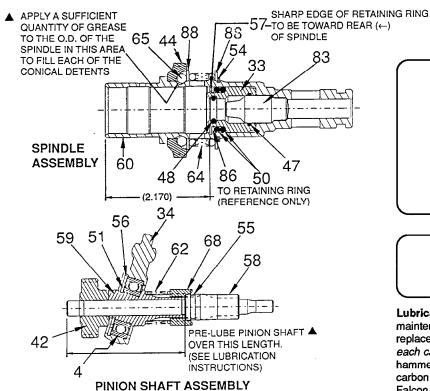

NOTE: THE WOBBLE SHAFT #59 AND THE INTERMEDIATE GEAR #42 ARE TO BE PRESSED FLUSH TO EACH OTHER, SO THAT THE WOBBLE SHAFT IS STILL ABLE TO REVOLVE FREELY - WITH .005" MAXIMUM AXIAL PLAY ON THE INTERMEDIATE SHAFT #58

● 14-46-5368 LUBRICATION SERVICE KIT THIS KIT INCLUDES: 1 34-40-1215 O-Ring

1	34-40-1215	O-Ring	
1	34-40-4220	O-Ring	
1	34-40-4225	O-Ring	
2	34-40-4235	O-Ring	
1	34-40-2450	O-Ring	
1	34-80-5030	Retaining Ring	
1	34-60-3610	Retaining Ring	
1	42-76-0670	Dust Cap	
1	43-44-0930	Gasket	
2	44-60-1150	Roller Pin	
1	49-08-4161	5 Oz. "K" Grease	

_22-18-0800 BRUSH SERVICE KIT _ THIS KIT INCLUDES:

	THIS KIT INCLUDES.			
2		Carbon Brush		
2	23-52-1570	Brush Spring Assy.		
2	44-52-0495	Foam Slug		

Lubrication Note: MILWAUKEE recommends that scheduled maintenance of the Falcon Rotary Hammer include lubrication replacement, and replacement of vital O-rings and gaskets at each carbon brush change. Doing so will prolong the life of the hammer by reducing wear to gears and mechanism parts. The carbon brushes and armature commutator in the MILWAUKEE Falcon Rotary Hammer are designed and matched for many hours of reliable performance. The carbon brushes feature a unique pop-out feature which automatically shuts off the tool when the brushes are worn and need to be replaced.