
## SERVICE PARTS LIST

PAGE 1 OF 2 **BULLETIN NO.** 54-38-1600

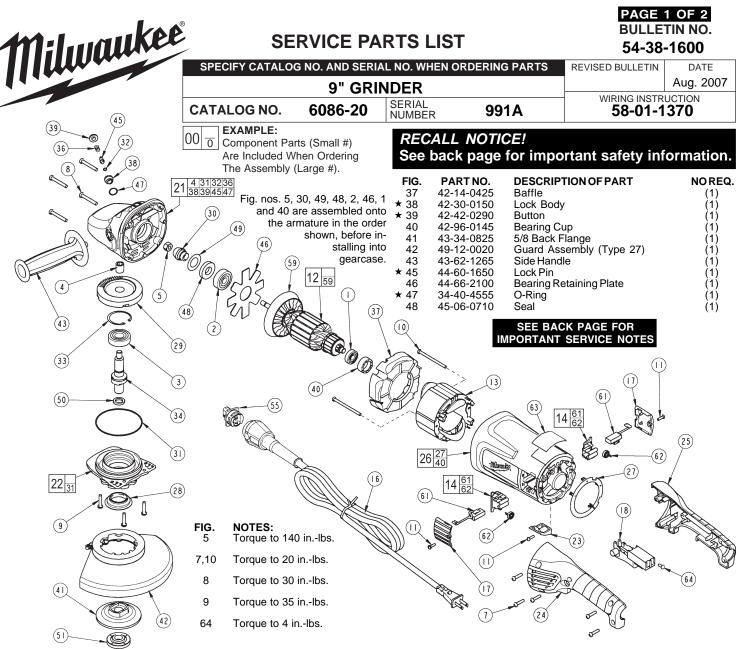


1.40

FIG.	PART NO.	DESCRIPTION OF PART	NO REQ.
1	02-04-1675	Ball Bearing	(1)
2	02-04-1680	Ball Bearing	(1)
3	02-04-1745	Ball Bearing	(1)
4	02-50-2429	Needle Bearing	(1)
5 7	06-55-2455	Hex Nut	(1)
	06-82-0055	8-16 Torx Plastite Screw T-20	(5)
8	06-82-0060	10-14 Torx Plastite Screw T-25	(4)
9	06-82-0065	10-32 x 1 Pan Hd. Taptite T-25 Screv	
10	06-82-0070	8-16 Torx Plastite Screw T-15	(2)
11	06-82-7240	6-19 x 1/2 Slt. Pan Hd. Plast. T-15	(3)
12	16-70-0132	Armature Assembly	(1)
13	18-70-1130	Field	(1)
14	22-20-0120	Brush Holder Assembly	(2)
16	48-76-5110	Quik-Lok Cord Set	(1)
17		Brush Cover	(2) (1)
18	23-66-2720	Switch	(1)
21	28-14-1131	Gearcase Assembly	(1)
22		Spindle Hub Assembly	(1)
23	31-15-0166	Cover	(1)
24	31-44-0840	Left Hand Handle Halve	(1)
25	31-44-0835	Right Hand Handle Halve	(1)
26		Motor Housing Assembly	(1)
27	31-53-0160	Plug	(1)
28	31-55-0150	Bearing Shield	(1)
29	32-05-1505	Gear	(1)
30	32-60-1505	Pinion Gear	(1)
31	34-40-0505	O-Ring	(1)
★ 32		O-Ring	(1)
33	34-80-2960	Retaining Ring	(1)
. 34	38-50-2500	Spindle Shaft	(1)
★ 36	40-50-1550	Compression Spring	(1)


<b>FIG.</b> 49 50	<b>PART NO.</b> 45-88-7880 45-88-8466	DESCRIPTION OF PART Shim Washer 5/8-11 Spindle Washer	NO REQ. (1) (1)	
	49-05-0051 22-56-0900 22-84-0540 22-18-0126 	Flange Nut Blade Housing Assembly Fan Assembly Carbon Brush Assembly Brush Spring Nameplate Blank Switch Screw Leadwire Assembly Leadwire Assembly Spanner Wrench	(1) (1) (1) (2) (2) (1) (4) (1) (1) (1)	
<b>FIG.</b> 21	<b>LUBRICATION:</b> 1.25 oz. (35 grams) of Type "Y" grease, No. 49-08-5270 in main gear cavity of gearcase.			
29,30	"Y" grease must be applied to all gear teeth.			
31,32	Lightly coat o-rings with "Y" grease prior to installation.			
<b>FIG.</b> 4,21	<b>NOTES:</b> Press needle bearing flush ±.02 to gearcase boss face.			
33	Bevel side of retaining ring away from bearing face.			


Seat bearing cup completely onto ball bearing.

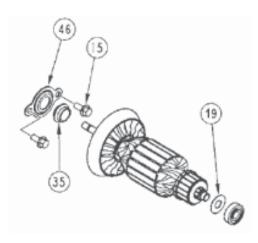

31-50-1752 Motor Housing Kit incorporates changes to the shielding of the armature pinion and commutator ball bearings along with the retaining of the pinion ball bearing into the gearcase assembly of 7"/ 9" 15Amp Sander / Grinders – 6080-20, 6081-20, 6082-20, 6086-20, 6088-20 and 6089-20.

Additionally, a change has been made to the motor housing and wiring of the tool. The ATF field coil is now 'hard-wired' with four [4] new leadwire assemblies, see **Wiring Instruction 58-01-1371**. Add 'X' Grease, 49-08-5000 to mag-mate field terminals as need.

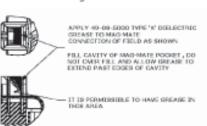

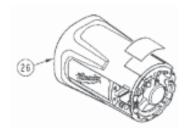

Caution! Do Not overfill the cavity, excess grease can cause a build up of dust / dirt and result in a possible 'shorting-out' or burning at the connection.

Motor Housing Kit consist of:	Discarded Parts:	Model Affected
2ea 06-75-0510 ¼-20 Hex Screw* item 15		All
1ea 45-06-0830 Bearing Seal item 19		All
1ea 31-50-1785 Motor Housing item 26	31-50-1751 Motor Housing	All
1ea <b>31-53-0160</b> Plug**	31-53-0160 Plug*	All
1ea 31-55-0290 Dust Shield item 35		All
1ea 44-86-0040 Bearing Retainer A Item 46	44-66-2100 Bearing Ret Plate	All
1ea 23-94-9300 LeadWire Assembly	23-94-2650 LeadWire Assy	All
1ea 23-94-9305 LeadWire Assembly	23-94-2655 LeadWire Assy	All
1ea 23-94-9310 LeadWire Assembly		All
1ea 23-94-9315 LeadWire Assembly		All
	42-96-0145 Bearing Cup	All

A Service Note - 'check for slip fit' - mounting of 02-04-1680 Ball Bearing to the armature shaft may require removal of a 0.0001" - 0.0002" from the O.D. of the armature pinion end ball bearing journal it is recommended to use emery cloth and armature lathe to lightly sand, for a few seconds, removing the material necessary for the pinion shaft to be a 'slip fit through the pinion ball bearing' as it is being held in place in the GearCase by the 44-86-0040 Bearing Retainer.

## ITEMS NOT INCLUDED IN KIT: MUST BE ORDERED AS NEEDED


<sup>\*\*\* 6086-20 &</sup>amp; 6089-20 will also require changing out of the Quik-Lok\*\* Cord Blade Housing Assembly.

1ea 28-14-1131 GearCase Assembly****	28-14-1131 GearCase Assy	All, prior to 2003
--------------------------------------	--------------------------	--------------------

\*\*\*\* required for early version Gear Case Assembly, manufactured prior to 2003, without screw bosses to accept the 06-75-0510 ¼-20 Hex Head Screws

Stamp or etch an 'R' in the tool's nameplate next to the catalog number after installation of the 'current production' service replacement parts listed above.



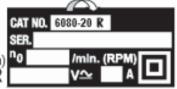

<sup>\*</sup> Tarque 06-75-0510 to 65-75 in-lbs.

<sup>\*\*</sup> running change, part modified without part number change – two wire traps added – part must have a total of 4 wire traps

white dot-

## **RECALL NOTICE!**

Milwaukee is providing a **no-charge** warranty service to all owners of **6086-20**, **6088-20** and **6089-20 7"/9" Grinders.** We are taking this action because under certain circumstances the **'lock-on' Trigger Switch** can stick in the 'ON' position, which poses a risk of injury or property damage.

All 6086-20, 6088-20 and 6089-20 7"/9" Grinders within the serial number ranges shown are affected.

Nameplate Catalog Number	Serial Number Range	
6086-20	991 <u>A</u> XXXXXXXXX 991 <u>B</u> XXXXXXXXX	All Serial Numbers All Serial Numbers
6088-20	994 <u>A</u> XXXXXXXXX 994 <u>B</u> XXXXXXXXX	All Serial Numbers All Serial Numbers
6089-20	992 <u>A</u> XXXXXXXXX	All Serial Numbers

For operator safety a **6086-20**, **6088-20** or **6089-20 7"/9" Grinder** <u>within the listed serial number ranges</u> should be returned to the nearest *factory* Service/Sales Support Branch or Milwaukee Authorized Service Station for a no-charge warranty replacement of the trigger switch.

The original equipment switch (23-66-2710 / 23-66-2720) should be replaced with a new re-worked 23-66-2720. Reworked switches will have a white dot (indelible paint) applied to the location at the base of the switch (see illustration).

If the nameplate has an 'X' stamped into the tool's nameplate, next to the serial number, the tool has been repaired and the defective switch has already been replaced.

If you need assistance in locating the service facility nearest you or have questions please call 1.800.729.3878 (1.800.SAWDUST).

Important Note! The 6088-20 Grinder contains a store security 'sensormatic' label. It is found on the left-hand handle half. This 'sensormatic' may shift and cause the trigger to stay 'ON'. When servicing the 6088-20, remove and discard the 'sensormatic' label.